



Jayco[®] Generations of family fun.

EMBARK

2020 OWNER'S MANUAL



eco advantage™

THE JAYCO ECOADVANTAGE IS OUR COMPANY'S COMMITMENT TO PROTECTING THE ENVIRONMENT. Through Jayco's company-wide sustainability program, we're creating better ways to build better RV's using fewer natural resources. Already, our initiative has created significant impact. As of 2014 our company has:

Recycled



- 7,192 tons of wood
- 2,354 tons of scrap metal
- 1,428 tons of cardboard and paper

Conserved



- 9,997,400 gallons of fresh water, enough to meet the daily needs of 133,293 Americans.
- 34,277 gallons of gas, enough for Americans to drive more than 957,600 miles.
- Enough electricity to power 1,745 homes for that year.

Saved



- 60,900 mature trees.
- Enough landfill airspace to meet the annual disposal needs of a community of 44,683 people.

We're proud of our results, and we know those numbers show that a little initiative can go a long way. The Jayco EcoAdvantage is our way of making sure endless generations can enjoy the Great Outdoors.

Table of Contents

SECTION 1: WARRANTY & SERVICE

Factory Tours	10
Options and Equipment	10
Dealer Responsibility	10
Customer Relations	10
Obtaining Emergency Warranty Repair	11
To Contact Us	12
About This Manual	12
Warranty Packet	12
Chassis Guide	13
Safety Alerts	13
Reporting Safety Defects	14
Customer Responsibility	14
Change Of Address/Ownership	15
Suggestions For Obtaining Service	15
Obtaining Service For Separately Warranted Items	15
Obtaining Service At Our Customer Service Facility	16
Parts and Accessories	16

SECTION 2: OCCUPANT SAFETY

Secondary Means of Escape (Exit Window)	23
<i>Exit Window Label</i>	
Fire Safety	24
Fire Extinguisher	24
Smoke Alarm	25
Combination Carbon Monoxide /Propane Alarm	26
<i>Carbon Monoxide/Propane Alarm</i>	
Formaldehyde	29
Extended Or Full Time Usage	30
Cold Weather Usage	30
Condensation	30

SECTION 3: PRE-TRAVEL INFORMATION

Vehicle Labels	31
Weight Terms	31
Weight and Capacity Labels	32
<i>Towing and Braking Warning Label</i>	
<i>Upper Section Federal OCCC Weight Label</i>	
<i>Lower Section Federal OCCC Weight Labels</i>	
<i>Federal Certification Label</i>	
Loading Your Motorhome	33
Trailer Plug	34
Weighing Your Motorhome	34

SECTION 4: VEHICLE OPERATION

Vehicle Operation	37
Braking and Stopping	37
Parking Brake	37
Using The Rear Hitch	38
<i>Towing and Braking Label</i>	
Step Well Cover	39
Entrance Step	39
Keyless Entry	41
Programming the Keyless Entry Keypad	41
Assigning a New Authority Code	42
Assigning a New Access Code	42

Table of Contents

Entrance Door	43
Driver and Passenger Seat	44
Seat Belts	45
Starting and Stopping the Engine	45
Instrument Panel	45
<i>Transmission Indicator Shift Panel</i>	
Dash Instrument Panel	46
Driver Side Console Instrument Panel	47
Passenger Side Console Instrument Panel (top)	47
Passenger Side Console Instrument Panel (front)	47
Steering Wheel and Column Controls	48
Cruise Control Function	48
Headlight Flasher	48
Manual Tilt and Telescoping	48
Clearance Light Flasher	48
Wiper Blades	48
Multi-Function Signal Lever	49
Hazard-Warning Flasher	49
Driver's Console Control Panel	49
Horns	49
Docking Lights	49
Driving (Fog)Lights	50
Daytime Running Lights (DRL)	50
Front In-Dash AM/FM/CD/DVD and Navigation System	50
Map Lights	50
Coin Tray And Cup Holders	51
Outside Rearview Mirrors	51
Power Remote Mirrors (if so equipped)	51
Rear and Side View Cameras	51
<i>Remote Mirror Control /Mirror Heat Control</i>	
Climate Control System (Dash)	53
System Layout	53
Operating Features	53
Blower Motor	53
Temperature Control	53
Air Distribution – Mode Control	53
Campsite Hook-Up	55
Chassis Air Bags	55
Hydraulic Leveling System	56
Operating the Leveling System	57
<i>Hydraulic Control Panel</i>	
Manual Operation	58
Emergency Stopping	60
Emergency Towing	60
Front Axle Tire Alignment	60
Wheel Lug Nuts/Wheel Liners	61
Tires	62
Changing A Tire	64
Awnings (if so equipped)	64
Awning Care	65
Electric Patio Awning With Remote Control	65
In Motion Detector (if so equipped)	65

SECTION 5: SLIDEOUT SYSTEMS

Electric Slide Room(s)	67
------------------------	----

Table of Contents

SECTION 6: ELECTRICAL SYSTEM

The Electrical System	69
In Case Of An Electrical Fire	69
Controls and Switches	70
GFCI Receptacle	70
Component Control System(s)	70
Power Control (Energy Management) 50A System	72
<i>50A System Panel</i>	
Testing The Campsite Power Connection	73
Inverter/Charger	74
<i>Inverter Fuse</i>	
<i>Inverter</i>	
12-Volt DC System	76
Batteries	78
House Batteries	78
Dry Camping	78
Battery Reserve Capacity	79
Battery Inspection and Care	79
Battery Replacement	79
Battery Disconnect Solenoid Switch (House Battery Disconnect)	80
<i>Battery Disconnect Switch</i>	
Battery Isolation Manager	80
Auxiliary (Battery Boost) Start System	80
Battery Disconnect Switch (if so equipped)	80
<i>Battery Disconnect Switch</i>	
Automatic Transfer Switch (ATS)	81
120-Volt Circuit Breakers	82
Approximate Electrical Load Ratings	83
120-Volt (50 AMP) AC System (if so equipped)	84
Power Cord Reel (if so equipped)	85
Generator	85
Before Starting the Generator	86
Maintenance	87
Starting the Generator	87
To Manually Start the Generator	87
Automatic Generator Start (AGS) (if so equipped)	87
Generator Slide Tray	88
Solar Panel (if so equipped)	89
Replacing Light Bulbs	89
<i>Solar Panel Control</i>	
<i>Solar Panel Battery Monitor</i>	

SECTION 7: FUEL & PROPANE SYSTEM

Diesel Fuel and Fill	91
Fuel Selection	91
DEF Fluid	91
Fuel Safety	92
Exhaust Gas Fumes	93
Propane Gas System (if so equipped)	93
<i>Propane Label</i>	
Propane Gas Container	94
Servicing or Filling	95
LP Gas Container Overfill	95
<i>Propane System Label</i>	
Propane Regulator	96

Table of Contents

Propane Use and Safety	97
Using The Propane System	97
<i>Propane System Label</i>	
<i>Cooking / Comfort Heating Label</i>	
Cooking With Propane Gas	98
Calculating Propane Gas Usage	98
Traveling With Propane	99
<i>Refueling Warning Label</i>	

SECTION 8: PLUMBING SYSTEM

Plumbing System	101
Monitor Panel	101
<i>Docking Center Monitor Panel</i>	
Fresh Water System	102
Water Pressure Regulator (customer supplied)	102
Fresh Water Holding Tank	103
City Water Fill	103
12-volt Water Pump and Water Pump Switches	105
Maintenance	105
Water Purification System (if so equipped)	105
To Replace Canister Filter Cartridge	106
<i>Filter Canister</i>	
Draining the Fresh Water System	107
Exterior Docking Center	108
<i>Sanitizing and Winterizing Controls</i>	
Sanitizing the Plumbing System	109
Winterizing the Plumbing System	111
Winterizing the Macerator System (if so equipped)	113
<i>Macerator Bypass</i>	
To De-Winterize the Fresh Water System	113
To De-Winterize the Fresh Water System	114
Outside Shower and Courtesy Light	114
Faucets	115
Bathroom Shower	115
Black/Grey Water System and Tanks	116
Black /Gray Tank Drains and Macerator System	117
Macerator Pump System	117
Macerator Bypass Valve	119
Black Tank Flush (if so equipped)	119
<i>Tank Flush Inlet</i>	
Toilet	120
Silence Plus Toilet (if so equipped)	120

SECTION 9: HEATING & COOLING

Climate Control System	123
Ceiling Fan (if so equipped)	124
Heating System(s)	124
Fireplace (if so equipped)	124

SECTION 10: APPLIANCES

Microwave	125
Cooking Safety	125
Induction Cooktop (if so equipped)	126
Range Hood (if so equipped)	126
Refrigerator	127
Cool Freeze Cooler (if so equipped)	128

Table of Contents

Dishwasher (if so equipped)	130
Washer/Dryer (if so equipped)	130
<i>Dryer Vent Label</i>	
Vacuum Systems (if so equipped)	131
Central Vacuum System	131
Rechargeable Vacuum	131
Antenna/Satellite System(s)	131
Satellite TV Antenna (if so equipped)	131

SECTION 11: ELECTRONICS

Modes of Operation	132
Satellite Dish (if so equipped)	133
<i>Base with Locking Button.</i>	
Emergency Power Off	134
HDTV Antenna (if so equipped)	134
<i>Antenna Control Panel</i>	
Antenna Power Supply (if so equipped)	135
Automatic HDTV Antenna	135
<i>Antenna Power Supply</i>	
Sleep Mode	136
Satellite Dish (if so equipped)	137
Entertainment Center(s)	138
Wi-Fi Booster (if so equipped)	139

SECTION 12: INTERIOR

Cleaning The Interior	141
Décor Glass (if so equipped)	141
Furniture Upholstery	141
Sofa and Dinette	143
Pantry or Hutch (if so equipped)	144
Countertops	144
Quartz Countertops (if so equipped)	145
Solid Surface Countertops (if so equipped)	145
Flooring	145
Ceiling Fabric	146
Power Window Shades (if so equipped)	146
Sleep Number® Mattress (if so equipped)	147
Bed Storage	147
Power Bunk Bed (if so equipped)	147
Safe (if so equipped)	148
Entry Door Overhead Control Panel	149
Bathroom Water Heater Switches	149

SECTION 13: EXTERIOR

Cleaning The Exterior	151
Frame	154
Front Axle Tire Alignment	154
Mud Flap (if so equipped)	154
Engine and Generator Compartment Access	155
Hinges, Locks and Latches (Interior and Exterior)	155
Exterior Roof and Sidewall Vents	155
Windows	155
Sealants	156

SECTION 14: TRAVEL/CAMPING/STORAGE CHECKLISTS

Travel Checklist	157
Motorhome Storage	158
Quick Start Guide	159
Camp Setup / Tear Down	159
Entertainment Center Set-Up	160

SECTION 15: ADDITIONAL INFORMATION

Featured Components Quick Reference Chart	161
Vehicle Maintenance Record	163
Ownership Notification	165



WARNING: Read all instructions in this manual and component manufacturer supplied information before using your RV.

This manual has been provided by your recreational vehicle manufacturer for the sole purpose of providing instructions concerning the operation and maintenance of this recreational vehicle. Nothing in this manual creates any warranty, either expressed or implied.

The owner's failure to provide required service and/or maintenance could result in the loss of warranty. Please review the limited warranty and the limited warranties that apply to specific components offered with this vehicle.

Instructions are included in the manual for operating various components which are optional on some RV's or may not be available on your particular model. **"If so equipped" does not indicate or imply that the component(s) or option(s) were at any time available, or can be retrofitted to your model.** In addition, the owner should refer to individual manufacturer's operating instructions contained in the owner's packet.

SECTION 1: WARRANTY & SERVICE

Congratulations! Thank you for selecting a Jayco recreation vehicle. We are excited to welcome you to our growing RV family. We are committed to being the most respected name in RVs. We invite you to drop by our Visitors Center located in Middlebury, Indiana. Jayco recreation vehicles are manufactured for use as temporary living quarters for recreation, camping and travel uses, all as defined by the bylaws of the Recreation Vehicle Industry Association (RVIA).

This recreation vehicle is not intended for use as a full-time residence or for commercial use. Commercial use means using the recreation vehicle as a business asset such as a mobile office or using the recreation vehicle for lease or rental purposes.

Jayco reserves the right to discontinue or change specifications or design at any time without notice and without incurring any obligation whatsoever. Recreation vehicles built for sale in Canada may differ to conform to Canadian Codes.

Factory Tours

To book a factory tour or check on available tour times (free admission, closed holidays) please log on to <https://www.jayco.com> and hold the mouse pointer on the **ABOUT JAYCO** heading. Select “**FACTORY TOURS**” from the drop down menu that opens.

Options and Equipment

Jayco recreation vehicles are available in several sizes and models, so accessories and components may differ slightly between models. Some equipment described in this manual may not apply to your recreation vehicle.

Jayco reserves the right to discontinue or change specifications or design at any time without notice, and to make additions or improvements without incurring any obligations upon itself to install these changes on its products previously manufactured. Recreation vehicles built for sale in Canada may differ to conform to Canadian Codes.

Dealer Responsibility

At the time of sale of the new recreation vehicle, your Jayco dealer is expected to:

- Deliver your recreation vehicle in the best condition possible. Your recreation vehicle must pass the dealer’s pre-delivery inspection (PDI), including all systems tests.
- Provide orientation of the recreation vehicle, its systems, components and operation.
- Request that you read all warranty information and explain any provision not clearly understood.
- Ensure you receive the Warranty Packet. Your dealer can assist you in completing the OEM warranty cards or registrations, and locate any required component model or serial numbers.
- Complete and return the “Warranty Registration and Customer Delivery Form” to Jayco within 10 days of delivery to activate the applicable warranty coverage.

The **Limited Warranty** is activated only after Jayco receives a signed and dated “Warranty Registration and Customer Delivery Form” from your dealer.

Customer Relations

Jayco has empowered its dealers to make warranty and repair decisions.

If a special circumstance occurs that requires information from Jayco, we have asked your dealer’s service management to make the contact on your behalf. **This is why you should always talk to your dealer’s service management first.**

- Customer name and current location.
- Phone number where you can be reached.
- 17-digit chassis Vehicle Identification Number (VIN) or 9-digit Serial.

- The current vehicle mileage (motorhomes).
- Your date of purchase.
- If applicable, the component description, serial number and model number.
- A detailed description of the concern.
- The name of your selling dealer.
- If different from above, the contact information for the RV repair facility you are contacting Jayco to discuss.

An important note about alterations and warranties

Installations or alterations to the original equipment vehicle as distributed by Jayco are not covered by the Jayco Limited Warranty. The special body company, assembler, equipment installer or up fitter is solely responsible for warranties on the body or equipment and any alterations (or any effect of the alterations) to any of the parts, components, systems or assemblies installed by Jayco. Jayco is not responsible for the safety or quality of design features, materials or workmanship of any alterations by such suppliers.

Obtaining Emergency Warranty Repair

1. Call 1-(800)-283-8267 or use our website dealer locator to find an authorized Jayco dealer in your area. Contact them for an appointment; they will handle all warranty repair billing and returned parts for you.
2. If you cannot locate an authorized Jayco dealer near you, ask the campground staff for referrals or check the local telephone yellow pages. Or contact Jayco Customer Service or your selling dealer for assistance in locating a repair facility.
 - Contact the RV repair facility to discuss your situation and make an appointment. Ask how their billing will be handled. They may choose to bill Jayco directly; otherwise, you are expected to pay them.
 - Have the RV repair facility inspect your RV. Either they or you must call Jayco Customer Service to discuss applicable warranty coverage prior to any repair work being performed.
 - Jayco Customer Service will issue an authorization number upon warranty repair approval and advise if any original parts need to be returned.
 - Once Jayco Customer Service has issued an authorization number, the RV repair facility may begin actual repair to your RV.
 - Inspect the completed repair work thoroughly. If you are not satisfied, communicate that immediately to the RV repair facility management. Make sure you are satisfied with the repair before you pay or leave the premises.

For reimbursement, either you or the RV repair facility must send a copy of your itemized repair bill and all requested return parts by UPS (regular ground, freight pre-paid) within 60 days of the completed repair date.

To expedite processing your warranty claim, include your name, address, phone number, RV 17-digit VIN and authorization number. If returning parts, include a copy of your return freight bill.

Obtaining weekend or after business hours repair assistance

If an authorized Jayco dealer is not located nearby, contact your selling dealer for assistance. If your dealer is closed, check with the campground staff or telephone yellow pages for an RV repair facility. Have the item repaired and contact Jayco Customer Service immediately the following business day.

Failure to contact Jayco Customer Service, unauthorized or improper warranty repairs, or failure to return requested original parts may result in loss of reimbursements and/or loss of warranty.

SECTION 1: WARRANTY & SERVICE

To Contact Us

Mailing address

Jayco, Inc.
Customer Service
P.O. Box 460
903 S. Main Street
Middlebury IN 46540
Phone (toll-free)
Phone (local)
Fax (toll-free)
Brochure request
Parts email
Service email
Website

Shipping address

Jayco, Inc.
Customer Service
100 Bontrager Drive
Bldg 42 Door 4220
Middlebury IN 46540
(800) 283-8267
(574) 825-0608
(866) 709-9139
info@Jayco.com
parts@Jayco.com
service@Jayco.com
www.Jayco.com

Jayco Travel Club

All owners of Jayco recreation vehicles are eligible for membership in the Jayco Travel Club.

The club promotes family camping and the active use of your RV with others who have similar interests in the RV lifestyle.

One "International Rally" is held each year in various locations around the United States and Canada. In addition, the club offers a variety of local and regional activities throughout the year.

By belonging to the Jayco Travel Club, you will find new ways to enjoy your RV and make friends all across the country.

For more information, please visit www.Jaycorvclub.com or call 1-800-262-5178.

ABOUT THIS MANUAL

This manual is a guide to operation of the features, equipment and controls in your recreation vehicle. If you find components vary significantly from what is described, please contact your dealer to ensure you have the correct information. Nothing in this manual creates any warranty, either expressed or implied.

This Owner's Manual and Warranty Packet are to be considered permanent components of the vehicle. Keep them in your recreation vehicle at all times for personal reference. If the recreation vehicle is sold, they should remain with the vehicle for the next owner. Nothing in this manual creates any warranty, either expressed or implied, nor does it cover every possible detail of equipment, standard or option, installed on or in your recreation vehicle.

Information, illustrations and specifications in this manual reflect the most current available at the time of publication approval, are subject to change and not intended to indicate actual size.

WARRANTY PACKET

There are components that are excluded from the vehicle warranty, or are warranted separately by their own individual manufacturer's limited warranty. The Warranty Packet contains these component manufacturer supplied manuals or information sheets, warranty cards and/or registrations. Consult this information for questions regarding operating, maintenance, servicing instructions and warranty coverage. It is important you complete and mail warranty cards and registrations within the prescribed time limits to avoid loss of warranty coverage.

CHASSIS GUIDE

Throughout this manual, frequent reference is made to the vehicle's Chassis Guide. The Chassis Guide includes the owner's manual provided by the manufacturer of the chassis on which this motorhome is built, warranty cards and/or registrations. It also includes pertinent information regarding the transmission, tires, etc. Consult the Chassis Guide for operating safety, maintenance, servicing instructions and warranty coverage. The Chassis Guide should be considered a permanent component of the vehicle and kept in the motorhome at all times for reference.

SAFETY ALERTS

Throughout this manual, certain items are labeled **NOTE**, **CAUTION**, **WARNING**, and **DANGER**. These terms will alert you to precautions that can involve risk to your vehicle or to your personal safety.

Read and follow them carefully. National Safety Associations and organizations require many of the instructions listed. Always use the appropriate safety gear when servicing or maintaining your recreation vehicle. Please call your dealer or our customer service representatives if you are unsure how to proceed.

These signal words indicate precautions and potential situations, which if not avoided, may result in personal injury, property damage, or damage to your recreation vehicle. These precautions are listed in the appropriate areas in this Owner's Manual, and in the information contained in the Warranty Packet, and on safety labels affixed to your recreation vehicle. Read and follow them carefully.



NOTE: Gives helpful information.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

NOTE

Indicates a potential situation that, if not avoided, may result in property damage or damage to your motorhome.



CAUTION

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



DANGER

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury. This alert information is limited to the most extreme situations.

SECTION 1: WARRANTY & SERVICE

WARNING

Indicates a potentially hazardous situation that, if not avoided, may result in death or serious injury.

REPORTING SAFETY DEFECTS

In the United States: If you believe that your recreation vehicle has an alleged defect which could cause a crash or cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA), in addition to notifying our Customer Service Department.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign.

However, NHTSA cannot become involved in individual problems between you, your dealer or your vehicle manufacturer. For additional information, please refer to the NHTSA website at www.safercar.gov.

To contact NHTSA by phone:

Call the Department of Transportation (DOT) Vehicle Safety Hotline at 1-888-327-4236, and a NHTSA representative will record your complaint information (TTY: 1-800-424-9153 or 1-202-484-5238).

To Contact NHTSA by mail:

Office of Defects Investigations/CRD
NVS-216
1200 New Jersey Ave SE
Washington, DC 20590

In Canada: If you believe your vehicle has an alleged safety defect, you should contact Transport Canada and our Customer Service Department immediately. Transport Canada prefers to be called instead of posted mail or email as it enables their investigators to confirm that your information is correct, and to answer your questions accurately. For additional information, please refer to the Transport Canada website at www.tc.gc.ca.

To contact Transport Canada by phone:

Call 1-800-333-0510 (or 1-613-993-9851 if you are calling from the Ottawa region) and ask to speak to a defect investigator.

To contact Transport Canada by mail:

Road Safety and Motor Vehicle
Regulation Directorate
Transport Canada
Tower C, Place de Ville
330 Sparks Street
Ottawa, Ontario K1A 0N5

CUSTOMER RESPONSIBILITY

It is important you read and understand all instructions and precautions before operating the recreation vehicle. Even if you are an experienced RV'er we encourage you to thoroughly read this Owner's Manual, as well as the information contained in your Warranty Packet and Chassis Guide (motorized only).

As technology advances, new improvements enter the RV industry every day, and each RV manufacturer has its own unique manufacturing process.

Familiarize yourself with the Limited Warranty applicable to your recreation vehicle. There are components that are excluded or warranted separately by their individual manufacturer's limited warranty (refer to the Warranty Packet or Chassis Guide if applicable).

As the new owner of the recreation vehicle, you are responsible for regular and proper maintenance performed in accordance with this manual and the OEM manuals. Regular and proper maintenance will help prevent conditions arising from neglect that are not covered by the limited warranty. It is your responsibility and obligation to return your vehicle to your dealer for repairs and service.

CHANGE OF ADDRESS/OWNERSHIP

Please notify our Customer Service Department as soon as possible of a change of address by writing or calling us. For notification of a change of ownership, please fill out the appropriate form located in this manual and mail it to Customer Service along with documentation showing proof of ownership. Please include your current vehicle mileage (motorized only).

SUGGESTIONS FOR OBTAINING SERVICE

To help ensure your dealer provides the level of service you expect, here are some suggestions we would like to make:

Contact your dealer at once...Do not wait until you are ready to use your RV. Your dealer may not be able to service it immediately and/or the repair may require parts be ordered. The dealer's service department is busiest on Mondays, Fridays and before the holidays.

Prepare for the appointment...If you are having warranty work performed, be sure to have the right papers with you. Take your warranty folder and have your vehicle information available. All work to be performed may not be covered by the warranty. Discuss additional charges with the service personnel.

Prepare a list...Provide your dealer with a written list of specific repairs needed. It is important that you provide any vehicle repair history to the dealer's service personnel.

Keep a maintenance log of your vehicle's service history. This can often provide a clue to the current issue.

Be reasonable with your requests...If you leave a list with several items and you need your vehicle returned back by a specific time, discuss the situation with the dealer's service personnel and list your items in order of priority. This may include making a second appointment for work not completed or parts that the dealer may need to order.

Don't expect to look over the technician's shoulder...Please don't be offended if you are told you cannot watch the work being done. Some insurance requirements forbid admission of customers to the service area.

Inspect the work performed...Finally, check out the service or repair job when you pick up your vehicle. Notify the dealer's service personnel immediately of any dissatisfaction. If you cannot return the vehicle immediately for repair, make an appointment as soon as possible.

Please be aware that all service shops require notification of any issues with their repairs within a specified time limit. Make sure you are familiar with their repair policies.

OBTAINING SERVICE FOR SEPARATELY WARRANTED ITEMS

Your selling dealer is responsible for servicing your recreational vehicle before delivery, and has an interest in your continued satisfaction. We recommend your dealer perform all inspection, warranty and maintenance services. Some dealers may be authorized service centers for those OEMs whose products are warranted separately and excluded from the **Limited Warranty**.

SECTION 1: WARRANTY & SERVICE

OBTAINING SERVICE AT OUR CUSTOMER SERVICE FACILITY

Should your recreation vehicle be in need of service, and your dealer recommends that the repairs be made at our Customer Service facility, your recreation vehicle may be returned to us with the following guidelines*:

- You or your dealer must make a confirmed appointment 60 days prior to dropping off the recreation vehicle at our Customer Service facility.
- The holding tanks must be emptied and rinsed. We have a dumping station available for customer use.
- The propane system (if so equipped) and all electrical systems must be shut down and turned off. We are not responsible for discharged batteries or propane tanks.
- During the appropriate season, please ensure the RV has been winterized.
- Unless prior approval has been obtained from our Customer Service facility, all personal items must be removed from the area where you are requesting service repair and the refrigerator emptied. We are not responsible for loss of food items.
- All transportation costs are the responsibility of the owner. You may need to arrange for alternative accommodations for some types of repairs. Please be prepared accordingly.

**Our Customer Service facility occasionally utilizes local independent repair facilities. Your vehicle may be referred to or repaired by one of these local repair facilities.*

PARTS AND ACCESSORIES

Contact your authorized dealer for assistance in obtaining replacement parts or accessories. We do not sell direct to retail or non-authorized dealers. If the original part is no longer available, we will make every effort to provide an appropriate substitute.

JAYCO MOTORIZED LIMITED WARRANTY

THIS LIMITED WARRANTY COVERS

- The Motorhome when it is used only for its intended purpose of recreational travel and camping;
- Only the first retail purchaser;
- Only those portions of the Motorhome not excluded under the section “What is Not Covered”;
- The Motorhome only when sold by an authorized dealership; and,
- Only defects in workmanship performed and/or materials used to assemble those portions of the Motorhome not excluded under the section “What is Not Covered”.
- This Limited Warranty is not transferable.

When you request and accept the performance of warranty repairs under the terms of this Limited Warranty, you are accepting all terms of this Limited Warranty, including by way of example, warranty limitations and disclaimers, the forum selection clause and the clause reducing the time period when suit must be filed for breach.

LIMITATION AND DISCLAIMER OF IMPLIED WARRANTIES:

THE DURATION OF ANY IMPLIED WARRANTY IS LIMITED TO:

- **THE DURATION OF THIS LIMITED WARRANTY;**
- **THE SCOPE OF COVERAGE THIS LIMITED WARRANTY PROVIDES;**
- **DEFECTS EXISTING AT THE TIME OF SALE THAT MANIFESTED THEMSELVES AND SURFACED DURING THE IMPLIED WARRANTY COVERAGE PERIOD; AND**
- **DEFECTS DISCOVERED AND REPORTED WITHIN THE DURATION OF THE IMPLIED WARRANTY. THERE ARE NO EXPRESS WARRANTIES OR ANY IMPLIED WARRANTIES ON THOSE PORTIONS OF THE MOTORHOME EXCLUDED FROM COVERAGE.**

NOTWITHSTANDING THE ABOVE PROVISIONS, JAYCO EXPRESSLY DISCLAIMS AND EXCLUDES ANY AND ALL IMPLIED WARRANTIES AND CONDITIONS, STATUTORY OR OTHERWISE, WHEN THE MOTORHOME IS USED FOR COMMERCIAL, RENTAL OR BUSINESS USE OR WHEN THE MOTORHOME IS TITLED OR REGISTERED IN A BUSINESS NAME OR WHEN THE JAYCO IS SOLD IN CANADA.

There is no warranty of any nature made by Jayco beyond that contained in this Limited Warranty. No person has authority to enlarge, amend or modify this Limited Warranty. The dealer is NOT Jayco’s agent. Jayco is not responsible for any undertaking, representation or warranty made by any dealer or others beyond those expressly set forth within this Limited Warranty. Some states and provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

SECTION 1: WARRANTY & SERVICE

DISCLAIMER OF CONSEQUENTIAL AND INCIDENTAL DAMAGES:

THE FIRST RETAIL BUYER AND ANY SUBSEQUENT OWNER, ALONG WITH ANY PERSON WHO IS AN INTENDED OR UNINTENDED USER OR BENEFICIARY OF THE MOTORHOME, ARE NOT ENTITLED TO RECOVER ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES CAUSED BY A DEFECT IN THE MOTORHOME. BY WAY OF EXAMPLE, CONSEQUENTIAL DAMAGES INCLUDE FUEL AND TRANSPORTATION EXPENSES TO DELIVER THE MOTORHOME TO A SERVICING DEALER, HOTEL ROOMS, LOST WAGES AND MOISTURE DAMAGE SUCH AS MOLD AND MILDEW AS WELL AS RUST AND CORROSION. THE EXCLUSION OF CONSEQUENTIAL AND INCIDENTAL DAMAGES ARE NOT DEPENDENT UPON WARRANTY REMEDIES SUCCESSFULLY CURING ANY DEFECT; THE EXCLUSION OF CONSEQUENTIAL AND INCIDENTAL DAMAGES SHALL SURVIVE ANY FAILURE OF THE LIMITED WARRANTY REMEDIES FULFILLING THEIR PURPOSE. Some states do not allow the exclusion or limitation of consequential or incidental damages, so the above exclusions may not apply to you.

COVERAGE TIME: The duration of this limited warranty is 2 years after the first retail owner takes delivery of the Motorhome from an authorized dealer OR 24,000 miles of use, whichever occurs first. If the dealer places the Motorhome in service before retail sale, the coverage period is 2 years after the dealer first placed the Motorhome in service OR 24,000 miles of use, whichever occurs first. ANY ACTION FOR BREACH OF THIS LIMITED WARRANTY OR FOR ANY IMPLIED WARRANTY MUST BE COMMENCED NO MORE THAN 26 MONTHS AFTER THE BREACH.

The term of this limited warranty is 3 years for substantial defects to any “Structure Components”. Structure Components means materials and/or workmanship directly attributable to Jayco relating to the laminated fiberglass sidewall assembly, laminated rear wall assembly, laminated fiberglass front wall (wrap) assembly, sidewall/end wall/front and rear wall frame assembly (wood and aluminum), roof assembly, and floor assembly. Structure Components specifically excludes front and rear fiberglass caps and any other cosmetic fiberglass attachments, sidewall metal (unless the root cause is the wall structure); exterior roof material (EPDM rubber, TPO, etc.); floor covering (carpet, linoleum, hardwood tile, etc.); all sidewall, end wall, front and rear wall, roof and floor attachments, and delamination caused by water intrusion from lack of required exterior seal maintenance or other maintenance. Structure Components further excludes all items identified under “What is Not Covered” below.

Jayco reserves the right to have new or remanufactured parts of similar quality used to complete any work, and to make parts and design changes from time to time without notice to anyone. Jayco reserves the right to make changes in the design or material of its products without incurring any obligation to incorporate such changes in any product previously manufactured. Jayco makes no warranty as to the future performance of the Motorhome, and this limited warranty is not intended to extend to the future performance of the Motorhome, or any of its materials, components or parts. In addition, the Motorhome owner’s obligation to notify Jayco, or one of its independent, authorized dealers, of a claimed defect does not modify any obligation placed on the Motorhome owner to contact Jayco directly when attempting to pursue remedies under state or federal law.

If the Motorhome is not of the current or prior model year when the first retail owner takes delivery, the limited warranty, including but not limited to the limited warranty for substan-

tial defects to Structure Components, ends 90 days after the first retail owner takes delivery of the Motorhome OR after the odometer reaches 5,000 miles, whichever occurs first. ANY ACTION FOR BREACH OF THIS REDUCED LIMITED WARRANTY OR FOR ANY IMPLIED WARRANTY MUST BE COMMENCED NO MORE THAN 15 MONTHS AFTER THE BREACH.

Unless prohibited by state or provincial law, repairs do not extend the time when you must commence an action for breach of warranty and shall not extend the warranty coverage period. This reduction in time may not apply to you because some states and provinces do not allow the reduction of the time to commence an action for breach of warranty. Any performance of repairs after the warranty coverage ends and any performance of repairs to those portions of your Motorhome excluded from coverage are “good will” repairs, whether or not Jayco was aware of the any such coverage lapse or warranty exclusion at the time of repairs. Such “good will” repairs do not alter the express terms of this limited warranty or extend the warranty coverage periods or the limitation period in this paragraph. Jayco is not required to notify you if authorized repairs are considered “good will” by Jayco. You should expect the need for warranty repairs. Jayco may use new and/or remanufactured parts and/or components to complete a repair. It is likely that warranty repairs were performed at the factory during assembly OR at the selling dealership after delivery of the Motorhome to your selling dealer. If you discover a defect or damage to the Motorhome when you take delivery of your Motorhome, you MUST notify your dealer OR Jayco within 10 days of the date of purchase to have defect or damage repaired at no cost to you. Minor adjustments will be performed, free of charge, by the dealer within 90 days of your purchase; thereafter, such adjustments are your exclusive responsibility as normal maintenance.

REPAIR REMEDY: Jayco’s obligation is to repair any covered defect discovered within the warranty coverage period provided: (1) you notify Jayco or an authorized dealer within 10 days of your discovery of a defect; AND (2) you deliver the Motorhome to Jayco OR an authorized dealership at your cost and expense.

BACK-UP REMEDY: If the primary repair remedy fails to successfully cure any defect after a reasonable number of repair attempts, your sole and exclusive remedy shall be to have Jayco pay an independent service shop of your choice to perform repairs to the defect OR have Jayco pay diminished value damages if the defect is incurable. You must exhaust both the repair remedy and the back-up remedy AND these remedies must fail to fulfill their essential purpose before you can seek any other remedies.

THIS LIMITED WARRANTY IS NOT A WARRANTY THAT PROMISES OR EXTENDS TO FUTURE PERFORMANCE BECAUSE IT DOES NOT MAKE A REPRESENTATION ON HOW YOUR MOTORHOME WILL PERFORM IN THE FUTURE BUT REPRESENTS ONLY WHAT THE REMEDY WILL BE IF A DEFECT EXISTS.

HOW TO GET SERVICE: To obtain warranty service the owner must:

- Notify Jayco or an authorized Jayco dealer, within the applicable warranty coverage period designated above, that you are making a warranty claim;
- Provide the notification mentioned in (1), above, within ten (10) days of the discovery of a defect in material or workmanship; and,
- Promptly schedule an appointment with and take the Motorhome to Jayco or an independent, authorized dealer.

If you need assistance, you may contact JAYCO, INC. at 903 South Main Street, P. O. Box 460, Middlebury, Indiana 46540, Attn: Customer Service, (800) 517-9137.

SECTION 1: WARRANTY & SERVICE

WHAT IS NOT COVERED:

- Equipment and appliances installed after the Motorhome is assembled by Jayco;
- Motorhomes used for any rental, business and commercial purpose - If the Motorhome owner or user files a tax form claiming a business or commercial tax benefit related to the Motorhome, or if the RV is purchased, registered or titled in the name of any business association it shall be irrefutable that the Motorhome has been used for rental, commercial or business purposes;
- Any Motorhome sold or used outside of the United States, U.S. Territories or Canada;
- Any Motorhome not used solely for recreational travel and camping;
- Any Motorhome purchased through auction or wholesale;
- Any Motorhome purchased from a dealer that is not an authorized dealer;
- Normal wear, tear or usage, such as tears, punctures, soiling, mildew, rust, fading, or discoloration of exterior plastic or fiberglass, or soft goods, such as upholstery, drapes, carpet, vinyl, screens, cushions, mattresses and fabrics;
- The effects and damage caused by condensation or moisture;
- Mold;
- Any damage caused by mold;
- Items working as designed but that you are unhappy with;
- Damage caused by misuse, mishandling, neglect, abuse, failure to maintain the Motorhome in accordance with the owner's manual, or failure to perform other routine maintenance such as inspections, lubricating, adjustments, tightening of screws and fittings, tightening of lug nuts, sealing, rotating tires;
- Damage caused by accident, whether or not foreseeable;
- Damage caused by weather or corrosion due to the environment;
- Damage caused by theft, vandalism or fire;
- Damage caused by tire wear or tire failure;
- Defacing, scratches, dents, chips on any surface or fabric of the Motorhome; damage caused by infestation by insects or animals;
- Damage caused by off road use;
- Damage caused by overloading the Motorhome or any of its components or parts;
- Wheel alignment or adjustments to axles caused by improper maintenance, loading;
- Damage caused by road hazards;
- The leveling jacks/system;
- Any component, system or part warranted by another entity. Examples are : the automotive chassis, (including the power train, steering, handling, braking, wheel balance, muffler, tires, tubes, batteries and gauges); generator; awning ; inverter; converter; microwave; television; DVD/CD player; radio; speakers; television; refrigerator; range; water heater; water pump; stove; carbon monoxide detector; smoke detector; propane detector; furnace; and, any air conditioner. The written warranty provided by the manufacturer of the component part is the direct and exclusive responsibility of that manufacturer).

EVENTS DISCHARGING JAYCO FROM OBLIGATION UNDER WARRANTY:

- Any rental, business or commercial use or purchase of the Motorhome;
- Any Motorhome titled or registered in a business name;
- Any Motorhome purchased or sold outside of, or used outside of the United States, U.S. Territories or Canada;
- Any Motorhome purchased through an auction or wholesale or by a non-authorized dealer;
- Owner neglect;
- Failure to provide routine maintenance;
- Alteration; off road use;
- Collision or accident, whether or not foreseeable;
- Acts of God, including weather;
- Damage or corrosion caused by the environment, theft, vandalism, fire, explosions, or overloading.

LEGAL REMEDIES: EXCLUSIVE JURISDICTION FOR DECIDING LEGAL DISPUTES RELATING TO AN ALLEGED BREACH OF WARRANTY OR ANY REPRESENTATIONS OF ANY NATURE, MUST BE FILED IN THE COURTS WITHIN THE STATE OF MANUFACTURE, WHICH IS INDIANA. THIS LIMITED WARRANTY SHALL BE INTERPRETED AND CONSTRUED IN ACCORDANCE WITH THE LAWS OF THE STATE OF INDIANA. UNLESS PROHIBITED BY STATE LAW, ALL CLAIMS, CONTROVERSIES AND CAUSES OF ACTION ARISING OUT OF OR RELATING TO THIS LIMITED WARRANTY SHALL BE GOVERNED BY THE LAWS OF THE STATE OF INDIANA, INCLUDING ITS STATUTE OF LIMITATIONS, WITHOUT GIVING EFFECT TO ANY CONFLICT OF LAW RULE THAT WOULD RESULT IN THE APPLICATION OF THE LAWS OF A DIFFERENT JURISDICTION.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE AND PROVINCE TO PROVINCE. ALL ACTIONS OF ANY KIND RELATING TO THE MOTORHOME SHALL BE DECIDED BY A JUDGE RATHER THAN BY A JURY.

WARRANTY REGISTRATIONS: Your warranty registrations should be completed and delivered to the manufacturer of component parts. The selling dealership will assist you in completing and filling out the Jayco product warranty registration. Upon receipt of the product registration by Jayco, your Warranty will be registered. The failure to submit this warranty registration to Jayco will not affect your rights under this limited warranty as long as you can present proof of purchase, however, it can cause delays in obtaining the remedies offered by this limited warranty, and it may adversely affect any servicing facility's ability to provide proper repairs and/or part replacement. Note, tender and acceptance of a warranty registration does not alter the express terms of this limited warranty or any of its exclusions.

CARE AND MAINTENANCE: It is the Owner's responsibility to perform proper care and maintenance of the Motorhome and to assure correct load distribution. For details regarding this, please see your owner's manuals. Please review all manuals and contact your selling dealership, Jayco or supplier of the component part if you have questions.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS; YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

SECTION 1: WARRANTY & SERVICE

JAYCO, INC.

903 S. Main Street * P. O. Box 460 * Middlebury, IN 46540
Telephone: 800-517-9137

SECONDARY MEANS OF ESCAPE (EXIT WINDOW)

Your recreation vehicle has been equipped with a window(s) that serves as a secondary means of escape. The window(s) will allow a quick exit from the vehicle during an emergency if access to the main entrance door is not available. It is easily identified by the red latches and label.

Do not remove the EXIT window label from your RV:

When parking your recreation vehicle, make sure the egress window is not blocked by trees or other obstacles. Make sure the ground below the window is solid and can be used as an escape path.



Exit Window Label

Practice opening the window before an emergency occurs, and make sure all occupants know how to operate it.


⚠ CAUTION

Exercise care when opening the exit window. If opened too far, it may come off the hinge. This may result in damage to the unit or window.



NOTE: All windows must be closed and locked while the RV is in transit.

Your recreation vehicle may be equipped with one of the following exit window styles:

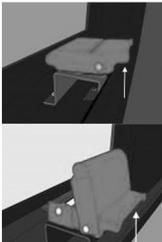


Flip latch style (2 per window)

Push up on the front lip of the latch and the latch unfolds.

Push up on the front lip of the latch again to unhook the latch from the window.

When both latches are released, push out on the window which is hinged at the top. Exit the vehicle.

The screen does not need to be removed from the window.

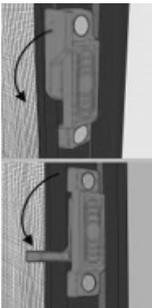


Slider window latch style

Pull the lever down to unlock the window.

Slide the window to the right to open and exit the vehicle.

The screen does not need to be removed from the window.

SECTION 2: OCCUPANT SAFETY

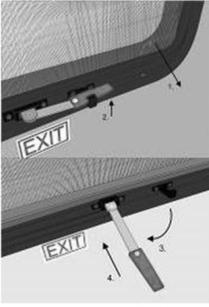

Lever style latch

Remove the screen by pulling the red tab (upper right arrow).

Pull the lever out from the sash clamps.

Swing the lever out so it is positioned straight out from the window. Push the lever (and window) out to open and exit the vehicle.

FIRE SAFETY

If a fire does start, follow these basic safety rules:

1. Call 911 and evacuate the vehicle immediately.
2. After everyone is accounted for, check the fire to see if you can attempt to put it out.
3. If it is large, or the fire is fuel-fed, get clear of the vehicle and have the Fire Department handle the emergency.
4. Do not attempt to use water to put out the fire. Water can spread some types of fire, and electrocution is possible with an electrical fire.

Refer to the following sections for additional fire safety information.

- **Electrical Systems**, In case of an electrical fire.
- **Appliances**, In case of a grease fire.

FIRE EXTINGUISHER

Fire extinguishers are classified and rated by fire type, A, B and C. These classifications identify the kinds of fires or burning materials they are designed to fight.

Class A - Solid materials such as wood, paper, cloth, rubber and some plastics.

Class B - Liquids such as grease, cooking oils, gasoline, kerosene or other flammable liquids.

Class C - Electrical such as electrical wires or other live electrical equipment.

A dry chemical fire extinguisher has been installed by the entrance door. It is suitable for extinguishing small fires of the Class B or C type only.

We suggest you become thoroughly familiar with the operating instructions displayed on the side of the fire extinguisher.



NOTE: For information on how to use your fire extinguisher, refer to the fire extinguisher user's manual

Inspection and maintenance

Read and follow all instructions on the label and user's manual provided by the fire extinguisher manufacturer.

- Inspect the extinguisher at least once a week (more frequently if it is exposed to weather or possible tampering). This should also be done before beginning a vacation or during an extended trip.

 WARNING

Do not check the pressure, test or practice using the fire extinguisher by squeezing the trigger, even briefly. The fire extinguisher is not rechargeable or refillable. Once used, it will gradually lose pressure and will not be fully charged for use in an emergency.

 DANGER

Do not turn the electrical power back on or plug in any appliances after the use of a fire extinguisher. Please refer to the fire extinguisher's user manual for further instructions on maintenance and clean up.

SMOKE ALARM

The smoke alarm will only work properly if it is operational and maintained. They have a limited life and will wear out over time. Immediately replace the detector if it is not working properly, if it displays any type of problem, or within five years of use. **Be sure to read, understand and follow the information provided by the smoke alarm manufacturer, including information on the limited life of smoke alarms.**

Be aware the smoke alarm **is not fool proof and cannot detect fires if smoke does not reach it**. Anything preventing smoke from reaching the alarm may delay or prevent an alarm.

Though the alarm horn in this detector meets or exceeds current UL standards, it may not be heard for reasons that include (but not limited to): a closed or partially closed door, other noise from electronics, appliances or traffic.

 WARNING

- This smoke alarm will not alert hearing impaired residents. Special alarms with flashing strobe lights are recommended for the hearing impaired
- Only use the replacement battery recommended by the smoke detector manufacturer. The smoke detector alarm may not operate properly with other batteries. Never use a rechargeable battery as it may not provide a constant charge. Never disconnect the battery to silence the alarm.
- Test the smoke alarm operation after the vehicle has been in storage, before each trip and at least once per week during use. Do not disconnect the battery or the alarm.

The smoke alarm is operational once the battery is correctly installed. It will not function if the battery is missing, disconnected, dead, the wrong type or not installed correctly. **It requires one standard 9V battery.** Refer to the user's guide, for correct battery and installation information,

The LED light will indicate the battery is functioning properly. When the production of combustion is sensed, the smoke detector sounds a loud alarm that continues until the air is cleared. The LED light will also give a visual indication of a sounding alarm.

SECTION 2: OCCUPANT SAFETY

When the battery becomes weak, the alarm will “beep” about once a minute indicating a low battery. This warning should last for 30 days. You **MUST** replace the battery once the alarms low battery warning (beep) starts to assure continued protection.

When the battery is removed from the alarm, the battery flag will pop up; the alarm cannot be installed to the mounting bracket without a battery.

To test, stand at arm’s length from the smoke alarm as the alarm horn is loud and may be harmful to your hearing. The test button will accurately test all functions. Never use an open flame to test the smoke alarm.

Do not remove the warning label located near the smoke alarm from your recreation vehicle:

Maintenance

Vacuum off any dust on the cover of the smoke alarm using a soft brush attachment. Test the smoke alarm once you have vacuumed. Never use water, cleaners or solvents to clean the smoke alarm as they may damage the alarm. Do not paint the smoke alarm. Refer to the manufacturer’s use guide for detailed maintenance information.

<p>▲ WARNING</p> <p>Test smoke alarm operation after vehicle has been in storage, before each trip, and at least once per week during use. Failure to do so can result in death or serious injury.</p>
<p>▲ AVERTISSEMENT</p> <p>VÉRIFIER LE DÉTECTEUR DE FUMÉE SI LE VÉHICULE A ÉTÉ ENTREPOSÉ, AVANT CHAQUE DÉPLACEMENT ET AU MOINS UNE FOIS PAR SEMAINE EN SERVICE.</p>

COMBINATION CARBON MONOXIDE / PROPANE ALARM

Your recreation vehicle is equipped with a combination carbon monoxide (CO) / propane alarm that is listed for use in recreation vehicles. The combination carbon monoxide/propane alarm will only work if it is operational and maintained.

<p>▲ WARNING</p> <ul style="list-style-type: none"><input type="checkbox"/> The carbon monoxide detector installed is intended for use in ordinary indoor locations of recreation vehicles. It is not designed to comply with Occupational Safety and Health Administration (OSHA) commercial or industrial standards.<input type="checkbox"/> Do not disconnect the battery or the alarm.<input type="checkbox"/> Individuals with medical problems may consider using warning devices that provide audible and visual signals for carbon monoxide concentrations under 30 PPM.<input type="checkbox"/> This alarm will only indicate the presence of carbon monoxide gas at the sensor. Carbon monoxide gas may be present in other areas.<input type="checkbox"/> The ultimate responsibility for protection against toxic carbon monoxide fumes rests solely on you. Installing a carbon monoxide/propane alarm is just the first step in protecting your family from toxic carbon monoxide poisoning. The following symptoms are related to carbon monoxide poisoning and should be discussed with all members of the household:<ul style="list-style-type: none"><input type="checkbox"/> Mild exposure: Slight headache, nausea, vomiting, fatigue (often described as flu-like” symptoms).<input type="checkbox"/> Medium exposure: Severe throbbing headaches, drowsiness, confusion, fast heart rate.<input type="checkbox"/> Extreme exposure: Unconsciousness, convulsions, cardio-respiratory failure, death.
--

The alarm is directly wired to the 12-volt electrical system, with continuous power being supplied by the recreational vehicle batteries. There is no 9-volt battery power supply. As a result, the alarm is always drawing a small amount of current from the recreation vehicle batteries. Although the current draw is slight, it could drain the batteries during extended storage periods. This condition is not likely to occur except during storage situations when the inverter cannot restore the battery charge. **If the battery cable is disconnected at the battery terminals, the combination alarm will not work.**

Be sure to read, understand and follow the owner's information from the manufacturer of the combination CO/propane alarm. This includes information regarding the limited life of the alarm.

Carbon monoxide (CO) is an insidious poison. It is a colorless, odorless and tasteless gas. Many cases of reported carbon monoxide poisoning indicate while victims are aware they are not well, they become so disoriented they are unable to save themselves by either exiting the recreational vehicle or calling for assistance. Young children and household pets may be the first affected.

Your combination carbon monoxide/propane alarm is designed to detect the toxic carbon monoxide fumes that result from incomplete combustion, such as those emitted from appliances, furnaces, fireplaces and auto exhaust.

A carbon monoxide/propane alarm is **NOT A SUBSTITUTE** for other combustible gas, fire or smoke alarms. This carbon monoxide alarm is designed to detect carbon monoxide gas from ANY source of combustion. It is not designed to detect smoke, fire or any other gas. Please note that there are hazards against which carbon monoxide detection may not be effective, such as natural gas leaks or explosions.

This alarm is designed to sense the presence of carbon monoxide/propane gas, however there are other combustible fumes or vapors that may be detected by the sensor including (but not limited to): acetone, alcohol, butane and gasoline.

These chemicals can be found in commonly used items such as deodorants, colognes, perfumes, adhesives, lacquer, kerosene, glues, wine, liquor, most cleaning agents and the propellants of aerosol cans.

High temperatures can activate glue and adhesive vapors. If you close up a recreational vehicle on a hot day, the chemicals used in its construction may be detected for months after the vehicle was constructed (for more information, refer to Sec. 2, Formaldehyde).



Carbon Monoxide/Propane Alarm
(alarm may vary from model(s) shown)

SECTION 2: OCCUPANT SAFETY

What you should do if the alarm sounds

WARNING

- Actuation of this detector indicates the presence of carbon monoxide which can kill you.
- Never turn the 12-volt battery disconnect control to the off position and disconnect the battery cable to silence an alarm. The alarm will automatically sense when the level of carbon monoxide in the air reaches below dangerous levels. You should stay outside the vehicle in fresh air until the alarm is silenced. When the alarm sounds, do not stand too close to the alarm. The sound produced by the alarm is loud because it is designed to wake a person in an emergency. Prolonged exposure to the alarm at a close distance may be harmful to your hearing.

1. Operate the RESET/SILENCE button.
2. Call your emergency services (fire department or 911).
3. Immediately move to fresh air (outdoors or by an open door or window).
4. Do not re-enter the premises or move away from the open door or window until the emergency service responders have arrived, the premises have been aired out, and your alarm remains in its normal condition.

If your alarm reactivates within a 24 hour period, repeat steps 1-4 and call a qualified appliance technician to investigate for sources of carbon monoxide from fuel burning equipment and appliances, and inspect for proper operation of this equipment. Make sure that motor vehicle(s) are not, and have not been, operating in an attached garage or adjacent to the recreation vehicle.

If problems are identified during this inspection, have the alarm serviced immediately. Note any combustion equipment not inspected by the technician and consult the manufacturer's instructions or contact the manufacturer directly for more information about carbon monoxide safety and this alarm.

Alarm signals

- Normal operation:** The LED will maintain a steady green light, indicating that the alarm is powered.
- CO alarm condition:** The red LED light will remain steady and the alarm will sound 4 "BEEPS" then silent for 5 seconds. These signals indicate immediate action is required.
- Propane gas alarm:** The red LED flash and the alarm will sound a steady tone. These signals indicate immediate action is required.
- Alarm malfunction/low battery:** The gas LED will remain off and the Operational/CO LED will alternate red/green and the alarm will sound once every 15 seconds.
- End of life alarm:** The LED will flash red/red, green/green and the alarm will "BEEP" every 25-30 seconds. The alarm should be immediately replaced.

Maintenance

Vacuum the alarm cover at least once a year. Clean the cover by hand using a cloth dampened in clean water. Dry with a soft cloth. Do not spray the front panel of the alarm with cleaning agents or waxes. This action may damage the sensor causing an alarm or cause the alarm to malfunction. Do not paint the face of the alarm.

Testing the combination carbon monoxide/propane alarm

WARNING

Test the alarm operation after the motorhome has been in storage, before each trip and at least once per week during use.

The TEST/RESET button tests all ELECTRICAL functions of the alarm. The TEST/Mute switch is located on the front of the alarm. Press and hold the test button for 1 second. The alarm is working properly if the GREEN indicator light changes color to RED and the horn beeps 4 times. The Gas LED should also blink red.



NOTE: Pressing the test button does not check the sensor operation. Refer to the carbon monoxide/propane alarm manufacturers user's manual provided with your recreation vehicle for additional information on testing the sensors.

Repair or replace the combination carbon monoxide/propane alarm when the alarm no longer functions. As with any electronic product, it has a limited life. Alarms that do not work cannot protect you.



NOTE: The carbon monoxide/propane alarm manufacturer strongly recommends replacement of the detector five years after the date of purchase.

FORMALDEHYDE

Some components in the recreation vehicle contain formaldehyde-based adhesives that may release formaldehyde fumes into the air for an unknown period of time. Individuals who are allergic to formaldehyde gas fumes may experience irritation to eyes, ears, nose and throat. Indoor air quality may also be affected by leaving your vehicle closed for a period of time.

To aid in dissipation, ventilate the recreation vehicle by opening all windows and circulate the air with a fan.

This label is located inside the vehicle near the entry door. **The label should be left permanently affixed to the recreation vehicle.**

CAUTION

Product in this vehicle may contain formaldehyde, which may be an irritant to you. You may experience a greater concentration during high humidity and temperatures. Ventilate to remove. Consult your owner's manual for additional information.

DO NOT REMOVE THIS LABEL

SECTION 2: OCCUPANT SAFETY

EXTENDED OR FULL TIME USAGE

Your new recreation vehicle has been built for enjoyment in a recreational manner. It is not intended for use as full-time quarters or a permanent residence. Continuous living in your vehicle could cause accelerated wear and damage to the various components.



CAUTION

Continuous or permanent living in your recreation vehicle may affect your warranty coverage and may void the "Limited Warranty" applicable to your vehicle.

COLD WEATHER USAGE

When used in freezing or below freezing temperatures, the precautions should be taken:

- Fresh water and drainage systems - preparations to avoid freeze-ups.
- Propane gas (if so equipped) and sufficient power is needed for protection from possible freeze-ups on the propane gas regulator. Keep in mind that more frequent furnace operation will substantially increase battery draw and propane gas use.
- During cool weather usage, ventilation or addition of a dehumidifier may be required to reduce condensation.
- Check outside extrusions on compartment doors, locks, slide outs, windows, vents, etc., for frozen moisture before operating to avoid damage to parts.

CONDENSATION



WARNING

Condensation may cause dampness, mildew, mold, staining and, if allowed to continue, it may result in damage to the recreation vehicle (damage caused by condensation is not warrantable). It can also lead to mold or mildew issues, which could be a health hazard.

Condensation is a natural phenomenon. The amount of condensation will vary with climate conditions, particularly the relative humidity. Condensation occurs because there is water vapor present in the air. When the temperature reaches the "dew point" the water vapor in the air condenses and changes to a liquid form.

Proper ventilation or the use of a dehumidifier (customer supplied) will assist in controlling the condensation. Suggestions to eliminate warm moist air:

- Crack open windows and roof vents to allow warm moist air to escape.
- Open the bath roof vent (if so equipped) approximately 1/2" when showering.
- Use the range hood fan (if so equipped) when cooking or washing dishes.
- Avoid hanging wet towels (or clothes) inside the recreation vehicle to dry.
- If found in cabinets or closets, open the doors slightly to provide ventilation.

VEHICLE LABELS

Decals and data plates used throughout the motorhome aid in its safe and efficient operation; others give service instructions. Read all decals, data and instruction plates before operating your recreation vehicle. Any decal, data or instruction plate painted over, damaged or removed should be replaced.

Keep a record of the 17-digit chassis vehicle identification number (VIN), the 9-digit serial number, and your license number in the event theft or vandalism requires you to supply this information to the authorities.

WARNING

- The factory-installed weight labels are specific to the recreation vehicle for which they are supplied and are not interchangeable. Do not remove these labels from your vehicle. If labels are missing contact your dealer or Customer Service for replacements.
- Do not exceed any applicable motorhome weight ratings. Doing so could damage your motorhome or affect handling and braking characteristics.**
- Your motorhome braking system is designed and rated for operation at GVWR not GCWR.**

Weight Terms

GAWR - Gross Axle Weight Rating: The value specified by the vehicle manufacturer as the load-carrying capacity of a single axle system, as measured at the tire-to-ground interfaces. This is the total weight a given axle is capable of carrying.

GCWR - Gross Combined Weight Rating: The value specified by the motorhome manufacturer as the maximum allowable loaded weight of the motorhome in combination with its towed trailer or towed vehicle. The tongue weight of a towed vehicle/ trailer counts as part of the motorhome cargo.

GVWR - Gross Vehicle Weight Rating: The value specified by the manufacturer as the maximum permissible weight of the fully loaded motorhome.

OCCC - Occupant and Cargo Carrying Capacity: Is equal to the GVWR of the motorhome, minus the weight of the motorhome, as completed at the factory, minus the weight of all occupants, including the driver, minus the weight of all personal cargo, minus the weight of a full tank of chassis engine fuel and, if applicable, minus the weight of a full tank of propane. The full weight of potable water, including the water heater and the tongue weight of a towed vehicle/ trailer counts as cargo in or on the motorhome. Additions to or other changes made to the motorhome after it left the factory will affect (reduce) the OCCC.

UVW - Unloaded Vehicle Weight: The weight of this motorhome as manufactured at the factory with fuel, engine oil and coolants and if applicable, the weight of a full tank of propane.

SECTION 3: PRE-TRAVEL INFORMATION

Weight and Capacity Labels

The following labels are located on the inward-facing surface of the main entry door of the motorhome and on the lower sidewall left of the driver's seat.

OCCE Label (Occupant and Cargo Carrying Capacity)

The upper portion of this yellow label is federally required and indicates the total combined weight value of occupants and cargo that may be placed in or on your motorhome as it was manufactured and weighed before leaving the factory.

This label also indicates the number of safety seat belts that have been installed at the factory. Additions or other changes made to the motorhome after it left the factory will affect (reduce) the OCCE.

The lower portion of the label is provided voluntarily and indicates the weight value of the motorhome as it was manufactured and weighed before leaving the factory. This label also indicates the GCWR of the completed motorhome.

The **Federal Certification Label** is required by the government to verify the RV complies with all motor vehicle standards for Canada and the United States. It includes the following information: Manufacturer name, VIN, GVWR, GAWR (front/rear), tire and rim sizes and cold tire inflation pressures.

The **motorhome towing and braking label** is located on the rear bumper above the hitch receiver. Be sure to read and follow the guidelines and information stated on this label. Refer to the Chassis Guide for additional information.

MOTOR HOME OCCUPANT AND CARGO CARRYING CAPACITY
VIN: XXXXXXXXXXXXXXXXXXXX
THE COMBINED WEIGHT OF OCCUPANTS AND CARGO SHOULD NEVER EXCEED:
XXX kg. OR (XXX Lbs.)
SAFETY BELT EQUIPPED SEATING CAPACITY: X
CAUTION:
A FULL LOAD OF WATER EQUALS XXX kg. OR (XXX Lbs.) OF CARGO @ 1 kg/L (8.3 Lb/gal)
AND THE TONGUE WEIGHT OF A TOWED TRAILER COUNTS AS CARGO

Upper Section Federal OCCE Weight Label

THE WEIGHT OF THIS RECREATIONAL VEHICLE MOTOR HOME AS COMPLETED AT THE FACTORY WITH FULL PROPANE TANK AND FULL ENGINE FUEL IS:

XXXX kg. OR (XXXX Lbs.)

THE GCWR OF THIS RECREATION VEHICLE MOTOR HOME IS: XXXX kg OR (XXXX Lbs)

CONSULT YOUR DEALER AND SEE OWNER'S MANUAL FOR DEFINITIONS, ADDITIONAL WEIGHT, LOADING, WEIGHING INFORMATION AND TOWING GUIDELINES INCLUDING AUXILIARY BRAKE REQUIREMENTS FOR ANY TOWED TRAILER OR VEHICLE.

Lower Section Federal OCCE Weight Labels

REP. MFR.:	VIN/VIN1		GM11
FABRICANT REP.:	GVWR/GPWR KG		PRESS./GOLD INFL.
9999 4571	SIZE/DIMENSION		PRESS./GOLD INFL. FRODO
GAWR/PFRNT KG	TIRE/PFRNT	RIMS/JAANTE	PSULPC KPA
5000 322R PFRNT/DEAVANT	4725C/3R155D 35.5 X 13		55
00000 INT/CENTRAL			0000
0000 322R REAR/ARRERE	4725C/3R155D 35.5 X 13		55
			0459
TYPE OF TIRE/TYPE OF REINFORCE:		TIRE BRAND/REINFORCE:	
TIRE BRAND/REINFORCE TO ALL APPLICABLE:		GAWR/GPWR COMPARE TO TOWED TRAILER OR	
FOLLOW THESE PRECAUTIONS TO AVOID OVERLOADING:		DO NOT OPERATE AT A SPEED EXCEEDING	
OR THE DATE OF MANUFACTURE SHOWN ABOVE.		OR EXCEEDS THE WEIGHT OF THE TRAILER	
		TO AVOID EXCESSIVE WEAR TO THE TRAILER	
		OR EXCEEDS THE WEIGHT OF THE TRAILER	

Federal Certification Label

WARNING

The braking capacity of your motor home is not necessarily as great as its towing capacity. Separate braking systems should be used for control of a towed vehicle, (auto, trailer, boat etc.), behind the motor home. Braking requirements will vary by chassis type, chassis manufacturer and state law. Contact your chassis dealer or independent RV dealer for assistance to determine if a separate braking system is recommended and what limit(s) may apply for your towing combination and traveling safety.

The use of a reducing sleeve and smaller diameter draw bar or a longer draw bar in and on the hitch receiver will reduce the hitch weight rating and towing capacity. Use of a draw bar longer than 18-inches (457mm) is prohibited.

Consult your vehicle owner's manual(s) and your independent RV dealer for specific weighing instructions and towing guidelines.

Improper use of towing equipment and towing setups can cause loss of control that may lead to an accident resulting in death or serious injury.

Towing and Braking Warning Label

For more information: Consult a hitch specialist or your dealer for assistance when preparing your motorhome for towing a vehicle or trailer.

LOADING YOUR MOTORHOME

 WARNING

- **Never load the motorhome in excess of the GVWR or the GAWR for either axle. Overloading your motorhome may result in adverse handling characteristics and damage to the chassis.**
- **DO NOT EXCEED YOUR GVWR!** This means you should weigh your vehicle as loaded for your normal travel to determine the actual weight. If you exceed the GVWR, you **MUST** remove items from the motorhome, or drain liquids, then re-weigh the vehicle to ensure you have achieved a safe weight.
- The actual weight of the vehicle, passengers, all options, liquids, the hitch weight of your towed vehicle and your personal cargo is important for you to know so you do not exceed the Gross Vehicle Weight Rating (GVWR) of the motorhome. The volume of space available for storage may exceed the amount of available cargo capacity. Large storage compartments have been designed to accommodate normal camping items, which are bulky, but not necessarily heavy.

Store and secure all loose items inside the motorhome before traveling. Overlooked items can become dangerous projectiles during a sudden stop.

Distribute cargo side-to-side so the weight on each tire does not exceed one half of the GAWR for either axle. Make sure any tie down straps (if so equipped) on appliances or furniture are secure. Load heavy objects on the floor, or as low as possible.

 WARNING

- Your recreation vehicle's load capacity is designated by weight, not by volume, so you cannot necessarily use all available space when loading the vehicle. Do not exceed your GVWR and ensure you are loading the vehicle as evenly as you can for the best possible handling. Ensure heavy items are secured so they do not shift during travel.
- Store items in areas designated for storage. Do not store anything in the areas reserved for the converter, electrical panels, furnace or water heater, etc.
- For traveling safety, it is important to make sure the tie down straps are secured on all appliances such as the toaster, coffee maker, etc. Vibration during travel will move the appliances, creating the potential for them to fall out of their cabinets possibly causing injury.

SECTION 3: PRE-TRAVEL INFORMATION

TRAILER PLUG

If you choose to tow behind your RV, a chassis manufacturer supplied 7-way trailer plug (located at the hitch) is pre-wired into your motorhome. Before hitching up to a trailer, please read *Using the Rear Hitch*, vehicle weight ratings, etc. Your motorhome may have both 4-way and 7-way trailer receptacles.

Wiring to operate your towed vehicle brakes must be the same size in both the towed vehicle and the motorhome.

White	1	Ground
Blue	2	Electric Brakes
Green	3	Running lights
Black	4	House batteries charge line
Red	5	Stop & left turn
Brown	6	Stop & right turn
Yellow	7	Back up Lights



**7-way trailer
plug-rear
view**



**12V
Circuit
Tester**

The connector plug may build up corrosion with extended use. It should be cleaned periodically to insure good electrical contact. Make sure the connector plug is kept clean and protected from road elements as you travel.

NOTE: A 12V circuit tester is recommended to verify trailer connections.

WEIGHING YOUR MOTORHOME

When your motorhome is loaded you should have it weighed. The actual weight of the motorhome, passengers, all options, liquids, the hitch weight of your towed vehicle and your personal cargo is important for you to know so you do not exceed the GVWR. There are two important factors when loading your motorhome, total weight and balance.

It is imperative that you verify compliance within all applicable weight ratings. Overloading your motorhome will void the **Limited Warranty** and the warranties of many component part manufacturers.

Periodically weigh your motorhome at a public scale to determine proper load distribution. To obtain the side-to-side weights, there needs to be enough space on either side of the scale to accommodate the motorhome being partially off the scale.

Different types or scales may require different procedures when weighting the motorhome. The motorhome must remain as level as possible on the scale (even if an axle is not physically on the scale). To obtain the side-to-side weights, make sure there is enough space on either side of the scale to accommodate the motorhome being partially off the scale.

If a boat, trailer or other vehicle is being towed, it should be weighed separately. Combine this weight with the motorhome's Gross Vehicle Weight (GVW) to ensure the total combined weight does not exceed the GCWR.

Once actual weights are obtained, compare them to the **Weight Information Label** weight ratings to ensure you are below the posted minimum ratings.

If there is a difference in the weights on one side of the vehicle as compared to weights on the other side, components (tires, wheels, brakes, springs, etc.) on the heavier side may be overloaded, although the total axle load is within the GAWR.

CAUTION

It is important to redistribute the load to avoid component failure as well as to improve the handling characteristics of the vehicle.

WARNING

Dump the gray and black water holding tanks before traveling to avoid carrying unnecessary weight. Full tanks can affect your fuel consumption, and depending on tank location, can affect your vehicle handling characteristics. If you cannot immediately empty your holding tanks, reduce your vehicle speed until you reach a dumping station.

See the *Weight Terms and Loading Your RV* sections for important information on how towing a vehicle affects the motorhome weight.

SECTION 3: PRE-TRAVEL INFORMATION

Notes:

VEHICLE OPERATION

Your motorhome will travel safely and comfortably at highway speed limits. However, it will take longer than a passenger automobile to reach that speed. Allow more time to go around the vehicle you are passing. Avoid situations that might require sudden momentum changes as the length of the motorhome affects your ability to quickly cut back into traffic. Swerves and sharp turns, especially at high speeds, could result in loss of control of the motorhome.

The motorhome has a longer turning radius. When turning, check the road clearance and be aware of others, especially if towing a vehicle behind your motorhome.

Adverse weather conditions and extremes in terrain may affect the performance and handling of your vehicle. Do not operate the cruise control on icy or extremely wet roads, gravel roads, winding roads, in heavy traffic, or in any other traffic situation where a constant speed cannot be maintained. Use care when accelerating or decelerating on a slippery surface. Abrupt speed changes can cause skidding and loss of control.



NOTE: CALIFORNIA TIRE CHAIN NOTICE:
YOUR MOTORHOME MAY NOT BE OPERATED
WITH TIRE CHAINS

Braking and Stopping

Even though your motorhome is equipped with brakes designed for its Gross Vehicle Weight Rating (GVWR) we suggest you practice stopping away from traffic until you become accustomed to your motorhome's stopping distance. Your motorhome is equipped with a third brake light that activates when the brakes are engaged.

When descending a long hill, shift the transmission into a lower gear and engage the auxiliary engine braking. Auxiliary engine brake engagement is activated by a switch on the driver's console.

See the chassis owner's manual for additional information. The transmission and engine will help in controlling downhill speed and can lengthen brake life. The distance required to stop the motorhome is greater than an automobiles.

Driving through water deep enough to wet the brakes may affect stopping distance or cause the vehicle to pull to one side. Check the motorhome's brake operation in a safe area to be sure they have not been affected. **Never operate any vehicle if a difference in braking efficiency is noticeable.**

 WARNING

Your motorhome chassis braking system is rated for operation at GVWR not GCWR.

Parking Brake

The parking brake should be engaged when the motorhome is parked. Never drive your motorhome with the parking brake engaged as this will reduce braking effectiveness and cause excessive driveline wear. Refer to your Chassis guide for more information on the parking brake.

USING THE REAR HITCH

CAUTION

Do not install a frame equalizing type hitch on your motorhome.

Towing will affect vehicle handling, durability and fuel economy. Exceeding any of the listed weight ratings will result in unacceptable overall vehicle performance. Your safety and satisfaction require proper use of correct equipment.

The factory installed towing hitch on this vehicle is capable of pulling 7,500 pounds of load (maximum), and a maximum vertical (tongue) weight of 750 pounds. A hitch bar of appropriate strength and steel should be selected to meet the capacities of the towing receptor.

Always use safety chains between the motorhome and the towed trailer or vehicle. Cross the chains under the tongue and allow for slack when turning corners. Connect the safety chains to the vehicle frame or hook retainers. Never attach the safety chains to the bumper.

Before descending a steep or long grade when towing a trailer or vehicle, reduce speed and shift the motorhome into a lower gear to control vehicle speed. Avoid frequent or prolonged brake application, which can cause overheating or brake failure.

By definition the GCWR is “the maximum total weight rating allowed for a vehicle and any attachment, such as a trailer or towed vehicle. To determine the total allowable weight for a towed item, subtract the GVWR from the GCWR.

WARNING:

YOUR MOTORHOME CHASSIS BRAKING SYSTEM IS RATED FOR OPERATION AT GVWR, NOT GCWR. CONSULT YOUR OWNER'S MANUAL(S) FOR SPECIFIC WEIGHING INSTRUCTIONS AND TOWING GUIDELINES. THE BRAKING CAPACITY OF YOUR MOTORHOME IS NOT NECESSARILY AS GREAT AS THE TOWING CAPACITY. SEPARATE BRAKING SYSTEMS MAY BE NECESSARY FOR CONTROL OF A TOWED VEHICLE (AUTO, TRAILER, BOAT, ETC.) BEHIND THE MOTORHOME. IF THE TOWED VEHICLE MEETS OR EXCEEDS THE MINIMUM WEIGHT AS DETERMINED BY THE CHASSIS MANUFACTURER (THIS MINIMUM WEIGHT RATING WILL VARY BY CHASSIS AND CHASSIS MANUFACTURER), CONTACT YOUR CHASSIS DEALER OR MANUFACTURER FOR ASSISTANCE IN DETERMINING WHETHER A SEPARATE BRAKING SYSTEM IS RECOMMENDED AND WHAT LIMITS THERE ARE FOR YOUR TOWING COMBINATION AND TRAVELING SAFETY.

Towing and Braking Label

WARNING

- Total weight of your motorhome and any trailer or vehicle towed by it must not exceed the GCWR.** Do not assume that you can tow a vehicle that happens to be within the capacity of the hitch. By doing so, you may exceed the total GCWR of the motorhome.
- The total weight of your motorhome (including cargo, passengers, fluids, etc...) in addition to the vertical (tongue) weight must not exceed the GVWR and/or any GAWR.** Once again, do not assume that you can tow a trailer or vehicle that happens to be within the vertical (tongue) weight capacity of the hitch. By doing so, you may exceed the GVWR and/or GAWR of the motorhome.
- Your motorhome chassis braking system is rated for operation at GVWR, NOT GCWR.** Any trailer or vehicle being towed by your motorhome must have adequate brakes as required by all state (or province) and local regulations for towing with your motorhome, including areas you may be traveling through. Failure to follow the towing guidelines may result in property damage or injury.

In addition, a separate supplemental braking system must be installed if the towed trailer or vehicle meets or exceeds the minimum weight determined by the chassis manufacturer (*this minimum weight rating will vary by chassis and chassis manufacturer*).

Contact your dealer for assistance in determining whether a separate braking system is recommended for your towing and traveling safety. Failure to follow these instructions will create a safety hazard and may result in an accident.

Maintenance

Keep the hitch clean along with your general frame maintenance.

- At the beginning of the season, and monthly or thereafter, clean the inside of the receiver tube with a wire brush and spray with a silicone spray.
- Always remove the utility mount from the receiver when it is not in use. This will help prevent the utility mount from rusting to the tube.
- Periodically check the bolts for tightness. They need to be torqued to the proper setting (refer to your Chassis Guide).

Refer to the *Trailer Plug* section for information on the trailer plug hook-up.

STEP WELL COVER

Electric powered step well cover

The step well cover can be extended or retracted using the “step cover” switch located on the passenger side console. This cover gives the passenger a flat “floor” to put their feet so they aren’t dangling in the stepwell.

⚠ WARNING

Make sure there are no obstructions when operating the step well cover. To avoid personal injury, do not operate the step well cover when standing in the step well.



NOTE: On luxury Class A motorhomes there will be a pullout storage drawer built into the stepwell for storing small tools etc. Other Class A motorhomes will not include this feature.

Step well
Cover

Storage Drawer
(If Equipped)



ENTRANCE STEP

Your motorhome is equipped with an electric entrance step. To operate, locate the “Step” control located on the passenger side console (the 12-volt battery disconnect switch must be ON). If the step encounters an immovable object, such as a curb, while being deployed, it will stop and shut down in that position. It will retract normally when the door is closed.

WARNING

LOOK BEFORE ENTERING OR EXITING YOUR MOTORHOME!

- When opening the door from the outside, make sure you are not obstructing the path of the entrance step. Step deployment takes approximately two seconds. Keep hands and fingers clear while extending or retracting.
- **Look before you exit.** It is possible to deliberately lock the steps in the retracted or closed position with the rocker switch. **Make sure the steps are fully deployed before exiting** the motorhome. Stepping on a partially extended step can cause damage to the step frame.

STEP WITH CONTROL UNIT--(Normal Operation/Automatic Mode)

- Close the door. The step should retract and lock in the 'up' position (under step light is not on).
- Open the door. The step should extend and lock in the 'down' position with the under step light illuminated.



NOTE: In the event the entrance door is left open, the light will turn 'off' after 5 minutes.

CAUTION

Do not hold the switch in for longer than it takes to extend or retract the step. Doing so may result in damage to the motorhome.

STEP WITH CONTROL UNIT--(Step Lock Function/Stationary Extended Mode)

- If your step is equipped with an override switch, turn it to the 'ON' position. The step should remain extended with the under step light 'off' when the door is closed.
- With the step override switch turned 'ON', the step extended, and the entrance door closed, turn the vehicle ignition on. The ignition override system will go into effect and the step will automatically retract.



NOTE: If the yellow wire from the four-way connector is not connected to an ignition power source, the ignition safety system will be inoperative and the step will remain in the extended position. In this case, the step lock switch must be placed in the automatic mode position for the step to retract.

Turn the vehicle ignition off and open the door. The step will extend and lock in the 'down' position. This is the 'auto extend' feature. When the vehicle ignition is turned on, the step will always activate with the door movement, regardless of the step switch position.

NOTE: If the yellow wire from the four-way connector is not connected to an ignition power source, the ignition will not cause the step to retract if the step lock switch is placed in the automatic mode position, regardless of the door position.

KEYLESS ENTRY

The keyless entry system has a black keypad mounted on the outside of the coach beside the entrance door. There are no key fobs and the system will only unlock or lock the entrance door. There is no alarm and no other special features. Keypad is programmable for your own personalized authority code. If a correct code is no entered after 20 button presses, the keypad enters an inactive mode that disables button recognition for 1 minute. This helps prevent unauthorized access by entering random codes.



Black Keypad

Definitions

- **Authority Code:** A unique 5 digit pass code that gives the system administrator (or owner) the ability to program transmitter key fob's and keypad access codes.
 - **Default Authority Code = 5 presses of the (7/8) button on the keypad.**
 - The Authority Code does not allow for secure operations (like locking the door). It is only used to assign Access Codes.
 - If an unassigned button or no button is pressed while the system is enabled, the keypad reverts back to a disabled state.
 - If keypad does not provide a double beep, a valid Access Code has not been entered.
- **Access Code:** A unique 5 digit pass code that is input into the entry keypad to unlock the door(s). Up to 5 separate access codes can be programmed into the keyless entry system. **Default Access Code is: (1/2), (3/4), (5/6), (7/8), (9/0) (press each button only one time)**
- **To Lock the entrance door press and hold the 1/2 button. You do not have to have an Access Code programmed to lock the door.**

Programming the Keyless Entry Keypad

Prior to programming keyless entry keypads:

1. Retrieve the keypad Authority Code from the keyless entry owner's manual (see above). If the keyless entry authority code is still set to the **factory default of 5 presses of the 7/8 button** it must be changed for security purposes. Failure to create a unique Authority Code specific to your motorhome **will allow access to your motorhome by anyone knowing the factory default authority code.**
2. An Authority Code only serves one purpose: it grants the owner access to set new Access Codes. Access Codes are used for secure functions such as locking the doors. Both Access and Authority codes are 5 digits in length. For the greatest security, the codes should not be the same.
3. You first set an Authority Code, which will then allow you to set an Access Code.
4. **Keypad programming**


SECTION 4: VEHICLE OPERATION

NOTE: Press the keypad only once regardless of whether you are selecting the first or the second digit on the keypad. For instance you would only press keypad (1/2) one time regardless whether you were selecting the 1 or the 2.

- A. To program your personal entry code into the keypad outside the coach you need to access the Program Wires.
- B. The Program Wires are located inside the compartment underneath the wood grain plastic tray on the passenger side of the dash (see photo).
- C. The tray is easily removed as it is held in place with Velcro or plastic clips. Just pull it up and you will be able to remove it.
- D. Locate the yellow and white wires with spade terminals and a label identifying them as the Program Wires. (wires are joined together with tape)
- E. These wires are used to program the keypad.
- F. You will need a paperclip to do the programming with.



Plastic Tray Passenger Side

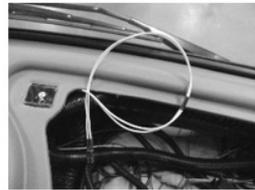

Program Wires

Assigning a New Authority Code

1. Bend a paper clip so you can put one end in the spade terminal of the yellow and white wires.
2. The keypad should beep for 3 seconds.
3. Pull the paper clip out of the yellow and white wires, before the keypad stops beeping.
4. The keypad is now in "Learn Mode".
5. Enter a new 5 digit Authority Code. Each time you press a number on the keypad it will double beep. When you enter the 5th digit, the keypad will chirp 3 times. Re-enter the Authority Code for confirmation. A long beep indicates a failure to change the code.
6. Test the new code to confirm it.
7. The user has 2 minutes to complete this procedure. If it isn't completed in time, or an error is made, the system will exit Learn Mode and a long chirp will sound indicating an error.
8. The keypad automatically leaves "Learn Mode" when the new code is set.

Assigning a New Access Code

1. Press the (5/6) or (3rd) button for 5 seconds until the keypad beeps. Keypad backlighting will flash indicating the keypad is in "Learn Mode".
2. Enter the 5 digit **Authority Code** (which was programmed in the step previous to this)
 - If you enter an incorrect Authority Code the keypad beeps for 1 second and leaves "Learn Mode".
 - If a correct **Authority Code** is entered, keypad provides a constant beep that only stops when you assign a defined Memory Bank to store the new **Access Code**.

SECTION 4: VEHICLE OPERATION

3. Press and release the button that corresponds to the Memory Bank. For example, press (1/2) or (1st button) for Memory Bank #1, press (3/4) or (2nd button) for Memory Bank #2. There are 4 Memory Bank locations corresponding to buttons (1/2), (3/4), (5/6), and (7/8).
4. Enter a 5 digit **Access Code**. The keypad chirps 3 times after you enter the 5th digit.
5. Re-enter the new Access Code for confirmation. The keypad chirps 3 times to confirm. A long beep indicates a failure to change the code.
6. Test the new code to confirm a successful change.
 - Up to 4 **Access Codes** can be assigned at any time.
 - Adding codes to memory bank positions with pre-existing codes will over write the previous code.
 - If an error is made at any point, or if time runs out, the keypad will exit “Learn Mode”, beep for 1-2 seconds and not change anything.

Closing doors with the keypad

To close doors with the keypad, press and hold (1/2) button. Keypad will beep and doors will begin to close after 2 seconds. Doors will continue to close until EITHER you release the button or the doors fully close.

An **Access Code** is not needed to close the doors.

Secure Operation:

Enter your 5 digit **Access Code**, keypad will double beep to indicate secure operation. After entering an Access Code, the keypad is enabled for 5 seconds and the next button pressed will initiate a secure operation.

Secure operations are:

(1/2) button will unlock entry doors

(3/4) button unlocks cargo doors

(5/6) button - **no function**

(7/8) button unlocks entry and cargo doors sequentially

(9/0) Activates light for 5 minutes. Pressing (9/0) again while light is on will turn it off.

ENTRANCE DOOR

Always hold onto the entrance door when opening or closing it. Damage caused because you failed to do so is not covered by the **Limited Warranty**.



CAUTION

Make sure the entrance door is completely closed and locked when traveling. Locking the door helps prevent it from opening unintentionally and keeps intruders from your recreation vehicle.

The entrance screen door may be equipped with a slide panel that allows access to the entrance door handle and locks. The entrance door may also be equipped with both a regular door lock and a dead bolt lock.

Keys

Several keys are provided when you purchase your vehicle. Most keys have an individual key number stamped on the plate. Record these key numbers and keep the information in a safe place. You can order a key blank from your dealer to have duplicate keys made. If you lose the keys, contact your dealer or a locksmith for assistance.

SECTION 4: VEHICLE OPERATION



NOTE: Locks on entrance and baggage doors need biannual lubrication using a light coat of silicone spray. Conditions such as rain, salt, dust and pollution may increase the maintenance needs.

DRIVER AND PASSENGER SEAT

⚠ WARNING

- Do not adjust the seat while driving. After adjusting the seat, make sure that it is locked in position. To ensure that the seat is locked securely, try to move the seat forward or backward without using the adjusting lever or button. Do not put packages, pets or other objects between the driver's and front passenger co-captain's seat.
- If equipped with reclining seats: to minimize the risk of personal injury in the event of a collision or sudden stop, always keep both the driver's captain and passenger co-captain seat backs in a nearly upright position while the motorhome is moving. The protection provided by the seat belts may be reduced significantly when the seat back is reclined. Reclining the seats while the motorhome is moving may result in serious injury.
- If equipped with power seats: keep hands and feet clear of the power seat while in operating the power feature.



NOTE: The driver's and front passenger seat must be locked in the forward facing position while the motorhome is in motion.

6-way power seat (if so equipped)

Use the controls to slide the 6-way power seat to the desired position. Release the control, and the seat will lock at that position. The 6-way power seat has a three-point adjustable seat belt. Features include lumbar support, swivel, slide and reclining capabilities.

To rotate the driver/passenger seat (if so equipped)

To face the driver or front passenger seat toward the rear of the vehicle, pull the seat swivel release lever up and rotate the seat. To return the seat to the original position, rotate seat back to the driving position until you hear a click and the seat locks into position.

SEAT BELTS

⚠ WARNING

Seat belts should always be worn by anyone who drives or rides in this vehicle.

- ❑ Never use one seat belt for more than one occupant. Never carry more people in the motorhome than there are seat belts.
- ❑ Only seats equipped with seat belts are to be occupied while the vehicle is in motion. While traveling, do not occupy beds or any seats that do not have seat belts.
- ❑ Be sure to lock all doors before driving. Locking the doors and using the provided seat belts will minimize the risk of injury or ejection in an accident.
- ❑ If you are pregnant, consult your health care professional for advice on seat belt use.

Always use seat belts: In an accident, injury to the driver and passengers may be reduced if seat belts are properly used. The booth dinette, hide-a-bed sofa, and easy bed sofa have two-point lap-seat belts installed. **Seat belts should be used in all seating positions.**

Maintenance and inspection of seat belts:

The webbing used in seat belts may be cleaned with a mild soap or detergent solution. Allow the belts to dry in the shade and do not allow them to retract until fully dry.

Regularly check the seat belt buckles and release mechanisms for positive action and check automatic locking retractors for positive engagement.

If the seat belt webbing shows obvious cuts, protruding broken fibers or severe fading which indicates weakening by exposure to sunlight, the entire seat belt assembly should be replaced. Do not try to bleach or re-dye the belts. The resulting color may rub off and the webbing strength could be affected.

STARTING AND STOPPING THE ENGINE

Refer to the Chassis Guide. The transmission indicator shift panel is located in the front driver's side instrument panel.

Refer to the PEPS (Passive Entry Passive Start) section for explanation on the keyless ignition. PEPS is only available on certain models.

INSTRUMENT PANEL

For detailed diagrams of the driver's front dash instrument panel, driver and passenger front dash consoles, and control center refer to the Dash Instrument Panel section of this manual. Refer to your Chassis Guide for additional information on dash controls and vehicle operation.

Maintenance

To clean the vinyl/ABS dash, soak a soft cloth in a solution of mild detergent and water. Wipe off the dash. To rinse, dip a cloth in fresh water and wring it out well. Wipe off the detergent thoroughly.



Transmission Indicator Shift Panel

SECTION 4: VEHICLE OPERATION


⚠ WARNING

Do not set anything on, or attach anything to, the instrument panel or dash. Do not attach anything to the steering wheel cover. Failure to follow these warnings may restrict the driver's visibility or cause an object to strike and injure an occupant in the case of a collision or sudden stop.

DASH INSTRUMENT PANEL


Left Panel

1. Headlights / Marker Lights
2. Panel Lamp Dimmer
3. Driving (Fog) Lights
4. Map Lights On/Off/Auto
5. Hydraulic Leveling System

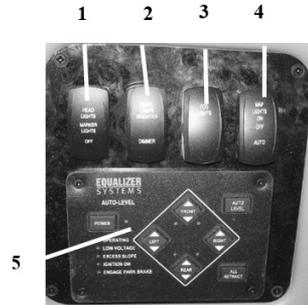


Center Panel

1. Lightbar Message Center (LMC)
2. Multiple Gauges:
 - a) Front Air Pressure
 - b) Rear Air Pressure
 - c) Fuel Gauge
 - d) DEF Fluid Level
3. Speedometer
4. Multiple Gauges:
 - a) Tachometer
 - b) Oil Pressure
 - c) Engine Temperature

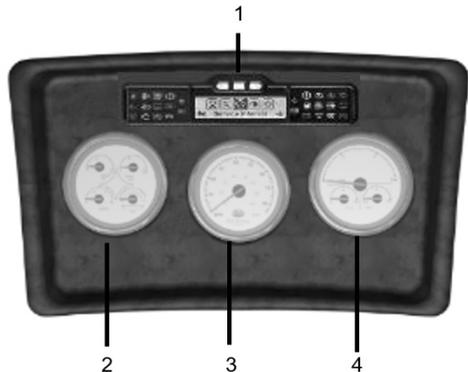


Right Panel

1. AM/FM/DVD/Backup Camera
2. Climate Controls
3. Generator Start switch
4. USB port & 3.5mm headphone jack for radio input
5. 12V Power Port

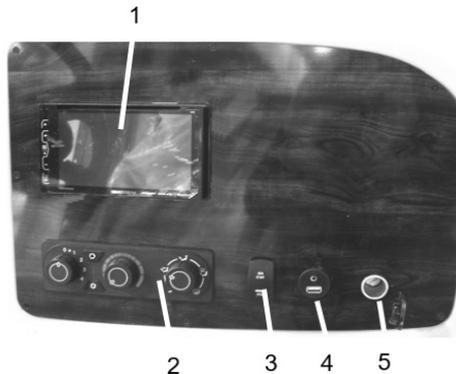


DRIVER SIDE CONSOLE INSTRUMENT PANEL

1. Outside Mirror Control
2. Driver Side Night Shades
3. Driver Side Day Shades
4. LMC Menu Select
5. Aux Brake - High, Low, Off
6. Air Horn
7. Mirror Defrost
8. Passenger Side Day Shades
9. Passenger Side Night Shades
10. LMC Display Control
11. Battery Boost
12. Docking Lights

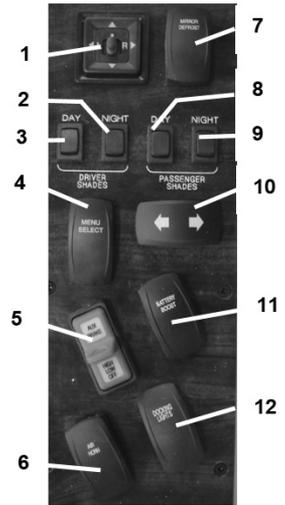


PASSENGER SIDE CONSOLE INSTRUMENT PANEL (TOP)

1. Passenger Front Day Shade
2. Passenger Side Day Shade
3. USB Charge Ports
4. Passenger Step Well Cover - Extend/Retract

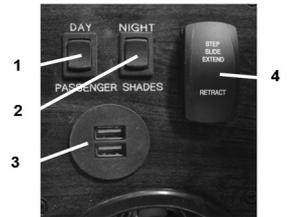

PASSENGER SIDE CONSOLE INSTRUMENT PANEL (FRONT)

1. Porch Light
2. Ceiling Light - Entrance Door
3. Entrance Door Awning Light
4. Cargo Compartment Lights
5. Patio Awning - EXTEND
6. Patio Awning - RETRACT
7. Light Master ON
8. Light Master OFF
9. Entrance Step Power & Light
10. House Main Power with Indicator Light

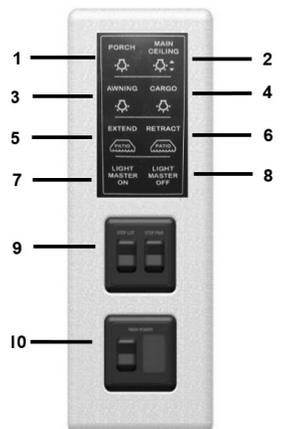

SECTION 4: VEHICLE OPERATION

STEERING WHEEL AND COLUMN CONTROLS

The left control pad on the steering wheel has the headlight flasher button, and the cruise controls.

Cruise Control Function

The electronic cruise controls include an ON/OFF button, a resume button, cancel button and a set button. Refer to the Chassis Guide for detailed information on cruise control operation.

Headlight Flasher

To flash the headlights, press the top button on the left control pad of the steering wheel.

Manual Tilt and Telescoping

The steering wheel can be adjusted by using the manual lever located on the left side of the steering column. To adjust the tilt of the wheel, pull the lever towards you, then push the wheel toward the dash or pull it toward you. To adjust the telescope, push the lever towards the dash, then pull up on the wheel, or push it down. For more information, see the Chassis Guide.

The right control pad of the steering wheel has the controls for the windshield wipers and the clearance light flasher button.



Left Side Pad



**Manual
Tilt and
Telescope
Lever**



Right Side Pad

⚠ WARNING

- Make sure the steering column is firmly locked in place before driving. Never adjust the steering column while the vehicle is moving.
- Do not use the cruise control when driving conditions do not permit maintaining a constant speed, such as in heavy traffic or on roads that are winding, icy, snow-covered, slippery, or have a loose driving surface. Failure to follow this precaution could result in a collision or loss of vehicle control, possibly resulting in personal injury or property damage.

Clearance Light Flasher

To flash the clearance lights, press the top button on the right side pad of the steering wheel.

Wiper Blades

Windshield wiper blades ON/OFF, washer, and HI/LO speed control are on the right control pad of the steering wheel. To operate the windshield wipers press the wiper ON/OFF button (the key in the ignition must be ON). The washer bottle with pump holds a full gallon of fluid. Periodically check the level of the windshield wiper fluid and refill as needed.

SECTION 4: VEHICLE OPERATION


To clean the blades, use a soft cloth and glass cleaner to remove grease, dead insects, etc. If the blades continue to streak or smear, replace them. Wiper blades should be replaced at the first signs of wear.

Multi-Function Signal Lever


The multi-function signal lever located on the steering column controls the turn signals, and the headlight high/low beam. Pull the end of the handle forward towards you to switch from high beam to low beam, or vice versa.

Hazard-Warning Flasher

The hazard signal control (emergency flashers) is located on the lower left hand side of the steering column. Press to activate and press again to turn them off.

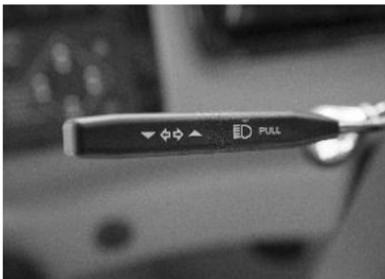

Multi-Function Signal

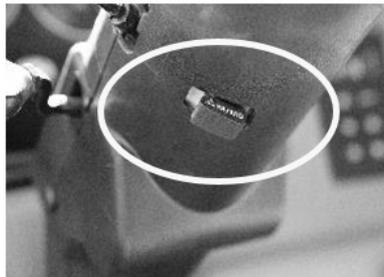

Hazard Warning Flasher

DRIVER'S CONSOLE CONTROL PANEL

Horns

To enable the air horn, press the AIR HORN switch to the "ON" position. Press on the center of the steering wheel and the air and electric horns both sound. If the AIR HORN switch is in the "OFF" position, the normal electric horn will sound.

If the coach has a digital dashboard, the AIR HORN button is located on the Vehicle Display Controller (VDC).

On models without the digital dashboard, the AIR HORN switch is a single switch located on the driver (left) side console.



VDC Controller

Docking Lights

⚠ CAUTION

MAKE SURE THE DOCKING LIGHTS ARE OFF WHEN DRIVING THE VEHICLE! If the lights are activated with the rocker switch the lights will NOT automatically shut off.

To activate the docking lights:

Depress the single "Dock Light" switch on the left side driver console (or the leveling system switch panel). Six docking lights will come on (2 on left side, 2 on right side, and 2 in rear).

SECTION 4: VEHICLE OPERATION



NOTE: The two rear docking lights will light when the coach is shifted into reverse (even if switch is turned off). They will go off when the coach is shifted out of reverse.

Docking lights also time out and turn off after 10 minutes if operated using the key fob. Docking lights stay on if they are activated with the rocker switch (no time out).

If your coach is equipped with the Passive Start system, the docking lights can also be turned ON and OFF using a button on the special key fob.



NOTE: If you turn on the docking lights with the Passive Start key fob, you will not be able to turn off the docking lights with the console switch. Likewise if you turn on the docking lights with the console switch, you will not be able to turn them off using the key fob. You must turn them on and off using the same device.

Map Lights

The map light control(s) are located on the driver and passenger consoles. The map lights can also be turned ON or OFF at the light assembly. When the control is set on automatic, the lights will automatically turn on when the motorhome entrance door is opened. Lights are located above the driver and passenger seats.

DRIVING (FOG)LIGHTS

Your motorhome is equipped with driving lights (fog lights) to increase your driving visibility. To activate these lights, depress the “Fog Lights” control in the front instrument panel to the left of the steering wheel.

Daytime Running Lights (DRL)

The daytime running lights are activated when the ignition key is turned ON and the headlamp control is in the OFF or “parking lamps” position.

⚠ WARNING

Always remember to turn ON your headlamps at dusk, nighttime or during inclement weather. The daytime running light system does not activate your tail lamps and generally may not provide adequate lighting during these conditions. Failure to activate the vehicle headlamps under these conditions may result in a collision.

FRONT IN-DASH AM/FM/CD/DVD AND NAVIGATION SYSTEM

The front in-dash AM/FM/CD/DVD and Navigation system is also Sirius Satellite radio ready. You will need to purchase your own Sirius subscription to activate this feature. Refer to the manufacturer’s owner’s manual for detailed operating instructions.

COIN TRAY AND CUP HOLDERS

You motorhome has a coin tray (this is NOT an ashtray) and cup holders located in the front dash console.

⚠ WARNING

Do not use the coin tray as an ashtray.

OUTSIDE REARVIEW MIRRORS

⚠ CAUTION

Adjust the outside rearview mirrors before driving.

After adjusting the front driver’s seat, adjust the outside rearview mirrors to your driving preference. Have someone help you adjust the mirrors in the desired direction for maximum rear visibility before driving. During travel, vibration may loosen the fitting holding the mirror(s), causing them to change position. As part of your regular motorhome maintenance, check and adjust the mirrors to the desired position.



**Remote Mirror Control /
Mirror Heat Control
(appearance may vary by
model)**

Power Remote Mirrors (if so equipped)

You can adjust the power remote mirrors when the ignition key is in the ON position.

1. Move the control knob to the side you want to adjust.
2. Press the control arrows in the direction you want the mirror to move.
3. Return the control knob to the center to lock the mirror(s) into place.

The power remote mirrors also contain heating elements to defog or de-ice the mirrored glass if needed. To activate this feature, use the “Mirror Heat” control located on the driver’s side console next to the mirror control joystick.



NOTE: Depending on models, the mirror control joystick and the Mirror Defrost toggle switch may be separated from each other. The Mirror Defrost switch may be renamed Mirror Heat.

REAR AND SIDE VIEW CAMERAS

The following is an overview of the rear and side view monitor system. For detailed operating and safety information, refer to the system manufacturer’s information in the Warranty Packet.

Your motorhome includes a rear vision camera and side view cameras and depending on your model may use different systems and be configured in different ways. All models include side view cameras that are automatically activated when the appropriate turn signal is operating.

There are 5 different backup camera systems depending on which model you have.


SECTION 4: VEHICLE OPERATION

⚠ WARNING

- Camera/monitor system aids in the use of, but does not replace vehicle side/rear-view mirrors.**
- Objects in camera/monitor view are closer than they appear.** When backing up, proceed cautiously and be prepared to stop.


System 1:

- Dual 9" touch screens on the dash.
- Camera controls in touch screen.
- Two side cameras on the body, one camera at the rear.
- All cameras are HD digital cameras.
- All cameras can be manually controlled.

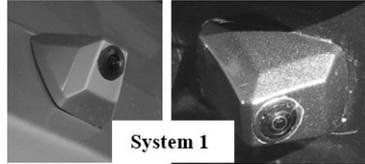


System 2:

- Dual 9" touch screens on the dash.
- Camera controls in touch screen.
- Two side cameras in the mirrors and a single rear camera.
- Side cameras are analog, rear camera is HD digital.
- All cameras can be manually controlled.

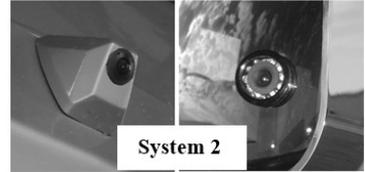


System 3:

- Single 9" touch screen in the dash.
- Camera controls in the touch screen.
- Two side cameras in mirrors.
- Two cameras mounted at the rear.
- All cameras are analog.
- All cameras can be manually controlled.

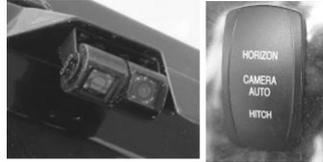

A rocker switch below the dash touch screen switches between the two rear cameras. The rear cameras are HORIZON view and HITCH view. One rear camera has a microphone allowing driver to hear behind the motorhome

- HORIZON - the camera that is pointed up is turned on which is looking "at the horizon".
- HITCH - the camera pointing down at the hitch.
- AUTO - the camera is in the HORIZON mode when vehicle is at rest, when put into reverse the HITCH mode is activated.

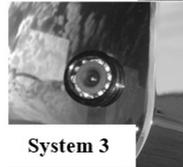

System 4:


- Single 9" touch screen.
- All camera controls are automatic and not user selectable.
- 2 side cameras in mirrors, 1 camera at the rear.
- All cameras are analog.
- Side cameras can only be activated with the



turn signals.

System 5:

- Dual 9" touch screens.
- Camera controls in touch screen.
- 2 Side cameras in body and 1 camera at rear.
- Side cameras are HD digital, rear camera is analog.
- Rear camera is controlled through the Total Vision Camera System and switches between HITCH view and REAR view.

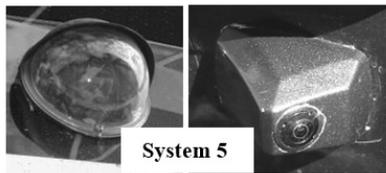


CLIMATE CONTROL SYSTEM (DASH)

Your motorhome has been equipped with an integrated heating / air conditioning system. It is designed to provide windshield defrost, heating and cooling for the front seat occupants only, and is not capable of heating and cooling the entire motorhome. Refer to the manufacturer's manual for detailed operating instructions and tips.

System Layout

The heater / air conditioner unit is located beneath the dash in the center or right side of the vehicle (viewed from driver seat). In most modes of operation the unit draws in fresh air from the outside and heats or cools it before discharging the treated air into the vehicle. Only in the **MAX A/C** mode does the system draw air from inside the vehicle.

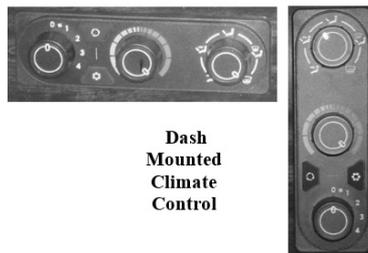

Operating Features

The air conditioning system is designed to operate in all modes except VENT, FLOOR, and OFF. This provides significant moisture, dust and pollen removal for enhanced passenger comfort.

NOTE: When outside ambient temperatures are below approximately 40° F, the A/C compressor may cycle rapidly. Use VENT mode instead of A/C in these temperature conditions to cool the interior air temperature. For operational safety in the event of the loss of vacuum, the HVAC system is designed to discharge air through the defrost vents to provide continuous windshield defogging.

Blower Motor

Blower motor switch (left side or top) has 4 positions, OFF (0), slow to fast (1-4).

Temperature Control

Center switch controls heating and cooling. Maximum cooling is all the way to blue side of the switch, maximum heat all the way to the red side.

Air Distribution – Mode Control

To achieve the maximum comfort in your motorhome, the air must be directed where it is needed. The mode switch (right side or bottom) gives the driver the ability to select where the air will flow.

SECTION 4: VEHICLE OPERATION

- **A/C ON/OFF:** Green button with the star icon next to it. Turns the air conditioning On and Off. MAX A/C Air is drawn from the passenger compartment (Re-circulated air) and discharged through the dash louvers. This position is used to provide maximum cooling, and is generally used during extremely hot weather conditions for initial cool-down periods. Because MAX A/C does not allow fresh “outside” air into the passenger compartment, it may cause fogging of the windows, and/or stale air, when used for prolonged periods of time. Switch to A/C mode periodically if these conditions occur. 
- **RECIRCULATE:** Green button with the arrows in a circle. Recirculates the air inside the cabin. 
- **VENT:** Outside air is drawn into the system and discharged through the dash louvers. For enhanced passenger comfort, upper-level ventilation air is also discharged through the defrost outlets. 
- **BI-LEVEL (VENT/FLOOR):** Outside air is drawn into the system and discharged through the dash louvers, floor, and defrost outlets. The A/C system operates in BI-LEVEL mode. 
- **FLOOR:** Outside air is drawn into the system and discharged through the floor outlets. In some models a small amount of air is directed to the windshield for defrost. The A/C system does not operate in FLOOR mode. 
- **MIX:** Outside air is drawn into the system and discharged through the floor and defrost outlets. The A/C system operates in MIX mode to provide windshield defogging. 
- **DEFROST:** Outside air is drawn into the system and discharged through the defrost outlets. The A/C system operates in DEFROST mode to provide windshield defogging. 

NOTE: In the event of a loss of vacuum, system will automatically switch to DEFROST MODE and divert all control of the system temperature and blower speed to the driver in such an occurrence.



CAUTION

Loss of vacuum effects many other functions of the vehicle as well as the heating system. In the event of loss of vacuum, the vehicle should be taken immediately to the nearest authorized service center for diagnosis and/or repair.

NOTE: Any repairs to the climate control system must be authorized by Entegra Coach or the system manufacturer. Refer to Section 10 of this manual for manufacturer information.

CAMPSITE HOOK-UP

- Refer to *Electrical Systems* section before connecting the shore line power cord (when using full hook-up) OR before starting the generator (if so equipped) or operating the vehicle on 12-volt power when dry camping.
- Refer to *Fuel & LP System* section before using the LP system. Open the LP gas tank valve (if so equipped) slowly. There may be air in the lines and five to thirty seconds of time is needed to bleed air before LP vapor fills the lines.
- Refer to *Plumbing Systems* section before connecting the fresh water supply or turning ON the water pump or water heater.
- When using full hook-up, connect the sewer hose to the campsite sewer hook-up.
- If applicable, start the refrigerator and the cooling or heating system.



NOTE: For extended dry camping, management of all your resources is essential. Check your battery levels and conserve battery power, use it sparingly

CHASSIS AIR BAGS

Check the inflation pressure of the chassis air bags weekly when using the motorhome and prior to traveling.

Driving with partially filled air bags will create an unsafe environment and can damage your motorhome. Refer to your Chassis Guide for more information on the air bags.

⚠ WARNING

Make sure the chassis air bags are completely filled before driving your motorhome.

HYDRAULIC LEVELING SYSTEM

⚠ WARNING

FAILURE TO ACT IN ACCORDANCE WITH THE FOLLOWING WARNINGS MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH!

- The leveling system is designed only for leveling the unit and should never be used to provide service for any reason under the motorhome such as changing tires or servicing the system. It is not recommended that you change a tire yourself.
- Check that potential jack contact locations are clear of obstructions or depressions.
- Keep people clear of the motorhome prior to turning the leveling system ON and while the leveling system is in operation.
- Never expose hands or other parts of the body near hydraulic leaks. High-pressure oil leaks may cut and penetrate the skin causing serious injury.
- After starting the leveling cycle it is important you or other occupants do not move around in the motorhome until the vehicle is level. Failure to remain still during the leveling cycle can affect the leveling jack system sensors.
- Never lift the wheels off of the ground when leveling the motorhome.
- Do not move the motorhome while the jacks are still in contact with the ground or extended. Damage to the vehicle could occur.
- Do not rely solely upon warning lights to determine the position of the leveling jacks. It is the operator's responsibility to check that all the leveling jacks are fully raised in the travel mode before moving the motorhome.

Typically located on left side of steering wheel. For detailed operating and safety information, refer to the manufacturer's user guide.

Leveling your motorhome is important for the following reasons:

- The water drainage systems are designed with proper slope and must be level for proper operation.
- The appliances perform best when level.

Before operating the leveling system: The motorhome:

- Must be parked on a reasonably level surface.
- Must have the parking brake engaged.
- Must have the transmission gear selector in NEUTRAL.
- Engine should **not** be running.



NOTE: All slide-out rooms should be fully extended prior to leveling the motorhome; rooms out, jacks down. Raise the jacks before retracting the slide-out rooms.

NOTE: The chassis air bags will automatically begin dumping when the jacks extend in either manual or automatic mode.

Operating the Leveling System


Auto Leveling Operation

- **Baseline Zero Point Calibration:** “Baseline zero point” is the term used to define the point at which the motorhome interior floor is level in the “X” and “Y” plains.
- The base line zero point has been preset from the factory. If the coach is not level following an attempt to auto level, you will need to reset the baseline zero point.

Setting the baseline zero point

NOTE: You do not need to have jacks deployed to set the baseline zero point.

1. Push and release the POWER keypad button to engage power. The LED next to the POWER button should be lit RED when power is on.
2. Level the coach by deploying jacks manually (using the DOWN keypad button, extend each jack until the coach is level), or by parking the coach on a level site.
3. Use a bubble level on a flat surface in the **center** of the coach as a reference.
4. Level the coach in both the “X” and “Y” plains (fore-aft and side to side).
5. Once level, turn the POWER off at the panel.
6. Depress and hold the AUTO-LEVEL keypad button.
7. Continue to hold the AUTO-LEVEL button and press and release the POWER button and listen for a series of beeps.
8. After the panel has beeped 5 to 6 times, release the AUTO-LEVEL button (the keypad will continue to beep as long as the AUTO-LEVEL button is held). The new baseline zero point has been set and the panel will maintain this setting.
9. Press and release the ALL RETRACT button to retract the jacks to the stowed position.

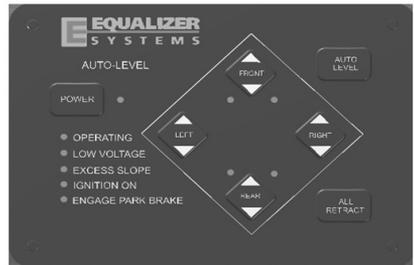

Hydraulic Control Panel

Power On: Push and release the POWER button to engage power. The LED next to the POWER button should be lit RED when power is on. You will need to have the ignition key in the “off” position to extend the jacks. If you attempt to extend individual jacks by pressing the ON button or all jacks with the AUTO-LEVEL button, you will hear a “deny” tone from the keypad if the ignition key is in the improper position.

SECTION 4: VEHICLE OPERATION

- **Auto Level:** Press the AUTO-LEVEL button and release. The system will send out a continuous series of beeps, the “OPERATING” LED will flash RED to let you know auto level is operating and will automatically level the coach. When completed, the keypad will signal a successful level with a dual-level tone. The keypad may be left on once level has been achieved. The keypad will enter “sleep mode” after five minutes of inactivity.
- **Retracting the Jacks:** The Equalizer System provides the ability to retract the jacks using the ALL RETRACT button or the UP button for each individual jack.
- All jacks will automatically retract and return to stowed position when the ALL RETRACT button is pressed and released. The pump will run in retract mode for 60 seconds (or 90) to ensure the jacks are fully stowed. You may allow the system to run for the entire programmed time and stop automatically, or you may stop the ALL RETRACT by pressing any button on the keypad.

Manual Operation

Power on: Push and release the POWER keypad button to engage power. The LED next to the POWER button should be lit RED when power is on. If you attempt to extend individual jacks by pressing the DOWN keypad button or all jacks with the AUTO-LEVEL button, you will hear a “deny” tone from the keypad if the ignition key is in the improper position.

- **Planting the Jacks:** Using the DOWN keypad button, extend each jack until they contact the ground (this is referred to as “planting” the jacks).
- As you extend the jacks, the LED lights on the keypad will indicate the jacks are out of the “stowed” position. Jacks may be operated individually or in pairs.
- **Do not manually overextend individual jacks. This may cause unwanted stress on the coach or the jacks.**
- **Leveling the Coach:** Use a bubble level in the center of the coach as a reference. Level the vehicle by using DOWN or UP keypad buttons until the vehicle is level. Jacks may be operated individually or in pairs as long as they are operated in the same direction.
- Do not attempt to lift the vehicle off of the tires. The keypad may be left “on” once level has been achieved. The keypad will enter “sleep mode” after five minutes of inactivity.
- **Retracting the Jacks:** The Equalizer System provides the ability to retract the jacks using the ALL RETRACT button or the UP button for each individual jack. All jacks will automatically retract and return to stowed position when the ALL RETRACT button is pressed and released.
- The pump will run in retract mode until all of the jacks are fully stowed (plus an additional 5 seconds) up to a maximum of 60 seconds. You may stop the ALL RETRACT by pressing any button on the keypad. Your coach is equipped with air suspension, and it is recommended that you start your coach before pressing ALL RETRACT allowing the chassis air to build. This will ensure adequate air supply to the chassis air valves.

Helpful Hints

- The ALL RETRACT function is a timed event. Pressing ALL RETRACT will cause the pump to run in retract mode for 60 seconds (or 90 seconds, depending on your specific system).
- Your leveling system is a microprocessor-controlled system. Proper and adequate battery voltage and permanent chassis ground are essential.
- Your system may be equipped with a manual override option. Refer to the procedure for proper operation of this option. It is usually better to review this procedure prior to its actual use, rather than having to learn a new procedure in difficult environments.
- If a jack comes out of the stowed position while traveling, the system panel will automatically activate and return the jack to the stowed position.



NOTE: There are specific instances when manual extension of one (or more) jack is inhibited (deny tone when DOWN is depressed). This situation is caused by the “anti-twist” protocol in the software contained in the control box. Simply stated, the “anti-twist” protocol denies jack extension if the system senses that a specific corner of the coach is approximately 3 degrees higher than the rest. You will be able to extend other jacks to overcome this slope. If the system incorrectly senses excessive slope, this can be overcome by re-setting the baseline zero point. This will allow manual extension of all jacks. *Remember to re-set the baseline zero point after manually leveling the coach.*

Panel Indicator LED

There are a total of ten (10) LED indicators on the Equalizer Keypad. The function of these LED’s is detailed below.

 CAUTION	
<input type="checkbox"/>	If the LOW VOLTAGE, ENGAGE PARK BRAKE, IGNITION ON or EXCESS SLOPE LED’s illuminate, you have an “error” condition that <u>must be corrected</u> prior to operating the jacks.
<input type="checkbox"/>	Make sure suspension air bags have deployed after retracting jacks. Visually check front and rear wheel wells for clearance.

During typical operation, the LED’s on the bottom left hand corner of the keypad should NOT be illuminated. The only LED that should light is the “OPERATING” LED, which should flash during operation.

POWER LED	ON Red when power is ON OFF when power is OFF FLASH every 5 sec. in Sleep Mode
JACK LED (4 each)	ON Red when Jack(s) are deployed OFF when jack(s) are stowed
OPERATING LED	FLASHING Red w/Auto Level or All Retract OFF when keypad is idle or “sleeping”
LOW VOLTAGE LED	ON Red when voltage is below 10.5 volts dc OFF when voltage is above 10.5 volts dc
ENGAGE PARK BRAKE LED	ON Red when park brake is not set OFF when park brake is set
IGNITION ON LED	ON Red when ignition is in the ON position OFF when ignition is OFF
EXCESS SLOPE LED	ON Red following an Auto Level attempt, if system cannot overcome slope OFF when slope is not excessive

SECTION 4: VEHICLE OPERATION

EMERGENCY STOPPING

Always carry road flares or reflective warning signs. Pull off the roadway as far as possible for emergency stopping. Turn ON your vehicle hazard warning flashers. If traveling at night, use three red warning indicators such as flares, reflectors or lanterns as required by the Uniform Vehicle Code and Model Traffic Ordinance as follows:

1. Place the first warning indicator on the traffic side of the recreation vehicle, directed at the nearest approaching traffic.
2. Place the second warning indicator 100 feet behind the recreation vehicle in the center of the lane and toward approaching traffic.
3. Place the third warning indicator 100 feet in front of the recreation vehicle in the center of the lane and away from the traffic approaching from behind.



NOTE: Curves and/or hills may affect the safe placement of warning indicators.

⚠ WARNING

For personal safety, always stand off the road and out of the way of traffic.

EMERGENCY TOWING

If your motorhome ever needs to be towed, refer to the instructions in your Chassis Guide. Please contact your road service provider (if applicable) or a qualified service facility for assistance.

Make sure the road service technician reads and is familiar with the information contained in your Chassis Guide regarding emergency towing.

⚠ WARNING

- Never allow anyone to go under the motorhome while it is being lifted by towing equipment.
- When the unit is being towed, be aware of the strap locations. Misplaced straps could result in damage to the exterior of your unit. Damage resulting from misplaced straps is the responsibility of the towing company, and is not covered by the unit warranty.

FRONT AXLE TIRE ALIGNMENT

The term alignment refers to both the adjustment angles on the steering axle and suspension and tracking of the rear axle. Steering components, suspension, wheel bearings and even proper loading will affect the alignment.

We recommend you have the front suspension and steering alignment checked and adjusted after you have fully loaded the vehicle according to your needs as part of the vehicle maintenance. Thereafter, it is your responsibility to have the alignment inspected periodically to maintain vehicle steering performance and prevent uneven tire wear as part of your normal maintenance.



NOTE: Always have the alignment checked and adjusted by a qualified shop with the proper equipment to handle heavy vehicles.



NOTE: A road test by the dealer should be included as part of the pre-delivery inspection. The dealer can check for and correct any steering problems before you take delivery.

After this road test has been completed, front-end alignment and/or vibrations will not be covered as part of the new vehicle limited warranty.

Follow the Chassis Guide maintenance instructions for the front and rear axle for wheel and suspension maintenance, including the brakes and wheel bearings. Contact your Chassis manufacturer for assistance.

WHEEL LUG NUTS/WHEEL LINERS

WARNING

- Check and tighten the wheel lug nuts regularly to make sure they did not loosen during travel.** Refer to your Chassis Guide for torque recommendations.
- Failure to tighten and maintain wheel lug nuts to the proper torque specification, could allow the wheels to come off while driving, resulting in serious injury or property damage in the event of a collision or loss of vehicle control.

Torque is the amount of rotating force applied to a lug nut, and can only be achieved by using a properly calibrated torque wrench and socket. **Do not** use a 4-way socket or any other type of wrench that does not measure the actual pressure applied to the lug nut.



NOTE: The proper method of tightening wheel lug nuts is with a torque wrench, not with an impact wrench or by hand. Because of the importance of having proper torque on the wheel lug nuts, you should always have the wheels mounted and properly torqued by a qualified technician using the proper tools.

After your first trip, check the wheel lug torque periodically for safety according to your Chassis Guide. If you suspect the wheel lug nuts have loosened at any time, have them checked and torqued to the proper limits immediately.

Lugs should be checked after winter storage, after a wheel removal, before starting a trip or following extensive braking. Refer to the *Wheel Lug Torque Chart*.

SECTION 4: VEHICLE OPERATION

Check and re-torque after the first 10, 25 and 50 miles (16, 40 and 80 kilometers). Thereafter, check and maintain the torque according to the listed torque values.

Wheel lugs

If you suspect or notice the wheel stud bolts are cracked or broken, they must be replaced, along with adjacent bolts that have probably also been weakened due to the additional stress placed on them.

Aluminum Wheels (if so equipped)

Clean the aluminum wheels with a cleaner that is designed for use on aluminum and apply an appropriate protection agent. Do not use abrasive cleaners. Wheels exposed to sea water or road chemicals should be cleaned as soon as possible. Be sure to use a sponge or chamois leather (brushes may damage the aluminum wheel surface).



NOTE: If your motorhome is equipped with aluminum wheels, only the outer dual wheels are aluminum, the inner duals are steel wheels.

TIRES

Read and understand the following before taking your first trip in your RV.

Routine maintenance on your RV is important. **To insure your tires are operating safely, regular inspection of the tires and checking tire pressures is absolutely mandatory.**

Alignment, balance and bearing wear will affect tire wear. Make sure to look for cracking, bulging, uneven tread wear, etc.

Tire Wear Diagnostic Chart

Wear Pattern	Cause	Action
 Center Wear	Over Inflation	Adjust pressure to particular load per tire catalog.
 Edge Wear	Under Inflation	Adjust pressure to particular load per tire catalog.
 Side Wear	Loss of camber or overloading	Make sure load doesn't exceed axle rating. Align at alignment shop.
 Toe Wear	Incorrect toe-in	Align at alignment shop.
 Cupping	Out-of balance	Check bearing adjustment and balance tires.
 Flat Spots	Wheel lockup & tire skidding	Avoid sudden stops when possible and adjust brakes.

 **CAUTION**

Tire wear should be checked frequently. Once a wear pattern becomes firmly established in a tire it is difficult to stop, even if the underlying cause is corrected.

Tire pressure

 **DANGER**

Failure to follow proper inflation guidelines may result in tire failure, which, under certain circumstances can cause loss of vehicle control or accidents that may result in property damage, bodily injury and/or death.

You must follow the manufacturer's inflation guidelines for maximum load capacity; under-inflation is just as dangerous as over-inflation.

Proper inflation should be monitored closely. Failure to do so could result in the overheating of a tire causing a blowout. Inflation pressure should be as recommended by the tire manufacturer or as the federal label for the recreation vehicle indicates.

When you are using your Recreational Vehicle, check inflation pressure weekly. Pressure should be checked when the tires are cold. During travel, tires heat up and pressure increases. **Do not bleed air from hot tires or your tires may then be under-inflated.**



NOTE: Cold tire inflation pressure is defined as a tire that has not been used for three or more hours, or has been driven less than one mile. Tire inflation pressure of a hot tire may show an increase of as much as 6 psi over a cold tire.

 **WARNING**

- It is recommended that the tire pressure be checked at the beginning of each trip to obtain the maximum life of the tire. Follow the instructions listed on the Federal Certification label, to determine the correct tire pressure. Under-inflation may cause tire failures and swaying resulting in loss of control, injury, death or property damage.

TOWABLE PRODUCTS ONLY

- Towable recreation vehicles are equipped with special trailer (ST) tires that have a maximum speed rating of 65 MPH (104 km/h). **You should not exceed this speed rating.** Exceeding the tire speed rating may result in tire failure, which could lead to an accident causing serious injury or death.

CHANGING A TIRE

⚠ WARNING

- ❑ The motorhome is very heavy. Raising the motorhome to replace the spare tire should only be done with extreme caution by a qualified technician. The vehicle could slip, causing personal injury or death. **DO NOT ATTEMPT TO DO THIS YOURSELF.**
- ❑ Do not use the hydraulic leveling jack system to support the motorhome while under the vehicle or changing tires. The hydraulic leveling system is designed as a leveling system only. Do not use the hydraulic leveling jack system as a jack or in conjunction with a jack. It is highly recommended that, should a tire change be required, it be performed by a knowledgeable, trained professional. Attempts to change tires while supporting the motorhome with the hydraulic leveling jack system could result in damage to the motorhome and risk causing serious injury or death.
- ❑ When replacing a tire, make sure to replace it with a tire of the same size and specifications (refer to your Chassis Guide for assistance.)

If you experience a flat tire on your motorhome while driving, gradually decrease your vehicle speed (if possible), and move the motorhome to a safe place on the side of the road. Contact your road service provider (if applicable) or a qualified service facility for assistance. **Do not attempt to change the tire or jack the motorhome up yourself;** this is why a jack and a spare tire have not been included with the motorhome.

Make sure the road service technician reads and is familiar with the Chassis Guide information regarding changing the tires. Make sure the wheel lug nuts have been tightened to the proper torque as outlined in your Chassis Guide.

AWNINGS (IF SO EQUIPPED)

⚠ WARNING

Awnings must be closed (and locked if applicable) while the motorhome is in transit.

⚠ CAUTION

The effects of wind and rain on an awning are unpredictable and can cause severe damage to the awning and/or the recreation vehicle. **Retract the awning if:**

- ❑ If wind or extended periods of rain are expected
- ❑ If you leave the RV unattended for a length of time, to avoid unexpected climate conditions.

Awning Care

Keep your awnings clean and in good condition to prevent costly repairs.

- Periodically check that the fasteners are tight. Tighten if necessary.
- Keep the awning fabric clean. For detailed cleaning information, refer to the manufacturer's owner information.

Your recreation vehicle may include one or more of the following options:

- Power window awnings
- Slide out awnings
- Power awning over entrance door

Power switches to operate the awnings are typically found in the control panel above the entrance door.

Electric Patio Awning With Remote Control



NOTE: The electric awning requires connection to a 120-volt power source. Make sure you have sufficient power available before operating your awning (refer Electrical Systems, Calculating electrical load).

In Motion Detector (if so equipped)

Some patio awnings are equipped with a motion detector. If the patio awning experiences extreme or excessive movement, it will automatically retract to the travel mode position.

For detailed safety and operating information, refer to the manufacturer's user guide.

SECTION 4: VEHICLE OPERATION

Notes:

ELECTRIC SLIDE ROOM(S)

The mechanical components of the slide out room(s) are gear driven and designed to work on 12 volts DC.

⚠ WARNING

Make sure the interior slideout room path and the slideout room itself is clear of people and objects before operating. Keep away from the slide rails and gear assembly when the room is in motion. They may pinch or catch on loose clothing causing personal injury. **Failure to follow these instructions could result in serious injury or death.**

⚠ CAUTION

The following guidelines should be used when using your slideout room:

- DO NOT OVER EXTEND OR RETRACT THE SLIDE OUT ROOM.** Release the switch immediately once the room has been fully extended or retracted. Do not wait until you hear the motor stop. Over extending or retracting the slide out room may result in damage to the stop rod and bracket
- The recreation vehicle **must be level** before operating the slideout room. Water leaks and other problems could result if the slideout is operated without leveling the RV.
- Do not place excessive weight** in the slideout room. It can cause the slideout room to malfunction and cause damage to the slideout.
- Do not over extend/retract the slide out room. Release the switch immediately once the room has been fully extended/retracted. Over extending/retracting the slide out room may result in damage to the stop rod and bracket.
- Additional support jacks are not needed under the slideout. Damage can occur to your slideout room from improper use of aftermarket support jacks.



NOTE: The slideout rooms should be extended (with the air suspension fully aired up) before leveling jacks are deployed. Wheels **MUST** be straight. When the coach is leveled, air bags are dumped of air which lowers the fenders below the tops of the wheels. If wheels are not straight, fenders and/or tires **WILL** be damaged. This is a very expensive repair to make. **DO NOT DUMP AIR FROM AIR BAGS UNLESS WHEELS ARE STRAIGHT!**

SECTION 5: SLIDEOUT SYSTEMS

Operating the slideout rooms

Each slideout is equipped with a separate control switch. The control switch(s) for both coach (front) slideout rooms are located in the entrance door overhead control panel and on the VegaTouch screen on certain models.

To extend the slideout rooms, press and hold “EXTEND” on the extend/retract switch. The slideout rooms will not extend unless this switch is held down. The slideout room will stop on its own when fully extended. Press and hold “RETRACT” on the extend/retract switch again to reverse the process.

If the slideout rooms will not extend or retract, contact Entegra Coach Customer Service at 1-800-517-9137, or contact a reputable dealer service facility. If it is after normal business hours, contact Coach Net for assistance. Do not attempt to service the slideout system yourself.

THE ELECTRICAL SYSTEM

The RV electrical system is comprised of two independent electrical systems. One operates off of 12-volt DC power and the other off of 120-volt 60hz AC power. All installations have been made in compliance with industry standards applicable on the date of manufacture. Because the electrical equipment and associated circuitry are engineered into a dedicated system specific to your RV, do not make unauthorized changes or add fixed appliances to it. **Changes or additions made after delivery may result in a hazardous condition.**

Service and/or modification of the electrical system should only be performed by qualified electrical technicians using approved materials, components, and methods meeting current safety and code requirements. Consult your dealer's service department for assistance.

To read more about the various components incorporated into the RV electrical system, please refer to the information contained in your Warranty Packet.

For motorized vehicles, consult the Chassis Guide for information pertaining to the chassis drivetrain electrical system.

Electrical System Maintenance

Before working on the electrical system:

- Make sure the inverter/charger (if so equipped) is turned "off" before disconnecting batteries. Disconnect the shore power cord.
- If equipped with a generator, turn off the generator and disable the automatic generator start functionality (if so equipped).
- Turn off the battery disconnect switch (if so equipped)
- Turn off the 120V main circuit breaker.
- Disconnect the negative 12VDC battery terminal from the battery.

WARNING

Use caution when using metal tools. If a tool contacts a battery terminal or metal connected to it, a short circuit could occur which could cause personal injury, explosion or fire.

IN CASE OF AN ELECTRICAL FIRE

WARNING

Do not attempt to use water to put out an electrical fire. Water can spread some types of fire, and electrocution is possible with an electrical fire.

EVERYONE SHOULD EVACUATE THE RV IMMEDIATELY:

- Switch the 120-volt main circuit breaker to the "off" position. **It is important that everyone knows where to find the main circuit breaker and how it operates.**
- Disconnect the negative battery cable(s) at the battery.
- Disconnect the power cord from the shore power receptacle.
- Turn "off" the generator (if so equipped).

Always have faulty or damaged wiring and electrical components repaired immediately.

SECTION 6: ELECTRICAL SYSTEM

CONTROLS AND SWITCHES

Your motorhome is equipped with various switches and controls that allow you to operate and monitor the systems in your motorhome.

Information on these controls and their location will be provided throughout this manual. Additional information on the various components can be found in the component manufacturer's user guide.

GFCI RECEPTACLE

There is a ground fault current interrupter (GFCI) engineered into the electrical system. It is designed to reduce the possible injury caused by electric shock. The GFCI will not protect against short circuits or circuit overloads.

Test all GFCI receptacles monthly:

Push in the GFCI "TEST" button. The GFCI "RESET" button should pop out indicating the GFCI receptacle has been "tripped" and interrupted 120-volt power.

Push in the GFCI "RESET" button to restore 120-volt power.

Contact your independent dealer for assistance if the GFCI "RESET" button does not restore 120-volt power and pops back out.

A "tripped" GFCI breaker indicates that abnormally high 120-volt current flow (a ground fault) was detected. All ground faults must be repaired before use of the recreation vehicle. If the GFCI "RESET" button does not restore 120-volt power and pops back out. Contact your dealer for assistance.

COMPONENT CONTROL SYSTEM(S)

Firefly Multiplex Light & Shade Control (if so equipped)

The multiplex lighting and shade control system (Spyder/Firefly system) operates most interior/exterior lights and power day/night shades. This allows components of the system to be operated from multiple locations throughout the coach. It is programmed to allow the operation of individual components or multiple components as a group.

Switch functionality

The "Main Power" switch located adjacent the entry steps must be turned "on" to enable operation of the multiplex system.

Wall mounted switches controlled by the multiplex system are intended for use as follows:

- Turn fixed intensity lights on/off: momentarily press the right side of the appropriate switch to turn the lights on, and momentarily press the left side of the switch to turn them off.
- Turn dimmable lights on/off: momentarily press the right side of the switch to turn the lights on to the intensity that they were outputting during the previous "on" cycle, or hold the right side of the switch down to brighten the lights to the desired intensity. Dim the lights by holding the left side of the switch down until the appropriate lighting intensity is obtained, or turn the lights off by momentarily pressing the left side of the switch.
- Turn all interior lights on/off: momentarily press the right side of the "Light Master" switch to turn the lights on to the same intensity as the previous on cycle. Turn all interior lights "off" by momentarily pressing the left side of the switch.
- Extend/retract power shades: momentarily press the down arrow of the appropriate switch. A second momentary press of the same down arrow on the switch will stop shade operation. To retract the shades, momentarily press the up arrow of the appropriate switch. A second momentary press of the same up arrow on the switch will stop shade operation.



NOTE: Operation of front cab area power shades is limited or disabled when the chassis ignition key is turned to the on position to prevent unintended shade extension while driving.

There are breaker (G6A) panels associated with the multiplexed system. They are typically located in the bathroom; above the entrance door or in the (exterior) generator compartment.

Vegatouch® System (if so equipped)

Certain Class A models are equipped with a touch screen system capable of controlling various components or systems in the RV. There are two systems in use, one for certain luxury Class A models, and another for certain standard Class A models.



NOTE: Not every Class A coach (luxury or standard) will incorporate a touch screen system.

The following systems/components may be controllable from the touch screen:

- Tank monitors
- Day/night shades
- Lighting (interior & exterior)
- Generator operation
- AC and DC Power including inverters, and battery charge status
- Water Pump, Water Heater and Aqua-Hot system
- All audio/video components, satellite dish & security cameras
- RV Heating and cooling system
- Awnings and Slide-outs
- Settings for the touch screen (time, date, clock, background, etc)
- Built in help screens for every function



NOTE: The Vegatouch® system may have periodic updates and/or downloads available. The age of your device or hardware configuration changes may prevent your device from accepting or installing a new system update. If you receive notification that an upgrade is available, please contact Fire Fly Integrations for further information.

Fire Fly Integrations For detailed operating information on the touch screen system, refer to the Vegatouch® User's Guide included in your warranty packet or online at www.fireflyint.com.

SECTION 6: ELECTRICAL SYSTEM

Vega Touch screen for luxury Class A



Vega Touch screen for standard Class A



POWER CONTROL (ENERGY MANAGEMENT) 50A SYSTEM

Key Features of the Power Control System include:

- Helps owners who use 50 Amp service, to deal with the campgrounds where 30 Amp service is available. Limits total current to 30 Amps when 50 Amp service is not available.
- Minimizes circuit breaker tripping
- Monitors current draw for the entire RV including loads added by the owner.
- Learns controlled appliance current draw.
- Allows (2) air conditioners to run on 30 Amp service when other appliances are not in use. Panel has built in relays to control (2) air conditioners.
- Has built in 120VAC sense circuitry so it knows when shore power is available and does not draw on the battery when dry camping.
- All relays are normally closed allowing full operation of appliance in case of fault.

Operation

This system monitors incoming power and has the ability to turn off a few select loads. It can manage incoming power and avoid tripping the shore circuit breaker.


When plugged into full 50 Amp shore power, or if the generator is running, the system does nothing as there is ample power available to operate all circuits in the RV and management is not required.

When the RV is plugged into a 20 Amp or 30 Amp power supply, the system will attempt to keep the total coach 120 VAC current draw under a threshold to prevent tripping the shore circuit breaker. The AC Amp readout on the display tells you how much current is flowing through the system so you can compare it to the shore power the coach is connected to. When 30A is illuminated on the display, press the "Select" button and toggle between 20A and 30A service. The status window illuminates each of the appliances that it controls. If the indicator is not lit, that means the PCS system has temporarily removed power to prevent the circuit breaker from tripping.

The system has the ability to turn off the following electrical items:

- Electric Water Heater.
- The (3) air conditioner systems (front, rear, and mid coach).

For additional information, contact Customer Service.

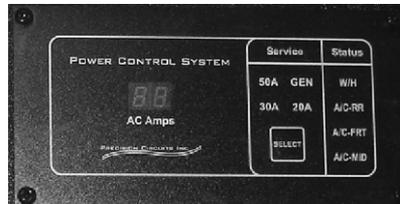

50A System Panel

TESTING THE CAMPSITE POWER CONNECTION

The campsite 120-volt power receptacle(s) should **always** be tested for proper functionality prior to plugging the recreation vehicle shore power cord into it.

Campsite 120-volt power receptacles can be tested using a digital multimeter or a dedicated circuit analyzer. Dedicated circuit analyzers plug directly into the campsite power receptacle and minimally test for open neutral, open ground, and correct polarity. **Polarity indicators can be purchased in most electrical and hardware stores.**

WARNING

Do not hook up the power cord to any receptacle until you have verified proper polarity and grounding.

DO NOT plug the shore power cord into a campsite receptacle(s):

- That has reverse polarity
- With non-functioning ground circuits
- That shows outward signs of heat damage.
- Doing so may result in property damage or serious injury. Plugging the shoreline power cord into an incorrectly wired power source could damage the recreation vehicle electrical system and result in severe or fatal injury. Damage or injury resulting from connection to malfunctioning or improperly wired power sources is not covered by your recreation vehicle warranty.

DO NOT

- Do not use any cheater plug, adapter or extension cord to reconfigure incoming AC power or break the continuity of the circuit connected to the grounding pin.
- Do not connect the power cord into an outlet that is not grounded, or adapt the power cord plug to connect it to a receptacle for which it is not designed.
- Do not remove the grounding pin to connect to a non-grounded receptacle. Removal of the ground pin disables an important safety feature designed to prevent shock and electrocution hazards.
- Do not connect the power cord to an extension cord. Use of an improper extension cord will cause overheating of the cord as well as potentially causing premature failure of the AC equipment.
- The power cord must be fully extended when in use and not left coiled in the electrical compartment or on the ground. If the power cord is left coiled, it may potentially create enough heat to melt its protective casing.

It is the responsibility of the owner of the electrical receptacle to ensure that the receptacle is properly wired and grounded. **Reverse polarity and/or improper grounding of your RV can cause property damage or serious personal injury.**

SECTION 6: ELECTRICAL SYSTEM

Connecting The Power Cord

Always test the external power source (i.e., the campsite power receptacle or electrical box) with a ground monitor before connecting your power cord to it. If the ground monitor indicates 'reverse polarity' or an 'open ground' DO NOT connect the power cord.

To help prevent power surges from damaging the connected loads, please follow these instructions when hooking up to the external power source:

1. Turn "off" the load center main 120-volt circuit breaker.
2. Carefully extend the entire length of the power cord (approximately 25'-35') from the electric cable hatch to the external power source.
3. Plug the power cord into the receptacle. Be sure all the power cord prongs are properly plugged into the receptacle.
4. Return to your RV and turn "on" the load center main circuit breaker.

The shore line power cord should be unplugged when the recreation vehicle is left unattended. If something would happen to the electrical system, this may help limit potential damage.

When you are ready to leave, reverse the power cord connection process. Use care to prevent damaging the power cord electrical connection pins when connecting or disconnecting the shore line power cord. Grasp the plug to remove the power cord from the outlet; do not unplug it by pulling on the cord.

Maintenance

Inspect the power cord for cuts, cracks and worn insulation. Have the power cord replaced immediately if these symptoms are noticed.

INVERTER/CHARGER

Your motorhome may have multiple 12-volt DC to 120-volt AC inverter/charger(s) installed that are designed to temporarily run selected 120-volt appliances from house auxiliary battery power.

The inverter/charger(s) is located between the chassis frame rails in the cargo storage area, and the remote control panel to operate the inverter/charger is located in the cabinet above the entry door. 120-volt circuit breakers protecting inverter/charger output circuits are located in the sub-panels(s) inside the cabinet above the driver's seat. Circuit breaker labeling near the sub-panels indicate which appliances can be operated from inverter/charger power. Refer to *Power Cut Out Switch* section for location of inverter disconnect switches.

Inverter/charger 120-volt AC output may be of the modified or pure sine wave type depending on the inverter/charger installed in the motorhome. Both types of inverter/chargers will operate most appliances, tools and other 120-volt AC equipment. Some appliances with timing circuits may not operate correctly on modified sine wave power.

The inverter/charger also functions as a multi-stage 12-volt power converter/battery charger when the motorhome is connected to 120-volt shore power or when the generator is running. In this mode the inverter/charger charges the house auxiliary batteries. It can also charge the chassis batteries when the generator is running.



Inverter control panel

⚠ WARNING

The inverter/charger generates heat while operating and needs unrestricted air flow for proper cooling. Do not store anything around or on top of the inverter/charger that would restrict air flow around it.

NOTE: If your motorhome is equipped with the Vegatouch system, the inverter controls are located on the system display. Refer to the Vegatouch user guide in your warranty packet or online at <http://www.fireflyint.com> for specific instructions.

Inverter/Charger remote controls

The inverter/charger remote control panel is typically located in the cabinet above the entrance door of your motorhome. To enable automatic inverter operation during power blackout or brownout conditions leave the inverter/charger(s) in “INVERTER” mode at all times. The inverter/charger is in “INVERTER” mode when the green “INV” light on the remote control panel is illuminated.

When in “INVERTER” mode the inverter/charger(s) will be on standby when the motorhome is connected to 50 amp 120-volt AC shore power or when the generator is operating. All connected appliances operate off of shore power or generator power during this time. If shore power is interrupted and the generator isn’t running, the inverter/charger(s) will automatically activate providing 120-volt AC power to connected appliances. See the inverter/charger owner’s manual for additional information.



Vega Touch inverter display

Inverter/Charger battery charging function

The inverter/charger functions as a multi-stage battery charger when the motorhome is connected to 120-volt AC shore power or when the generator is operating. The inverter/charger automatically senses auxiliary battery condition and applies the appropriate battery charging profile.

In the event the motorhome auxiliary batteries become completely discharged, the inverter/charger will be unable to sense battery voltage and will not begin its charge sequence. To manually initiate charging, turn the chassis ignition key to the “on” position for a short period of time. If the batteries do not charge, or fail to hold a charge, they may be defective. See the inverter/charger owner’s manual for additional battery charging information.

NOTE: Leaving the inverter/charger in the “on” position when the motorhome is in prolonged storage (no 120-volt AC shore power connected) will drain the auxiliary batteries even though all 120-volt AC appliances are turned off.

SECTION 6: ELECTRICAL SYSTEM

Inverter/Charger fault conditions

Certain fault conditions will cause the inverter to shut down.

These conditions include:

- High or low battery
- Power consumption overload
- Inverter overheating
- Inverter internal fault



Inverter

Refer to the inverter/charger owner's manual for fault code diagnosis and resolution.

NOTE: High battery voltage may be caused by excessive or unregulated voltage from solar panels and/or other external battery charging sources.

Inverter/Charger 12-volt DC fuse

Each inverter/charger and its 12-volt wiring are protected by a replaceable high current fuse typically located on the frame rail near the auxiliary battery bank. A 2000 watt inverter/charger will be protected by a 300 amp fuse and a 2800 watt inverter/charger will be protected by a 400 amp fuse



Inverter Fuse

Fuse Inverter/Charger integral 120-volt AC circuit breakers

The inverter/charger is equipped with integral 120-volt AC circuit breakers located on the inverter/charger metal case. In overload conditions these circuit breakers will trip and interrupt inverter/charger 120-volt AC input and/or output.

After correcting the overload condition, reset these circuit breakers to resume inverter/charger 120-volt AC operation. Refer to the inverter/charger owner's manual for additional information.

12-VOLT DC SYSTEM

The majority of your motorhome lighting is powered by 12-volt electricity. The 12-volt DC system is composed of components that will operate when the following conditions are met:

- Power is supplied by the chassis alternator when the chassis engine is running.
- The power converter will supply interior 12-volt DC power when the shore power cord is plugged into a 120-volt external power source. The converter will also charge the house batteries in most situations.
- The house batteries power many interior 12-volt components including the lighting fixtures, water pump, 12-volt motors, 12-volt appliances, etc, when the motorhome is not connected to a 120-volt power source.

⚠ WARNING

Replacement fuses must be of the same voltage, amperage rating and type. **Never use a higher rated replacement fuse;** doing so may cause a fire by overheating the RV wiring.

12-Volt Fuse Panel

The 12-volt fuse panel is labeled to indicate fuse sizes, positions and the components powered. Fuses are located in the load center.

Replacing a Fuse

Before replacing a fuse, always turn off the electrical components protected by it.

1. Disconnect the shore power cord.
2. Turn “off” the inverter (if so equipped).
3. Disconnect the house or auxiliary batteries main negative battery cable.
4. Remove the fuse panel cover to check fuses.
5. Pull the fuse straight out of the fuse block.
6. Insert a new fuse of the same specified voltage, amperage rating and type in the original location.

The fuse panel label should be kept permanently affixed to your recreation vehicle. Fuses will not offer complete protection of the electrical system in the event of a power surge or spike.

12-Volt DC Outlet

There may be one or more 12-volt DC power outlets in your recreation vehicle. When the 12-volt DC outlet is used as a power source for an electric appliance, make sure the appliance operates on 12-volt DC power and that it consumes less than 60 watts (5 amps) of power.

WARNING

Keep the protective dust cap on the 12-volt DC outlet when not in use to prevent ingestion of foreign material and potential short circuit conditions.

BATTERIES

WARNING

- ❑ **Do not store anything inside the battery compartment(s)** or near the batteries that could touch the battery or battery cable terminals. Contact with the battery or battery cable terminals could cause an electrical short circuit, discharge the batteries, or start an electrical fire.
- ❑ **Keep sparks, cigarettes and flames away from the batteries as the hydrogen gas they create may explode.** Do not connect a booster battery or other power source that outputs more than 14.2-volts DC to the motorhome batteries. Use adequate ventilation when charging or using batteries in an enclosed space.
- ❑ Remove metal jewelry and always wear eye protection when working around batteries.
- ❑ **Do not allow battery electrolyte (acid) to come into contact with skin, eyes, fabric or painted surfaces.** Electrolyte is a sulfuric acid solution that could cause serious personal injury or property damage. If your hands, eyes, clothes or the painted surface of your motorhome are exposed to electrolyte, flush the exposed area thoroughly with water. If electrolyte gets in your eyes, immediately flush them thoroughly with water and get prompt medical attention.
- ❑ **Make sure the inverter/charger is turned “off” before disconnecting the negative battery cable from the battery bank.** Keep the batteries out of the reach of children.

House Batteries

Your motorhome is equipped with Group 27 deep cycle batteries.

Unless a battery has been fully discharged, house auxiliary batteries are normally charged in one of two ways:

- ❑ The chassis alternator charging system supplies power to the house auxiliary batteries when the engine is running and the chassis batteries are sufficiently charged.
- ❑ When the power cord is plugged into 120-volt shore power, or when the generator (if equipped) is operational, the inverter/charger functions as a battery charger and will automatically charge the house batteries when required.

See the Chassis Guide for information pertaining to the chassis batteries and the drive-train electrical system.

House auxiliary battery voltage can be checked using the inverter/charger remote control panel located in the cabinet above the entrance door of your motorhome.

A fully charged battery will read 12.65 volts DC with a specific gravity of 1.265 at 80°F (32°C). A battery is considered discharged at 11.89 volts DC or when it has a specific gravity of 1.120 or less. When voltage drops to 11.89 volts, irreversible battery damage can occur.

Dry Camping

House auxiliary and chassis batteries should be fully charged prior to dry camping. When disconnected from 120-volt shore or generator power (i.e., while dry camping or tailgating) all electrically operated appliances and accessories must be used sparingly. During this period these appliances and accessories are being powered by the house auxiliary batteries directly, and/or indirectly through the inverter/charger.

If excessive amounts of power are drawn from the house auxiliary batteries, either as small applied loads over an extended period of time or as high applied loads for a short period of time, they will become deeply discharged. Permanent battery damage will occur after repeated deep discharge cycles.

Battery Reserve Capacity

Typically, a four battery bank of 6-volt CG-2 deep cycle batteries connected in a series/parallel arrangement to create 12-volts, has a 75 amp discharge rate reserve capacity (RC) rating of around 420 minutes.

This same house auxiliary battery bank will have a 25 amp discharge rate reserve capacity (RC) rating of around 1530 minutes. If your motorhome has an eight battery bank of 6-volt CG-2 deep cycle batteries, the reserve capacity minutes listed above are doubled.

General usage information (using estimated ratings)

If you have 15 each 12-volt 20-watt halogen lights (1.67 amps each light x 15 lights = 25.05 amps) operating in your motorhome, the four battery bank of batteries would operate those 15 lights by themselves for 1530 minutes (25.5 hours) before the batteries were fully discharged. Likewise, a 12-volt load of 75 amps could be operated for 420 minutes (7.0 hours) before the batteries were fully discharged.

12-volt loads drawn from the battery bank(s) while operating 120-volt appliances through the inverter/charger can approach 300 amps on a single inverter/charger equipped motorhome, and 700 amps on a dual inverter/charger equipped motorhome. Complete battery discharge will occur quickly when inverter/charger loads are applied.

Batteries discharge at a faster rate the deeper they become discharged. To minimize battery discharge:

- When disconnected from 120-volt shore or generator power and not requiring the operation of 120-volt appliances or equipment, turn the inverter/charger remote control panel to the “off” position.
- Custom configure your inverter/charger’s remote control panel (see the inverter/charger owner’s manual) to best meet your power usage profile.

Battery Inspection and Care

Check the level of electrolyte in each battery cell once a year. Add distilled water as needed to reach the split-level marker on each battery. Keep batteries and battery terminals clean and tight.

Check the external condition of the batteries periodically. Look for cracks in the cover and case. Make sure battery vent caps are tight and replace them if they are cracked or broken.

Battery storage instructions

To prevent house auxiliary battery discharge when your motorhome will not be connected to shore power for extended periods of time, it is recommended you turn “off” the 12-volt battery disconnect switch, or “main power switch,” and disconnect each battery bank at the negative battery cable running to the chassis frame.

During storage, it is important to check the voltage of your batteries at least monthly using the inverter/charger remote control panel if the negative battery cables remain connected. Check with a multi-meter when the battery negative cables aren’t connected. Re-charge all batteries to 12.65 volts as needed. If you remove the batteries from the motorhome, store them in a dry, cool area.

Battery Replacement

If house batteries need to be replaced, only deep cycle batteries of the same size and type should be installed. Refer to the Chassis Guide for information on chassis battery replacement.


For more information on the house batteries, contact the battery manufacturer.

SECTION 6: ELECTRICAL SYSTEM

Battery Disconnect Solenoid Switch (House Battery Disconnect)

The battery disconnect solenoid switch, or “main power switch,” is located near the entrance door on the front of the passenger’s console. This switch lights up red when turned on.

There may be a second rocker switch located at the driver console labeled “HOUSE”. The House and Main Power switches both perform the same function and are used to disconnect the motorhome from house auxiliary battery power during periods of storage and/or during electrical system service. Certain models will not include the “HOUSE” power switch.

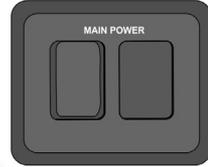

Battery Disconnect Switch



NOTE: The combination carbon monoxide/propane alarm must be connected to a constant 12-volt power source. The carbon monoxide/propane alarm remains operational when the battery disconnect solenoid switch, or “main power switch,” is in the “off” position.

The power steps at the entrance door will also continue to work with these switches in the “OFF” position.

Battery Isolation Manager

Your motorhome is equipped with a Battery Isolation Manager (BIM) that monitors the battery voltage of both the chassis and house batteries over long periods of time. If it senses a charging voltage it connects the two batteries together. If the charge system is overburdened, it isolates both batteries. When batteries have reached a float charge state for (1) hour, the batteries are isolated to prevent overcharging. It will reconnect if either battery drops to approximately 80% charge and the other is being charged. If batteries are not being charged they will be isolated to prevent an electrical draw in one system from depleting the other battery.

Auxiliary (Battery Boost) Start System

The “Battery Boost” switch is a manual override of the Battery Isolation Manager. It can be used in an emergency (when chassis or house batteries are discharged) to start the chassis engine or the generator.

To operate, press the Battery Boost start switch located on the driver’s left side console. While the battery boost switch is pressed, use the ignition key to start the chassis engine or the generator switch to start the generator. Release the battery boost switch once the engine or generator has started.



If your chassis and house batteries are too discharged to start the engine or generator with this method, they need to be recharged with the on-board inverter/charger or by connecting the motorhome to shore power.

Battery Disconnect Switch (if so equipped)

Certain motorhome models will have a battery disconnect switch like that shown here.



Battery Disconnect Switch

The Battery Disconnect switch is typically located in an enclosed exterior compartment. This switch does not shut off all power, but only shuts off the 12VDC power to the main 12V fuse panel, and the interior of the vehicle. Batteries can still be trickle charged by the converter, and there will still be power to some devices.

Rotate the center section of the switch to “0” for OFF, or rotate to the right to the “1” position to turn power ON.

AUTOMATIC TRANSFER SWITCH (ATS)

Your motorhome is equipped with an Automatic Transfer Switch. The ATS is microprocessor controlled and will automatically detect which power source is being used (generator or shore power) and allow power from that connection only. You will not have to plug and unplug power to the coach if you decide to run the generator.

If you plug into shore power, the ATS will pass power on through to the RV. If you start the generator, it will override the shore power input (called generator dominant) and supply the RV with electrical power from the generator. When the generator is shut down, shore power is again restored.

There may be a slight flicker of the lights when the ATS changes over from one to the other, but essentially power is constant and there is no real interruption of power.

The ATS will disconnect from shore power completely if the power coming in is not high enough quality (i.e. either low/high voltage, or low/high frequency).

When the generator is operating, it powers the inverter/charger which in turn functions as a multi-stage battery charger to charge the house auxiliary and chassis batteries.



NOTE: The diesel (or gas) generator requires 12-volt power from the house auxiliary batteries to start, and draws diesel fuel (or gas) to operate from the chassis fuel tank. If the fuel level in the chassis fuel tank drops to or below $\frac{1}{4}$ full, the generator will automatically shut “off” and cannot be re-started until the fuel tank is filled to above $\frac{1}{4}$ full.

SECTION 6: ELECTRICAL SYSTEM

120-VOLT CIRCUIT BREAKERS

The 120-volt AC circuit breakers located inside the load center protect all 120-volt wiring and components from circuit overloads and short circuits. Should a circuit overload or short circuit occur the circuit breaker protecting the affected circuit will “trip” preventing the flow of electricity through that circuit.

If a circuit breaker trips, shut “off” the appliance on that circuit (i.e., power converter etc.) and allow the circuit breaker to cool down for a brief period of time. After it cools down, reset the circuit breaker by moving its lever “off” and then back to the “on” position. If the circuit breaker re-trips or frequently trips, contact your dealer to have the electrical problem diagnosed and repaired.

A circuit breaker identification label is permanently attached to the inside surface of the 120-volt Load Center.



NOTE: Load Centers may not always include a main circuit breaker.



CAUTION

Circuit breakers and fuses will not offer complete protection of the electrical system in the event of power surge or voltage spike.

Replacement

Only replace circuit breakers with those of the same specified type, voltage, and current rating. **Never replace a circuit breaker with one listed at a higher amperage rating.** Please contact your dealer for repair assistance when replacing circuit breakers.



WARNING

Replacement circuit breakers must be of the same voltage, amperage rating and type. Never use a higher rated replacement circuit breaker; doing so may cause a fire by overheating the RV wiring.

Maintenance

At the beginning of camping season, inspect the circuit breakers and replace as needed. Test by turning each circuit breaker “off” and back “on”. Circuit breakers are wearable parts and must be replaced as needed, as part of your RV maintenance. If you have any questions, consult your dealer.

A label is provided to explain the function of every 120-volt circuit breaker. This label is located on or near the appropriate load center or sub-panel and must remain permanently affixed to the recreation vehicle.

APPROXIMATE ELECTRICAL LOAD RATINGS

12 VOLT SYSTEM	
Exterior Entertainment Center	5-7 AMPS
Fan	1.5 AMPS
Furnace	12.0 AMPS
Generator Start	95.0 AMPS*
Illuminated Switch	.125 AMP
Inverter	variable
Leveling System	95.0 AMPS*
LP Detector	.125 AMP
Light; Halogen	1.7 AMPS
Light; Vanity	4.2 AMPS
Lights; Aisle	1.0 AMP
Lights; Baggage Compartment / Shower	1.4 AMPS
Lights; Decorative Wall / Map / Porch	1.5 AMPS
Lights; Fluorescent Double -12"	2.0 AMPS
Lights; Fluorescent Double -18"	2.5 AMPS
Power Awning	10.0 AMPS
Power Vent	5.0 AMPS
Refrigerator	3.0 AMPS
Step Cover	10.0 AMPS
TV Plate/Antenna Booster	1.0 AMP
Water Heater	6.0 AMPS
Water Pump	7.0 AMPS

*Momentary Load

12 Volts: Labeled watts divided by 12 = Power consumed in AMPS

120 VOLT SYSTEM	
Air Conditioner	18 AMPS
Coffee Maker	6-12 AMPS
Converter (each)	8 AMPS
DVD System	3 AMPS
Fireplace	12 AMPS
Hair Dryer or Curling Iron	10-14 AMPS
Microwave	12 AMPS
Refrigerator	6 AMPS
Satellite Receiver	2 AMPS
TV	2-4 AMPS
Vacuum Cleaner	8 AMPS
Washer/Dryer	12 AMPS
Water Heater	12 AMPS

120 Volts: Labeled watts divided by 120 = Power consumed in AMPS

SECTION 6: ELECTRICAL SYSTEM

120-VOLT (50 AMP) AC SYSTEM (IF SO EQUIPPED)

The 50 amp 120-volt 60hz AC electrical system can be powered by an outside 120/240-volt 60hz utility service like those commonly found in campgrounds or by 120/240-volt 60hz generator power. The entire system is designed to operate on 2 legs of 120-volt power at a maximum current flow of 50 amperes per leg.

Exposure to voltages higher or lower than a nominal 120-volts, will damage or shorten the service life of the electrical system and appliances. The 50 amp 120-volt 60hz AC electrical system can be powered by an outside 120/240-volt 60hz utility service like those commonly found in campgrounds or by 120/240-volt 60hz generator power.

The following electrical components will only operate when connected to 120-volt power: air conditioner(s), refrigerator, microwave oven, television(s), home theater system(s), water heater, washer, dryer, fireplace, electric stove, and appliances plugged into convenience receptacles.

WARNING

- Circuit breakers and fuses will not offer complete protection of the electrical system in the event of power surge or voltage spike.
- Make certain the external power source you connect the power cord to is a properly wired **50 amp NEMA 14-50 RV** receptacle and not 240 volt AC. **PLUG INTO 50-AMP SERVICE ONLY.**

50-AMP Power Cord (if so equipped)

WARNING

- Do not hook up the power cord to any receptacle **until** you have verified proper polarity and grounding. Polarity indicators can be purchased in most electrical and hardware stores.
- Do not use any cheater plug, adapter or extension cord to reconfigure incoming AC power or break the continuity of the circuit connected to the grounding pin.
- Do not connect the power cord into an outlet that is not grounded, or adapt the power cord plug to connect it to a receptacle for which it is not designed.
- Do not remove the grounding pin to connect to a non-grounded receptacle. Removal of the ground pin disables an important safety feature designed to prevent shock and electrocution hazards.
- Do not connect the power cord to an extension cord. Use of an improper extension cord will cause overheating of the cord as well as potentially causing premature failure of the AC equipment.

It is the responsibility of the owner of the electrical receptacle to ensure that the receptacle is properly wired and grounded. Reverse polarity and/or improper grounding of your recreation vehicle can cause personal injury or death.

The 50-amp external utility power cord is commonly referred to as the “shore” power cord. It is designed to mate and properly function with 50-amp “shore” power receptacles available at most campgrounds.

The shore power cord is designed to continuously carry the 50-amp current flow required to power each leg of the electrical system. It also creates a critical ground connection between the vehicle electrical system and the campground shore power receptacle.

Always test the external power source (i.e., the campsite power receptacle or electrical box) with a ground monitor before connecting your power cord to it. If the ground monitor indicates ‘reverse polarity’ or an ‘open ground’ **DO NOT** connect the power cord.

Regularly inspect the shore power cord for cuts, cracks, worn insulation and other damage. Have the power cord replaced immediately if problems exist.

Calculating 50 AMP Electrical Load (if so equipped)

When connecting appliances to the electrical system, remember that 120-volt power usage is limited to 50 amps per electrical system leg for a total of 100 amps. Each operating appliance collectively places an added load on your 120-volt electrical system.

An unintentional “trip” of a circuit breaker may occur if you overload the recreation vehicle and/or campground electrical system. The amperage rating of individual appliances can be calculated by dividing appliance wattage consumed (normally listed on the appliance) by nominal design voltage (120 for a 120-volt appliance). For example: 1200 watts divided by 120-volts equals 10 amps.

POWER CORD REEL (IF SO EQUIPPED)

Electrically powered cord reel (if so equipped)

If your motorhome is equipped with a powered cord reel, extend the shore power cord using the extend/retract switch located in the same compartment near the cord reel. After extending the shore power cord, connect the cord to the campground shore power receptacle.

Disconnecting and stowing the shore power cord

Reverse the applicable process (manual or powered cord reel) to disconnect, retract, and stow the power cord.

GENERATOR

Your motorhome may be equipped with an LP or diesel powered generator. In certain gasoline engine motorhomes, the generator will be gasoline powered as well. The generator in your motorhome produces 120/240-volt power compatible with the motorhome electrical system. It can be used to power the entire motorhome when 120/240-volt shore power is not available.

Automatic Generator Start (AGS)

Vegatouch systems include an AGS screen to program your generator to automatically start and stop at specified times. The AGS button is located on the Home screen of the Vega Touch display. Please refer to your *Vegatouch User Guide* in your warranty portfolio.

NOTE: Certain Class A motorhomes may be equipped with a Vegatouch touchscreen system. The generator instructions can be found in the Vegatouch User Guide included in your warranty portfolio (or online at <http://www.fireflyint.com>).



Vegatouch AGS Button

SECTION 6: ELECTRICAL SYSTEM

Transfer switch

The generator interfaces with the 120/240-volt electrical system through a transfer switch that automatically switches between available shore power and generator power. The transfer switch does not require any manual operation. (For more information see the *Automatic Transfer Switch (ATS)* section)



NOTE: The diesel (or gas) generator requires 12-volt power from the house auxiliary batteries to start, and draws diesel fuel (or gas) to operate from the chassis fuel tank. If the fuel level in the chassis fuel tank drops to or below $\frac{1}{4}$ full, the generator will automatically shut "off" and cannot be re-started until the fuel tank is filled to above $\frac{1}{4}$ full.

Before Starting the Generator

1. Make sure the carbon monoxide detector is working.
2. Turn "off" air conditioners and all other 120-volt appliances.
3. Check for fuel, exhaust and coolant leaks.

STOP the generator immediately if there is a fuel, exhaust or coolant leak. Have all leaks repaired prior to placing the generator back in service.

WARNING

CARBON MONOXIDE IS DEADLY! Do not run the generator when your motorhome is indoors or in a confined space. Asphyxiation or carbon monoxide poisoning hazards exist whenever generator exhaust gasses can accumulate.

MOVING PARTS AND ELECTRICITY can cause severe personal injury or death. To reduce exposure to these hazards, **always disable AGS (if so equipped) before:**

- Sleeping in vehicle, unless vehicle has a working CARBON MONOXIDE detector.
- Parking vehicle in garage or confined space.
- Parking vehicle for storage.
- Servicing vehicle for storage.
- Servicing generator.
- Servicing batteries.
- Servicing appliances or electrical systems.
- Fueling the vehicle.

DO NOT run the generator or use the AGS AUTO ON or QUIET ON modes (if so equipped) when your RV is indoors or in a confined space. Asphyxiation or carbon monoxide poisoning hazards exist whenever generator exhaust gasses can accumulate.

Maintenance

During periods of extended storage:

1. Add a diesel fuel additive to the chassis fuel tank to prevent algae growth. (only if you have a diesel fuel generator)
2. Completely fill the chassis diesel fuel tank to prevent water condensation and rust in the tank. (only with a diesel fueled generator)
3. Cover the end of the generator exhaust pipe with screen to prevent bug and rodent intrusion.

With the exception of simple items, such as normal maintenance (i.e., oil changes, etc.), all service work should be done by an authorized repair facility. Improper adjustments can damage the generator and electrical appliances and can result in a safety hazard. **Follow the generator owner’s manual for maintenance intervals and recommendations.**

Exercising Your Generator – When storing the generator for extended periods of time, it is important to run the generator regularly to keep everything in good working order. Lack of exercise can cause moisture build-up in the fuel system resulting in poor performance.


For more information on generator operation and maintenance, refer to the generator owner’s manual.

⚠ CAUTION

Excessive usage can overheat and damage the generator starter motor. Do not engage the starter motor for more than 20 seconds at a time. If the generator doesn’t start after the first attempt, wait at least two minutes before beginning another start sequence. If the generator does not start after a third attempt, refer to the generator owner’s manual for additional information.

STARTING THE GENERATOR

If your motorhome is equipped with a generator, there will be a control switch to turn it ON and OFF at the Command Center panel inside the RV. There may also be secondary switches located at the dash, or on the generator itself. There is also a digital hour meter that will turn on when the generator is started. An LED above the start switch will light when the generator is running.

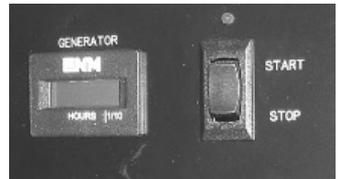

To Manually Start the Generator

(Manual switches located on the Command Center Panel)

1. At either “START/STOP” switch, press and hold the upper portion of the switch to start the generator. Depending on the outside temperature the start process can take up to 15 seconds. Once the generator starts running, release the “START/STOP” switch.
2. For better performance and engine life, especially in colder weather, let the generator engine warm up for two minutes before turning “on” 120-volt appliances.

For more information on generator operation and maintenance, refer to the manufacturer’s owner’s manual.

Automatic Generator Start (AGS) (if so equipped)

(Controls are built into the Vega Touch touchscreen system)

Class A motorhomes and certain Class C motorhomes may be equipped with an Automatic Generator Start system (AGS). AGS is not currently available on towable models.

When enabled, the Automatic Generator Start system will automatically start and stop the

SECTION 6: ELECTRICAL SYSTEM

generator according to operator or factory pre-selected parameters.

The Magnum AGS Start section or the *Vegatouch User Guide* (in your warranty packet) will give more detailed instructions about Automatic Generator Start depending on your model.



**Auto Gen Start on
Vegatouch Screen**



Auto Gen Start Settings Vegatouch Screen

GENERATOR SLIDE TRAY

The generator is mounted on a manual slide tray below the windshield at the front of the motorhome. This slide tray must be released, and manually pulled open to access the generator and components in the tray.


⚠ CAUTION

To maintain the adjustment of the generator door, pull on the bottom instead of the sides or top of the door.

To access the generator slide tray:

1. Open the fuse compartment directly under the driver's side window.
2. Pull the "T" handle inside the compartment to release the generator slide tray.
3. Pull on the bottom front of the generator slide.
4. To close the generator slide tray, push the slide tray back in until it locks.

For additional information contact your dealer or Customer Service.

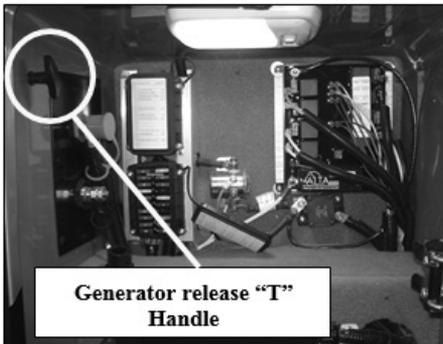

NOTE: Do not use the generator slide tray for storage.

SOLAR PANEL (IF SO EQUIPPED)

Solar panel(s) automatically produce 12-volt DC electricity when exposed to direct sunlight. Energy produced by the solar panel(s) is used to trickle charge the house auxiliary batteries. There are no user selectable controls for the solar panel(s).

Controller

The controller is capable of charging two separate (isolated) batteries. A status LED indicates charging progress. Battery charging and operating parameters are adjusted using the 5 Settings Dip Switches.

Battery 1 is connected at the bottom left, Solar input power is connected at bottom center, and Battery 2 is connected at bottom right. The small ribbon cable goes to the Remote Meter display. The controller is typically found in the same outside compartment with the power cutoff switches. Refer to the manufacturer's operation manual in your warranty packet for more detailed information.



Solar Panel Control
(location may vary by model)

Maintenance

Clean the solar panel upper surface regularly using a soft cloth or sponge with water and a mild detergent. Do not use harsh chemicals or abrasive brushes that might damage the panels upper translucent surface.

Solar Panel Battery Monitor

The solar panel battery monitor is typically located in the passenger side overhead entry door control panel. This monitor features a 4 digit display and custom icons. Provides comprehensive system information including voltage, current, and temperature. A status LED indicates charging progress and controller operating state. Three battery state-of-charge LEDs provide quick reference to the level of charge on the system battery. Soft buttons allow for easy navigation of the meter menus. It also features self-diagnostics and error reporting for troubleshooting.



Solar Panel Battery Monitor

REPLACING LIGHT BULBS

Before replacing a bulb, be sure the light is off. Do not touch the glass part of the new bulb with your bare fingers. The skin oil left on the glass will evaporate when the bulb gets hot, the vapor will condense on the reflector and it will dim the surface.

Replacement light bulbs must be of the type, voltage and wattage listed on the lamp fixture. Use of incorrectly sized bulbs can overload lamp circuits and may create a fire hazard by overheating the fixture.

SECTION 6: ELECTRICAL SYSTEM

Notes:

DIESEL FUEL AND FILL

It is critical to understand the danger associated with fuel. Take time to become educated about the property of fuel and use it safely.

 **DANGER**

Automotive fuels can cause serious injury or death if misused or mishandled. If you have further questions, consult your dealer or Customer Service for assistance.

- Always shut OFF the vehicle engine while refueling.**
- Do not bring or store fuel or other flammable liquids inside the motorhome because a fire or explosion may result.
- Before refueling, extinguish all smoking materials and any open flames.
- Before refueling, always turn OFF all spark producing appliances (i.e., water heaters, furnaces, etc.).
- Do not overfill the fuel tank(s). The pressure in an overfilled fuel tank may cause leakage and lead to fuel spray and/or fire.
- Fuel spills represent a serious fire hazard, and should be cleaned up immediately.
- Never restart an engine or re-light any pilot lights while raw fuel is present.

FAILURE TO COMPLY COULD RESULT IN FIRE, DEATH OR SERIOUS INJURY.

Fuel Selection

Use diesel fuel only. The diesel generator (if so equipped) is also fueled by the same system used to fuel the motorhome chassis engine. Consider the fuel requirements of the generator (if so equipped) when making a decision on the type of fuel to use.

DEF Fluid

Diesel engines (since 2010) require the use of DEF fluid (Diesel Exhaust Fluid) to aid in burning particulate matter in the exhaust and reduce emissions to nitrogen and water. This DEF fluid is kept in a separate heated tank and is required for the normal operation of the diesel engine. DEF tank is typically located in one of the exterior compartments and the tank will have a blue cap with “DEF” written on it. There will be a series of warnings at the dash before running out of DEF fluid. If the vehicle is allowed to run out of DEF fluid, engine power is intentionally reduced and speed will be limited to 5 MPH until the tank is re-filled.



NOTE: If your motorhome is equipped with a diesel generator, check the diesel generator and chassis manufacturer’s information to help you determine the type of diesel fuel best suited for this dual application.

 **CAUTION**

If you spill fuel on the motorhome, clean it up immediately. Fuel can dull or soften paint and damage other surfaces.

SECTION 7: FUEL & PROPANE SYSTEM



NOTE: If your motorhome is equipped with an Aqua-Hot Heating system, it may be fueled from either an LP tank or from the chassis diesel tank(s). If fueled from the chassis diesel tank(s) the fuel consumption of this system should be considered when planning your fuel supply to insure you will have adequate fuel to run your system. The fuel feed for the Aqua-Hot system is positioned in the fuel tank so that when the fuel supply for the system is exhausted, you will still have fuel remaining to operate your motorhome. For additional information refer to the Aqua-Hot owner's manual.

FUEL SAFETY

DANGER

Automotive fuels can cause serious injury or death if misused or mishandled. If you have further questions, consult your dealer or Customer Service for assistance.

- Always shut OFF the vehicle engine while refueling.**
- Do not bring or store fuel or other flammable liquids inside the motorhome because a fire or explosion may result.
- Before refueling, extinguish all smoking materials and any open flames.
- Before refueling, always turn OFF all spark producing appliances (i.e., water heaters, furnaces, etc.).
- Do not overfill the fuel tank(s). The pressure in an overfilled fuel tank may cause leakage and lead to fuel spray and/or fire.
- Fuel spills represent a serious fire hazard, and should be cleaned up immediately.
- Never restart an engine or re-light any pilot lights while raw fuel is present.

FAILURE TO COMPLY COULD RESULT IN FIRE, DEATH OR SERIOUS INJURY.

Fuel Selection

The generator is also fueled by the same system used to fuel the chassis engine. Check the generator manufacturer and the chassis manufacturer information to help determine the type of fuel best suited for this dual application.

Fuel Filler Cap

WARNING

Do not replace the fuel fill cap with one of a different type. Only use a cap specified for your motorhome. Use of a substitute cap may create excessive fuel system pressure, resulting in fuel station damage and improper operation in a collision.

Remove the fuel filler cap by slowly turning it counterclockwise and waiting for any “hiss”

noise to stop. Then unscrew the cap all the way. To close the fuel filler cap, securely turn the cap clockwise until you hear clicking sounds.

Filling the Fuel Tank

If you spill fuel on the motorhome, clean it up immediately. Fuel can dull or soften paint and damage other surfaces. Use care when fueling your motorhome.

EXHAUST GAS FUMES

WARNING

- Avoid inhaling exhaust gases as they contain carbon monoxide, which is a potentially toxic gas that is colorless and odorless.
- If you are in a parked motorhome with either the engine running or the generator running there is a potential for exhaust fumes to filter back into the motorhome.

To avoid breathing exhaust gases, follow these precautions:

- Do not run the engine in confined areas, such as a closed garage, any longer than needed to move your motorhome in or out of the area.
- Windows should be closed while driving or running the generator (if so equipped) to avoid drawing dangerous exhaust gases into the motorhome.
- If you suspect that exhaust fumes are entering the passenger compartment, have the cause determined and corrected as soon as possible.

If you must drive under these circumstances, close all the windows, and adjust the heating or cooling system to force outside air into the motorhome (set the blower on high speed).

The best protection against carbon monoxide entry into the motorhome is a properly maintained ventilation system and an active carbon monoxide detector. To allow for proper operation of the motorhome ventilation system, keep the ventilation inlet grill(s) clear of snow, leaves or other obstructions at all times.

Maintenance

It is recommended that the exhaust system and vehicle body be inspected by a qualified motorhome service center:

- Each time the engine is ready for an oil change.
- Whenever a change in the sound of the exhaust is noticed.
- Whenever the exhaust system, underbody or rear of the vehicle is damaged.

For more information refer to your Chassis Guide.

PROPANE GAS SYSTEM (IF SO EQUIPPED)

Propane or LP (liquefied petroleum) gas is an efficient form of energy when proper handling and safety precautions are observed. The propane system in your motorhome furnishes the fuel for cooking, heating, hot water and can be an alternative energy source for refrigeration. Propane is heavier than air and tends to flow to lower areas and will sometimes pocket in these low areas, such as the floor. Your motorhome is equipped with a propane alarm (refer to *Safety Precautions*, Combination Carbon Monoxide (CO)/Propane Alarm).

WARNING

Propane cylinders should not be placed or stored inside the vehicle. LP-gas cylinders are equipped with safety devices that relieve pressure by discharging gas into the atmosphere.

SECTION 7: FUEL & PROPANE SYSTEM

The propane fuel system is comprised of numerous components such as the propane container, hoses, the propane gas regulator, piping and copper tubing to each appliance.

Your motorhome has been carefully tested at the factory and by your selling dealer for leakage, travel vibrations can loosen fittings. Have the vehicle propane system checked at all connections soon after the purchase of your vehicle, and after the initial filling of the propane tanks.

Continued periodic checks of the propane system at 5,000 miles of travel (or at least once a year), by a qualified propane service representative as part of your normal maintenance is recommended. Hand tighten the LP gas system valves only, do not use a wrench or pliers as over tightening may damage the valve seals and cause them to leak.

NOTE: All propane lines have been checked with air pressure at the time of manufacture. Dealers are required to recheck and adjust pressure before retail delivery.

The following label should be kept permanently affixed to the motorhome:

 DANGER
ALL PILOT LIGHTS, APPLIANCES, AND THEIR IGNITORS (SEE OPERATING INSTRUCTIONS) SHALL BE TURNED OFF BEFORE REFUELING OF MOTOR FUEL TANKS AND/OR PROPANE CONTAINERS. FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.
 WARNING
DO NOT FILL PROPANE CONTAINER(S) TO MORE THAN 80 PERCENT OF CAPACITY. FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.
 CAUTION
THIS PIPING SYSTEM IS DESIGNED FOR USE WITH PROPANE ONLY. DO NOT CONNECT NATURAL GAS TO THIS SYSTEM. Securely cap this inlet when not connected for use. After turning on propane, except after normal cylinder replacement, test propane piping and connection to appliances for leakage with soapy water or bubble solution. Do not use products that contain ammonia or chlorine.
DD-37


Propane Label

Propane Gas Container

Propane is a true gas compressed into a liquid form. As the fuel is released from the container, it changes to vapor which is then used for the operation of the appliances. Propane will not run through the appliances in the liquid state.

A permanently mounted A.S.M.E. approved propane container is located under the floor of the motorhome.

Propane expands 1½ percent for every ten degrees of increase in temperature. It is imperative to leave sufficient space inside the container to allow for natural expansion of gas during warmer weather.

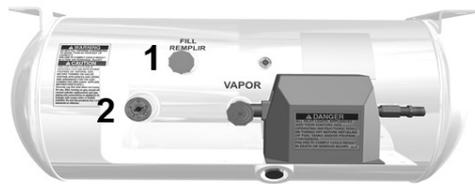

**1-Propane fill valve; 2-Propane gauge
ASME tank**



NOTE: Tanks are to be installed, fueled and maintained in accordance to State and Local codes, rules, regulations or laws.

Servicing or Filling

 WARNING

- Always shut OFF the engine while refueling.** Do not smoke and do not operate other ignition sources while refueling.
- When the propane container is disconnected from the main supply hose and the P.O.L. connection, install the P.O.L. plastic cap that is attached to the container.**
- If you suspect your propane container has been overfilled, contact your dealer or a qualified propane technician for assistance immediately.** Do not attempt to service a propane container overfill yourself.

Because the container is not removable, the motorhome will need to be driven to a qualified propane facility for servicing or filling.

Only the authorized gas service technician(s) should be near the motorhome while the propane tank is being filled. The new propane container must be carefully purged for proper appliance performance and operation. The propane tank must **NEVER BE OVERFILLED**. Replace all protective covers and caps on the propane system and/or container after filling. Make sure the valve is closed and the compartment door is securely latched.

LP Gas Container Overfill

Never allow your propane tank to be filled above the maximum safe level as indicated by the fixed liquid level gauge.

Do not allow the visible gauge to be used for filling. Overfilling the propane container above the liquid capacity indicated on the container, could allow liquid propane to enter the system that is designed for vapor only creating a hazardous condition.

The following warning label has been placed by the propane container.

 WARNING:
DO NOT FILL CONTAINER(S) TO MORE THAN 80 PERCENT OF CAPACITY.
FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.
OVERFILLING THE PROPANE CONTAINER CAN RESULT IN UNCONTROLLED PROPANE
FLOW, WHICH CAN CAUSE FIRE OR EXPLOSION.
A PROPERLY FILLED CONTAINER CONTAINS APPROXIMATELY 80 PERCENT OF ITS
VOLUME AS LIQUID PROPANE.

Propane System Label

Refer to your Warranty Packet for more information on the LP gas system components.

SECTION 7: FUEL & PROPANE SYSTEM

Propane Regulator

WARNING

Propane regulators must always be installed with the regulator vent facing downward. Regulators that are not located in baggage compartments have been equipped with a protective cover. Make sure the regulator vent faces downward and (if applicable) the cover is in place to minimize vent blockage that could result in excessive gas pressure causing fire or explosion.



NOTE: Regulator appearance and type may vary by model.

Single stage regulator

Some models are equipped with a single stage regulator.

Two stage regulator

The two-stage regulator has the only moving components in the propane system. Its sole function is to reduce the pressure from the propane containers to a safe and consistent low operating pressure. The first stage reduces the container pressure to 10-13 lbs. The second stage reduces the 10-13 lbs. of pressure further to an operating pressure of 11" W.C. (water column) or 6.35 oz. of outlet pressure to your appliances.

The second stage is adjustable and will need to be adjusted by your dealer or qualified propane service technician for optimum performance (this adjustment should always be made with a properly calibrated manometer).

If the pressure is too high, it affects performance and safety; if the pressure is too low, your appliances will not operate correctly.

If your recreation vehicle is equipped with the "automatic" two-stage regulator, with both cylinders full of propane, turn the lever on the regulator towards the cylinder you wish to use first. This will now be the "supply" cylinder and the other the "reserve". Slowly open both cylinder valves. The indicator on top of the regulator will turn bright green. When the cylinder becomes empty, the indicator will change to bright orange. Now turn the regulator lever to the side of the "reserve" cylinder and the green signal should return. You may now remove the empty cylinder to have it refilled without interrupting the flow from the full bottle. After filling the cylinder, connect the pigtail hose and slowly open the bottle valve.

PROPANE USE AND SAFETY

Propane is a colorless and odorless gas that, in the liquefied state, resembles water. An odorant (usually a sulfur compound) is added as a warning agent. If you smell propane within the vehicle, quickly and carefully perform the procedure listed on the propane system label. This label has been placed in the vehicle near the range, for models equipped with a propane system. When propane container is low, occasionally there may be a concentration of an onion or garlic-like odor, which can be mistaken for a propane gas leak. After the propane container has been refueled, the odor will usually disappear. If not, turn off the valve(s) and have the propane system inspected by your dealer or qualified propane service representative.

Propane Leak Test

Leaks may be found easily with a soapy water solution.

Do not use a solution containing ammonia or chlorine when locating leaks. These products are corrosive to copper gas lines and brass fittings, which could result in deterioration of the copper and brass components.

Apply the soapy solution to the outside of the gas piping fittings. If a leak is present, the soapy solution will “bubble” at the leak point. If a leak is indicated, shut off the propane system valve(s) and contact your dealer or qualified propane service representative immediately.

⚠ DANGER

IF YOU SMELL PROPANE

1. Extinguish any open flames, pilot lights and all smoking materials.
2. Shut off the propane supply at the container valve(s) or propane supply connection.
3. Do not touch electrical switches.
4. Open doors and other ventilating openings.
5. Leave the area until odor clears.
6. Have the propane system checked and leakage source corrected before using again.

Ignition of flammable vapors could lead to a fire or explosion and result death of serious injury.

Propane System Label

⚠ DANGER

Never use an open flame to test for a propane leak. Do not check for leaks using products that contain ammonia or chlorine; these products can cause cracks to form on the metal tubing and brass fittings

Using The Propane System

Use the following steps for propane operation:

1. Close ALL burner valves, controls and pilot light valves.
2. Open the main valve in the propane tank slowly to avoid a fast rush of propane vapor through the excess flow valve causing propane “freeze-up.” Should you experience propane “freeze-up,” close the main valve and wait 15 minutes before trying again.
3. Listen carefully as propane begins to flow. If a hissing noise is heard for more than one or two seconds, close the main valve and contact your recreation vehicle dealer to have the propane system tested.
4. **Light the appliances as needed and directed in the appropriate appliance manufacturer’s owner manual located in the Warranty Packet.**

Keep the propane container valves closed at all times unless you are using the propane gas system or are having the propane container filled.

Make sure that you read and fully understand ALL safety requirements for handling and operation of the propane system.

SECTION 7: FUEL & PROPANE SYSTEM

The propane system must be handled with care. If you have any questions or concerns, consult with your dealer and/or the specific appliance manufacturer.

If you have double cylinders on your recreation vehicle, use only one at a time. Otherwise, the propane supply will be drawn equally from both cylinders until the supply has been totally exhausted. Using one cylinder until it is empty, then using the second cylinder will allow you to fill the empty cylinder at your convenience without running totally out of propane.

WARNING

- Do not turn gas range burner controls to ON and allow gas to escape before lighting.
- Do not use portable fuel burning equipment (i.e., wood and charcoal grills or stoves) inside the recreation vehicle.

Cooking With Propane Gas

Unlike homes, the amount of oxygen supply is limited due to the size of the recreation vehicle. Proper ventilation when using the cooking appliance(s) will help you avoid the danger of asphyxiation.

It is especially important that cooking appliances not be used for comfort heating, as the danger of asphyxiation is greater when the appliance is used for long periods of time.

FAILURE TO COMPLY MAY RESULT IN DEATH OR SERIOUS INJURY.

 **DANGER**

Do not use gas cooking appliances for comfort heating. Can lead to carbon monoxide poisoning, which can lead to death or serious injury.

 **WARNING**

Gas cooking appliances need fresh air for safe operation. Before operating:
Open vents or windows slightly or turn on exhaust fans prior to using cooking appliance. Gas flames consume oxygen, which should be replaced to ensure proper combustion. Improper use can result in death or serious injury.

Cooking / Comfort Heating Label

These warning labels are located in the cooking area to remind the user to provide an adequate supply of fresh air for combustion.

<p>TO ENSURE A SUPPLY OF FRESH AIR TO OCCUPANTS, OPEN VENTILATORS WHEN FUEL BURNING RANGE, FUEL BURNING CARRY-ON APPLIANCE, AND/OR FUEL BURNING LIGHTS ARE IN OPERATION. COOKING APPLIANCES SHOULD NOT BE USED FOR SPACE HEATING PURPOSES.</p>	<p>DE MANIÈRE À ASSURER UNE ALIMENTATION EN AIR FRAIS AUX OCCUPANTS, OUVRIR LES VENTILATEURS LORSQUE LA CUISINIÈRE, LES APPAREILS DE CHAUFFAGE PORTABLES ET/OU LES LAMPES DE COMBUSTION D'HUILE SONT EN FONCTIONNEMENT. LES APPAREILS DE CUISSON NE DOIVENT PAS SERVIR AU CHAUFFAGE DES LOCAUX.</p>
<small>JA-110</small>	

Ensure a supply of fresh air (Canada units only)

Calculating Propane Gas Usage

Most RV gas appliances are operated intermittently, and each has a different BTU rating. You will need to consider this when planning your propane supply and consumption. Unless there is heavy use of hot water, the water heater consumption of propane is minimal. During cool temperature or high wind conditions, furnace consumption can be extremely high.

To calculate your propane supply, take the BTU ratings for your propane appliances and divide that into the BTU availability. Each gallon of propane gas (3.785 liters) produces about 91,500 BTU's (96,528 kilojoules) of heat energy.

Propane consumption chart

The following chart provides average propane consumption information.

Appliance	Average BTU Consumption per Hour	Kilojoules/Hour
Water Heater	8,800	9,280
Refrigerator	1,200 – 1,500	1,270 – 1,580
Furnace	35,000 – 40,000	36,930 – 42,200
Range/oven	7,100	7,490
Range, rear burner	6,500	6,860
Range, front burner	9,000	9,490
Outside Grill	10,000	10,550

Traveling With Propane



NOTE: Some states prohibit propane appliances to be operated during travel, especially in underground tunnels. Make sure you know the laws for the areas where you travel.

Use care when fueling your motor fuel tanks and/or propane containers. Make certain your propane tank is properly fastened in place. This label should be kept permanently affixed to your recreation vehicle.

<p>▲ DANGER ALL PILOT LIGHTS, APPLIANCES AND THEIR IGNITORS (SEE OPERATING INSTRUCTIONS) SHALL BE TURNED OFF BEFORE REFUELING OF MOTOR FUEL TANKS AND/OR PROPANE CONTAINERS. FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY. <small>AD-05</small></p>

Refueling Warning Label

SECTION 7: FUEL & PROPANE SYSTEM

Notes:

PLUMBING SYSTEM

There are two different water systems in your recreation vehicle:

- The fresh water system consists of the fresh water holding tank, faucets and connections, water pump, outside shower assembly (if so equipped), water heater, tub/shower, and water purification system (if so equipped).
- The waste water system consists of the waste water and sewage holding tank(s), drains and toilet.

Plumbing System Maintenance

- Check all fittings, pressure and waste, for leaks before each trip or before vehicle storage as part of your normal maintenance:
- Inspect all faucets, the water purification system (optional) and sink connections (including drain baskets or filters).
- Inspect connections at the water pump and water heater.
- At the end of every trip, you should drain any unused water from the fresh water system.
- All water contains contaminant and mineral particles that can cause fresh water system odors. Untreated well water is a major source of water system odors.
- The fresh water (potable water) system needs periodic sanitization and winterization to take care of all the components within the plumbing system and help discourage the growth of bacteria and other organisms that can contaminate the water supply.

Typically, there are labels affixed to the exterior of the recreation vehicle sidewall that indicate the locations of the water system drains and fills. Be aware some drain valves may be located inside the vehicle (once the exterior label is found, go inside to find the drain corresponding location).

MONITOR PANEL

Your motorhome may be equipped with multiple monitor panels. Each requires 12-volt DC power to function. It will also operate the water pump and the LP Gas water heater (if so equipped).

Depending on the model, the locations and types may vary. Typical locations are in the bathroom and at the docking (utility) center. The docking center monitor may also include a pump switch.

Levels are indicated as follows:

- E** = Empty
- 1/3** = One-third full
- 2/3** = Two-thirds full
- F** = Full

Press the appropriate button to check the estimated volume of liquids in each category listed below:

- FRESH** - Fresh water tank
- GREY** - Waste water holding tank
- BLACK** - Sewage holding tank
- BATT** - displays battery level



Docking Center Monitor Panel

To read water or sewer tank level

1. Press and release the button for the tank to be checked. The tank level (percent) will show on the LED display. If no other button is pressed, the display will shut off after approximately 5 seconds. If another button is pressed before the 5 second interval (including BATT) the display will immediately switch to show the new level or voltage. The 5 second timeout will restart every time a different button is pressed.

SECTION 8: PLUMBING SYSTEM


- To continuously display a reading, press and release the desired button, and then press the same button a second time. The display will now be in the HOLD mode which is indicated by the decimal point on the right side turning ON. While the display is in the HOLD mode it will recheck the level once per second allowing the user to watch the level change while the tank is being filled or drained. The display will automatically shut off after 5 minutes in HOLD mode. To end the HOLD mode before 5 minutes has elapsed, press any tank button and the display shuts off.

To read battery voltage

- Press and release the BATT button, the battery voltage will show on the LED display.
- If no other button is pressed, the display will shut down after approximately 5 seconds. If the BATT button is held down, the display will continuously recheck the voltage and show the updated value. The reading may flicker between two values. This is normal behavior for a digital voltage display.
- There is no HOLD mode for battery voltage.

Vegatouch System

Certain motorhomes equipped with a Vegatouch System, may include monitor panels inside and at the utility center shown here. Refer to the Vegatouch User Guide included in your warranty packet or online at <http://www.fireflyint.com> for specific instructions.

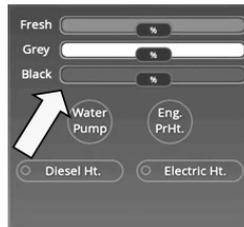

Touch Screen Monitor



Monitor panel at utility center

FRESH WATER SYSTEM

All water contains contaminant and mineral particles that can cause fresh water system odors. Untreated well water is a major source of water system odors. The fresh water (potable water) system needs periodic sanitization to take care of all the components in the plumbing system to discourage the growth of bacteria and other organisms that can contaminate the water supply.

⚠ WARNING

- DO NOT drink water deemed microbiologically unsafe or of unknown quality.
- Never travel with full fresh, black or grey water holding tanks.

Water Pressure Regulator (customer supplied)

Excessive pressure from the water supply source may be encountered in some parks, especially in mountain regions when using the fresh water inlet or black tank flush. Water pressure regulators are available to protect your recreational vehicles plumbing system against such high pressure.

⚠ CAUTION

A water pressure regulator is recommended to prevent damage to the plumbing system or components. To prevent damage when using the city water connection, a 45 lb. (315 KPa) rated water pressure regulator is recommended.

Fresh Water Holding Tank

There may be several ways to fill the fresh water tank depending on the model. For details of each method, refer to the *Fresh Water Connections* or the *Utility Center* sections. There are plastic overflow tubes in the fresh water holding tank which allow water to flow out of the water tank. Occasionally, you may see water coming from the overflow tubes when the fresh water holding tank is filled. This is normal and can be a result of the recreation vehicle being parked on an incline, or the motion caused by starting or stopping during travel.

⚠ CAUTION

- Do not cap, block or modify the fresh water tank overflow tubes in any way. Enough water pressure can build up during the filling process to damage the plumbing system if the overflow tubes are obstructed.
- Be careful not to overfill the fresh water holding tank. It can pressurize the tank, causing leakage and water damage and void the warranty. **DO NOT** leave the tank unattended while filling.

City Water Fill




NOTE: If needed, sanitize the water system prior to travel

To fill the fresh water tank using the “fresh water inlet” (located in the utility center).

1. Make sure the water tank drain, and hot & cold water lines (faucets) are closed.
2. Remove the fresh water connection inlet plug and connect the short hose on the utility center to the fresh water connection inlet. Connect the long hose on the reel to a pressurized fresh water source.



NOTE: Depending on your model, the fresh water hose may connect directly to the fresh water inlet at the utility center.

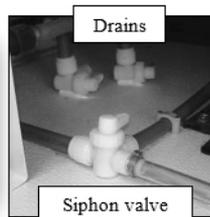

3. Move the “city water / fresh tank fill valve” to the **FILL TANK** position.
4. Move the “Aqua-Hot water heater bypass valves” to the **NORMAL** position (supply valves to the water heater **ON**, center valve **OFF**).

SECTION 8: PLUMBING SYSTEM

5. Make sure the siphon valve (clear hose behind the utility panel) is pointing away from the clear hose.
6. Turn ON the water at the water source.
7. Open the cold water supply faucets to bleed the air from the water lines. When the water lines are nearly full, you may experience some “air pockets”. Allow them to escape before closing the cold water supply faucets.

To disconnect from the fresh water source

1. Shut OFF the water at the water source.
2. Move the “city water / fresh tank fill valve” back to the vertical CITY WATER position.
3. Disconnect the hose (on the reel) and reinstall the “fresh water connection inlet” plug.




NOTE: Install the “fresh water connection inlet” plug whenever the “fresh water connection inlet” is not being used.

Dry camping: (direct fill the fresh water tank)

When you do not have access to a pressurized water source, you can fill the water tank from a container of water by using the direct fill method.

Direct filling the fresh water tank:

The fresh water tank can be directly filled with unfiltered water. Connect a non-toxic hose to a pressurized water source. Unscrew and remove the black cap, and insert the non-toxic hose into the direct fill inlet on the tank. Turn on the water and fill the tank. Water can also be dumped directly into the tank using a water container and funnel using this same inlet. The tank includes a window to monitor water level.

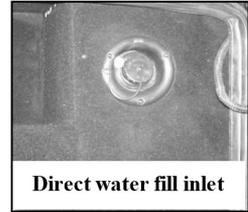

Direct water fill inlet

The water tank is located in a compartment on the passenger of the motorhome.



NOTE: This method of filling the water tank is **NOT** recommended if filtered water is required. The **only** method to fill the fresh water tank with filtered water is by using the fresh water connection inlet and the city water / tank fill valve on the docking (utility) center panel. If you fill the tank with unfiltered water, bear in mind, that all the unfiltered water in the water tank, will end up being filtered because all water used in the RV water lines is directed through the whole house canister water filter before going out to any fixtures.

⚠ WARNING

DO NOT drink water deemed microbiologically unsafe or of unknown quality.

12-volt Water Pump and Water Pump Switches

Your motorhome is equipped with (2) three-way water pump switches located on the interior and the exterior monitor panel. Either switch will control the water pump.

Once activated, the water (demand) pump will self-prime, and provide water. The water pump continues to run until maximum pressure is achieved and shut off. The water pump will automatically re-start when it senses a drop in the water pressure.

Some cycling may occur, depending on the volume of water being released. The water pump is engineered with a check valve to prevent water from back flowing into the fresh water supply tank.

When you want to use water in your motorhome and it is not hooked up to city water, you will need sufficient 12-volt DC power to run the water pump.



NOTE: The water pump switch should be in the OFF position when the motorhome is left unattended for any amount of time.

Maintenance

Normal pump maintenance consists of checking and cleaning of the strainer, normal sanitizing and winterizing and occasionally checking all plumbing hardware and fittings for tightness.

Lack of sanitizing can lead to premature pump failure and poor performance over time. Scale build-up on the diaphragm and valves, can cause low flow and leak back (occasional pump cycling with no faucets open or tank filling up when hooked up to city water).

For more information, refer to the water pump manufacturer's user guide.

Water Purification System (if so equipped)

Primary water filter: The canister filter is the primary filter used for the complete water system. It is located at the docking (utility) center of the motorhome. If the water supply has not been used for some time, allow the water to flow for several minutes to flush the system.

CAUTION

- Do not allow water in the canister housing to freeze.
- Remove the cartridge filter before using anti-freeze to winterize the system or chlorine solution to sanitize the system.
- Flush filter canister thoroughly before it is put back into service after winterizing or sanitizing.
- For best results replace filter every 6-12 months. (or at the beginning of each camping season)
- Do not use carbon cartridges where water is microbiologically unsafe or of unknown quality.
- Maximum operating pressure is 125 psi (8.75 bar)
- Maximum water temperature is 125° F (52° C).

SECTION 8: PLUMBING SYSTEM

NOTE: When not in use, the water filter cartridge should be stored out of freezing temperatures. RV antifreeze will damage the water filter cartridge.


To Replace Canister Filter Cartridge

1. Unscrew the two thumbscrews on the utility center panel and remove the panel. Or, on other models the canister is attached to the utility center panel. Water pump should be OFF.
2. Turn water supply to the filter canister OFF with the valve located behind the utility center panel (at the top). Refer to Fig 3 on the call-outs for the utility center panel. (*Universal Docking Center* section)
3. Place drip pan below filter housing to catch any spillage.
4. Press the red button on top of the canister to release pressure.
5. Using a spanner wrench (supplied), rotate the filter canister. Remove the canister containing the filter cartridge.
6. Dump water out of canister and remove the filter cartridge inside and dispose of properly.
7. Clean the interior of the canister with mild detergent. Thoroughly rinse and wipe clean.
8. Remove the O-ring from the groove in the canister and wipe clean. Recoat with petroleum jelly.
9. Replace the O-ring in the groove, making sure it is properly seated.
10. Install the new filter cartridge in the canister.
11. Replace the canister (hand tighten is normally sufficient).
12. If you are using pressurized City Water without the water pump, make sure to turn OFF the Water Pump Backflow Valve (located next to the water pump). If you are using the water pump to circulate water, this valve should be ON. (Refer to *Universal Docking Center* section Fresh Water Connections)
13. Turn water supply to the canister ON (using the valve behind the utility panel) and turn the pump ON. Open a faucet and check for leaks.
14. Turn the pump OFF. Replace the panel and the two thumbscrews (if equipped).


Secondary water filter: (if so equipped)

The secondary (cartridge) water filter supplies water to the refrigerator and the drinking faucet (if so equipped). This filter is typically located at the utility center, right corner.

RV antifreeze and sanitizer will damage the water filter cartridge. The water purification system manufacturer has supplied a (reusable) plastic bypass hose with fittings on either end that is designed to replace the water filter cartridge when the motorhome is being winterized or sanitized. Store the hose when it is not in use.



Filter Canister

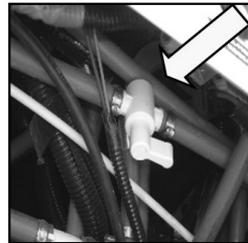


Water supply shutoff to the cartridge water filter (shown ON)



- Do not allow water to freeze in the filter.
- Remove the cartridge before using antifreeze to winterize or chlorine solution to sanitize the system.
- Flush thoroughly before it is put back into service after winterizing or sanitizing or if the system has not been used for some time.
- For best results replace the filter every 6 months or as needed.

Replacing the secondary water filter cartridge

1. Turn off water supply to the filter. Turn the black valve (next to the cartridge filter) OFF. Water pump should be OFF.
2. Place a cloth under the filter housing to catch any spillage.
3. Relieve pressure on the line (by depressing the drinking water faucet or the paddle on the refrigerator door) before removing the filter.
4. Unscrew the two fittings from each end of the old filter or the bypass hose.
5. Remove bypass hose or filter cartridge (dispose of filter properly).
6. Install new filter screwing it on the two fittings in the utility center.
7. Turn on the water supply black valve and the water pump to check for leaks.
8. Make sure if you are using the pump, the Water Pump Backflow Valve is turned ON.

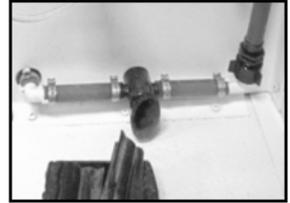

Water supply shutoff to the cartridge water filter (shown OFF)


For more information

Refer to the water purification manufacturer's information in the Owner's Warranty Packet.

Draining the Fresh Water System

To drain the fresh water holding tank and supply lines:

1. Make sure the "city water / fresh tank fill valve" is in the City Fill position.
2. Make sure the "winterize intake valves" are set to NORMAL
3. Make sure your "water heater bypass" valve is set to NORMAL.
4. Open the "fresh tank drain".
5. Open the "low point drains".
6. Turn on the outside shower faucet.
7. Turn ON the Water Pump Backflow Valve if using the water pump. It should be OFF when using pressurized City Water.
8. Turn ON the water pump and allow it to run as needed.
9. Open all kitchen and bath faucets.
10. Operate the toilet flush lever until water stops flowing.

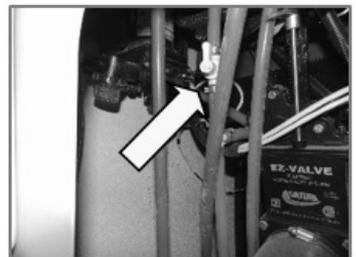

Pump Backflow Valve



When you are finished draining the fresh water system, reverse steps 4-9 and dump the grey and black water holding tanks.

SECTION 8: PLUMBING SYSTEM

EXTERIOR DOCKING CENTER


The exterior utility center allows you to access the plumbing system functions at one central location. It contains the following:

1. Canister water filter
2. Outside shower & quick disconnect hose
3. City Water / Tank Fill Valve
4. Pump Switch
5. Macerator ON/OFF switch
6. Black Tank Flush inlet (*See Black Tank Flush*)
7. Fresh Water Connection inlet
8. Macerator hose and dump connector

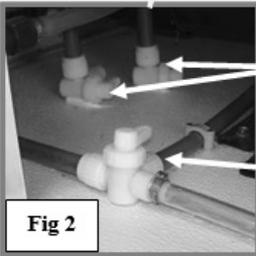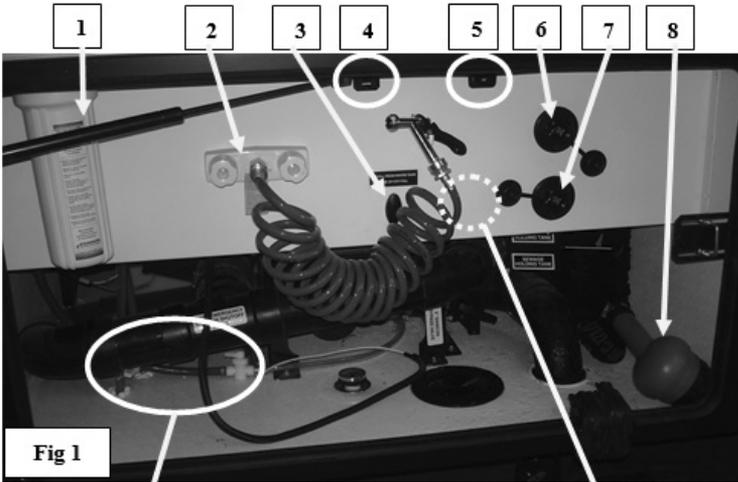

Hot/Cold Drains

Siphon valve

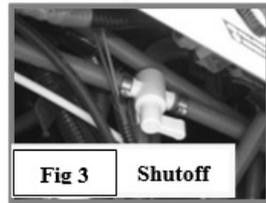

Shutoff

Sanitizing and Winterizing Controls



Water heater power switches located on Vegatouch screen

⚠ CAUTION

Never leave the motorhome unattended while filling the fresh water system.


Fresh Water Connections

There are three types of direct fresh water connections located at the exterior utility center:

- Fresh water connection inlet
- Black tank flush (see *Black Tank Flush*)
- Clear hose (sanitize / winterize)

The utility center also has a water shutoff valve located up behind the utility center panel (Fig 3).

1. Hot water line drain valve (left side of utility center)
2. Cold water line drain valve (left side of utility center)
3. Siphon valve with clear hose attached for sanitizing and winterizing (left side of utility center)
4. Water supply valve to canister water filter (upper right of utility center)
5. Drain on floor of utility center
6. Macerator Bypass dump valve (center of utility center)
(See *Black and Gray Tank Drain* section)
7. Water pump and strainer (left wall of utility center)
8. **Water Pump Backflow Valve:** Located beside the pump on the left wall of the utility center. Must be turned ON when using the pump to circulate water through the *water lines* of the RV. Must be OFF when using pressurized City Water to circulate water through the water lines. If it is ON when using City Water, it can backfill the fresh water tank through the water pump causing it to overflow. If you are using pressurized water to fill the tank, this valve has no effect ON or OFF.
9. Macerator Emergency Cutoff valve (center of utility center)
(See *Black and Gray Tank Drain* section)

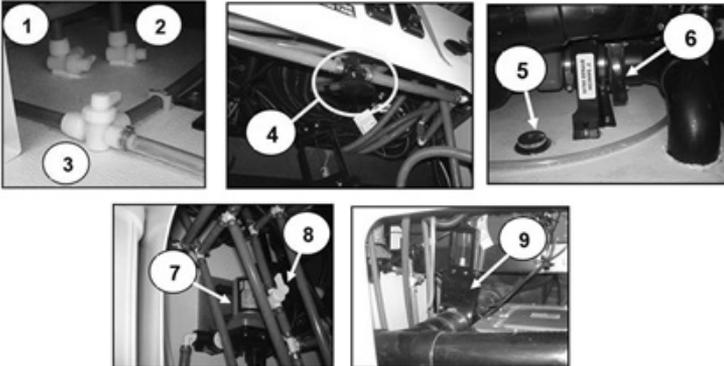

Sanitizing the Plumbing System

When to sanitize:

- When your motorhome is new.
- At the beginning and end of each season.
- When the water system becomes contaminated or every three months of use.

SECTION 8: PLUMBING SYSTEM

How to sanitize:

1. Level the motorhome and drain the fresh water system (see *Draining the Fresh Water System*).
2. Close all low point drains, including the drains for hot/cold water lines at the utility center (Fig 2).
3. Turn water supply OFF to canister water filter (Fig 3). The valve is located behind the utility center panel. Remove the filter cartridge from the water purification system canister (Fig 1), re-attach the empty canister. See *Water Purification System* for additional information on removing the filters. Turn the water supply valve (Fig 3) ON.

Chlorine should be kept out of the water filter.




NOTE: Filter should be replaced at the beginning of the camping season or if they have come into contact with contaminated water.

4. Prepare a chlorine solution using 1/4 cup of household bleach (sodium hypochlorite solution) to one gallon (3.785 liters) of water in a container. Prepare one gallon of solution for every 15 gallons of tank capacity. This will result in a residual chlorine concentration of 50 ppm in the water system.

If a 100 ppm concentration is required, use 1/2 cup of household bleach with one gallon of water to prepare the chlorine solution. One gallon of the solution should be used for each 15 gallons of tank capacity.

5. To sanitize the fresh water tank: Open the water tank compartment of the RV. Remove the cap from the tank water fill and pour the sanitizer solution into the fresh water tank. Replace the cap.

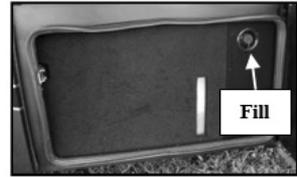

Fresh Water Tank

6. Fill the fresh water tank using one of the following methods:

Method 1: Remove the cap and fill the tank using a water hose. Monitor the water level using the water level guide.

Method 2: Attach the fresh water hose to a pressurized water source. Connect the other end of the hose to the City Water Inlet. Turn the Tank Fill / City Water valve on the utility center to TANK FILL (horizontal). Turn on the water until the tank is full.

7. When the water tank is full:

Method 1: Remove the water hose and replace the cap on the water tank.

Method 2: Shut off pressurized water source, disconnect water source, and remove the hose from the City Water inlet.

8. Turn off power to the water heater. Switches are located in a bathroom cabinet. Bypass the water heater. Sanitizer must be kept out of the water heater. Set the bypass valves to the BYPASS position (two supply valves OFF, middle valve ON). The 3 valves are located near the water heater.
9. Turn Water Pump Backflow Valve ON (when using the pump).
10. Turn the pump switch ON.
11. Open the hot and cold water line faucets one at a time (kitchen, lavatory, shower and outside shower) until water begins to flow continuously and a chlorine smell is noticeable. Close the hot and cold water faucets.



NOTE: The shower hose must be connected to the outside shower.

12. Turn the pump OFF.
13. Let the solution remain in the system for at least four hours when disinfecting with 50 PPM residual chlorine. If a shorter time period is desired, then a 100 PPM chlorine concentration should be permitted to sit in the system for at least one hour. For complete fresh water tank sanitization, driving your motorhome for a short distance will allow the sanitizing solution to splash around all sides of the tank.
14. After the required sanitization period, drain the chlorine solution from the fresh water system (see *Draining the Fresh Water System*).
15. Re-fill the fresh water tank. Verify that the city water valve is in the horizontal (fill tank) position (Fig. 1). Refer to Step 6 above to fill the fresh water tank.
16. Turn water source OFF. Set the city water valve back to the vertical (city water) position. Water source should attach to the City Water inlet. Turn the water source ON. Water Pump Backflow Valve should be turned OFF. Open all faucets (including outside shower) to flush all the water lines with fresh water (pump is not used for this). Water heater bypass should still be set to BYPASS (to prevent water from entering the water heater).
17. Drain the fresh water system again (see *Draining the Fresh Water System*). Re-fill the fresh water tank with potable water. Turn the water heater bypass valves to the NORMAL position (hot & cold supply valves ON, middle valve OFF) to allow water into the Aqua-Hot water heater. Detach the outside shower hose.



NOTE: If a chlorine taste lingers in the water, flush the water system with a solution consisting of one-quart vinegar to five gallons of clean water.

The following steps must be done before flushing the system with the vinegar solution:

- Water filter from the canister filter has been removed at the utility center.
- Aqua-Hot water heater is bypassed before flushing the system with the vinegar solution.

Re-flush the system with the vinegar solution through the faucets (steps 11 to 13) until chlorine smell is gone. Then flush the system again with fresh water. **ONLY** after the vinegar solution has been flushed out of the lines with fresh water, replace the water filter and set the water heater bypass valves back to the normal position (hot & cold supply valves ON and middle valve OFF).

Winterizing the Plumbing System

Preparing your motorhome for colder weather or storage is very important for most states and Canada.

Failure to prepare your motorhome may cause water supply lines and the water heater to freeze. **Repairs due to freezing are not covered under the terms of the “Motorized Limited Warranty” applicable to the motorhome.**

SECTION 8: PLUMBING SYSTEM

No commodity or product should be added to the fresh water system to ensure freeze protection other than RV antifreeze.

Winterizing the Aqua-Hot System: Aqua-Hot requires RV antifreeze in the potable water chamber to insure the heating coil is protected from freeze damage. The motorhome antifreeze winterizing feature is located in the outside utility center. **Refer to the Aqua-Hot owner's manual for additional details.**



NOTE: Appliances (refrigerator, dishwasher or clothes washer) must be winterized. Refer to the appliance owner's manual for additional information or contact your Dealer or Customer Service for assistance. Included in your warranty packet you should find instructions to winterize a Whirlpool residential refrigerator (P/N 0311859).

When to winterize:

- At the end of the camping season.
- When the motorhome will be exposed to temperatures at or below, 32°F (0°C).

The preferred method for winterizing your motorhome is to use RV antifreeze in the plumbing system.

WARNING

- Never apply air pressure to the water system with any of the valves in the closed position. Air pressure applied to a closed valve, faucet or low point drain could potentially damage the seals and cause water leaks. If you have questions, consult with your RV dealer. Using RV antifreeze is the preferred method of winterization.
- Automotive antifreeze (ethylene glycol) and windshield washer antifreeze (methanol) are poisonous. Never use these products in your fresh water system. These products are harmful and may be fatal if swallowed. Use only RV antifreeze.**

CAUTION

If the motorhome is going to be stored in a non-temperature controlled environment with a risk of temperatures reaching 32°F (0°C) or lower, the demand (power) system with RV antifreeze **must** be used in the motorhome plumbing system as directed in this manual (this would include appliances such as the washer, dishwasher and the residential refrigerator).

Winterizing with antifreeze

This method adds antifreeze to the water lines for freeze protection for temperatures 32°F (0°C) and below. A second person will make this job easier.

1. Close all the faucets in the coach (including outside shower). Attach the shower hose to the outside shower quick connector.
2. Close the fresh water tank drain and all other low point drains. Include the hot/cold water line drain valves at the utility center (Fig. 2).

3. The City Water valve should be set to the vertical (city water) position (Fig. 1).
4. Water heater bypass valves should be set to the BYPASS position. Middle valve ON and the two supply valves to the water heater OFF
5. Place the clear hose from the utility center (Fig. 2) into a container of RV antifreeze (requires about 2 gallons). The clear hose is located at the utility center. The dashed circle in (Fig 1) indicates an item behind the utility center panel.
6. Siphon valve should be turned so it is in-line with the clear plastic hose.
7. Turn the water pump ON (Fig. 1) and antifreeze will be drawn out of the container and into the water lines as each fixture is opened in the motorhome. To aid siphoning, place the antifreeze container on a flat surface approximately 2 feet off the ground.

Winterizing the Macerator System (if so equipped)

1. **Ensure that all tanks are empty.**
2. Pour RV antifreeze into the toilet and down into the black water tank. At time of printing, quantity of antifreeze to be put into the black tanks was not determined. Check with Customer Service for proper amount to use.

NOTE: Use a container (bucket) for capturing system fluid!



Macerator Bypass

3. Turn the macerator pump ON.
4. Run the pump until antifreeze begins to discharge from the dump connector attached to the flex hose.
5. Turn the macerator pump OFF.
6. Drain the flex hose by holding it at a sloped angle to drain excess water and return the hose to the storage location.
7. As an added safety measure, open and drain the Macerator Bypass Valve.

Completing the Winterizing with antifreeze

8. After all of the water lines/appliances have been winterized, turn the pump OFF and disconnect the shower hose from the outside shower.
9. Turn the siphon valve so it points away from the clear hose (Fig 2). Valve is located behind the large panel on the utility center.
10. Open the drain valve on the fresh water tank and leave it open.
11. Add a cup of antifreeze in all the drain p-traps.
12. Remove the clear hose from the container of RV antifreeze and clean.

NOTE: To reduce the chance of contamination, prevent the clear hose from coming into contact with the ground or the water fittings.

13. Wipe the antifreeze out of the sinks, shower, and toilet using a soft, dry cloth.

To De-Winterize the Fresh Water System

Close the fresh water drain valve. Fill the fresh water tank with fresh water and rinse the RV antifreeze from each faucet or appliance that was protected with the RV antifreeze.

SECTION 8: PLUMBING SYSTEM

Fill the fresh water tank using one of the following methods:

Method 1: Connect a pressurized water source to the City Water inlet.

The city water valve (Fig 1) should be turned to the Tank Fill position (horizontal). Turn water source ON and fill the tank.

Method 2: Open the water tank compartment on the DOOR SIDE of the RV. Remove the fill cap from the water tank. Insert a hose (connected to a fresh water source) into the water tank. If there is a drain valve for the tank, it should be turned OFF. Turn water source ON and fill the tank.

Turn off and disconnect the water source. Turn the pump ON. Turn the Water Pump Back-flow valve ON. Purge all antifreeze out of the water lines by opening all faucets (including outside shower).

Once all the antifreeze is out of the water lines, turn pump OFF, replace the canister water filter, sanitize the system as necessary.

De-Winterize the Macerator Toilet: Press either button to flush and return to normal condition.

De-Winterize the Macerator System: Emptying the black tanks for the first time in the spring, will discharge antifreeze in the macerator pipe and flex hose. Wipe the antifreeze out of the sinks, shower, and toilet using a soft, dry cloth.

To De-Winterize the Fresh Water System

Close the fresh water drain valve. Fill the fresh water tank with fresh water and rinse the RV antifreeze from each faucet or appliance that was protected with the RV antifreeze.

Fill the fresh water tank using one of the following methods:

Method 1: Connect a pressurized water source to the City Water inlet.

The city water valve (Fig 1) should be turned to the Tank Fill position (horizontal). Turn water source ON and fill the tank.

Method 2: Open the water tank compartment on the DOOR SIDE of the RV. Remove the fill cap from the water tank. Insert a hose (connected to a fresh water source) into the water tank. If there is a drain valve for the tank, it should be turned OFF. Turn water source ON and fill the tank.

Turn off and disconnect the water source. Turn the pump ON. Turn the Water Pump Back-flow valve ON. Purge all antifreeze out of the water lines by opening all faucets (including outside shower).

Once all the antifreeze is out of the water lines, turn pump OFF, replace the canister water filter, sanitize the system as necessary.

De-Winterize the Macerator Toilet: Press either button to flush and return to normal condition.

De-Winterize the Macerator System: Emptying the black tanks for the first time in the spring, will discharge antifreeze in the macerator pipe and flex hose.

OUTSIDE SHOWER AND COURTESY LIGHT

A handheld shower assembly with both hot and cold water is available in the utility center for washing or rinsing. The coiled hose for the shower has a quick connect fitting that attaches between the shower control knobs. Be sure the 12 volt power for the water pump is on, or the city water connector has water available to it.

Water should **always** be turned off using the hot / cold control knobs rather than turning off the water with the lever on the shower head. Turning off the water with the shower head lever can create a condition where the hot and cold water will mix through the outside shower

faucet, thereby reducing the temperature of the hot water. It can appear as though the hot water heater is not working properly.

After the water has been allowed to drain from the shower head, replace it in the exterior universal docking center.



NOTE: Any remaining water in the shower hose will drip or run out; this is not a leak but performs as intended.

The **courtesy light** is operated with a rocker switch located on the utility center panel.

FAUCETS

The bathroom, kitchen and outside shower faucets operate much the same way as the faucets in your home. Make sure there is sufficient water available and the 12-volt water pump is turned ON before operating.



NOTE: There may be air in the water plumbing lines which needs to be bled out before a steady stream of water comes from the faucet.

BATHROOM SHOWER

Keep the water heater and holding tank capacities in mind when using the fresh water system. Be sure the water heater is ON and had sufficient time to heat the water.

- If dry camping, be sure your 12-volt water pump is ON.

Unlike your home, the motorhome does not contain a water pressure balance valve. If someone is using the shower, it is recommended that the fresh water system **NOT BE USED** until they are finished.

The shower head may drip slightly in the OFF position after use; this is a normal function and does not indicate a leak or defect. The used water will drain through the plumbing pipes into the grey water holding tank.

WARNING

Water temperatures over 125°F (49°C) can cause severe burns instantly therefore, be careful when using hot water. **Always test the water temperature before showering or washing.**

Maintenance

Use mild dish soap and water to clean the fixtures. Never use harsh chemicals or sprays. A mild solution of vinegar and water works well to remove hard water spots and stains from the sink or shower fixtures.

SECTION 8: PLUMBING SYSTEM

BLACK/GREY WATER SYSTEM AND TANKS

Water from the sinks and shower flows into the gray water (or waste water) holding tank. Water from the toilet will flow into the sewage (or black water) holding tank (see Black/Grey Water Holding Tanks).

Drain Pipes with P-Trap (if so equipped)


The drain pipes may be equipped with a “P-trap” installed to help prevent odors from escaping into the RV. During travel, water from the P-traps may spill and permit odors into the RV. By adding water and using a RV approved deodorizing agent you will dissolve the contents faster and will keep the drain lines and tanks clean and free flowing. These chemicals are available at an RV supply store or your dealer.

Drain Pipes with Dry Sealing Valve (if so equipped)

Your RV may be equipped with a dry sealing valve that prevents the escape of odors from your waste system and eliminates the need for P-traps. Should the RV drain piping system become clogged and a mechanical cleanout tool is used to open the drain pipe, it is important that the dry valve be removed before passing the cleanout tool through the piping. Passing a mechanical cleanout tool through the waterless valve may cause damage to the internal seal that may potentially allow sewer gases to escape into the RV interior. The waterless trap can be unscrewed from the water lines.

A label has been placed near the location of the waste valve that reads as follows:

**REMOVE WATERLESS TRAP BEFORE
USING MECHANICAL DRAIN – CLEANING DEVICES**

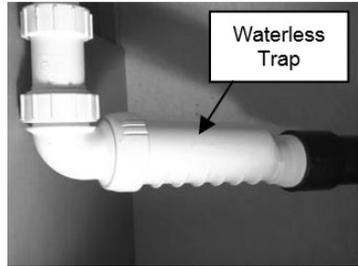

Sewer Hose Storage

Depending on your RV model, the sewer drain hose may be stored in an exterior compartment marked “Sewer Hose” or it may be located in the hollow square tube bumper. The bumper has removable plastic end caps, and the hose slides inside the hollow bumper.

Vents

Another important part of this system is the vent pipes and vents that release air from the grey and black water holding tanks. On most models the exterior vent cap is attached to the roof and must be kept clear of obstructions to perform as intended.

On some models, the vent pipe may be part of the drainage system referred to as a “wet vent” (water flows downward as air flows upward in the same pipe).

Some models are equipped with a side vent system. On these models this label will be next to the termination valve. This label should not be removed from your recreation vehicle.

Black/Grey Water Holding Tanks

Dump the gray and black water holding tanks before traveling to avoid carrying unnecessary weight. The weight of the holding tank contents is not calculated into the RV cargo carrying capacity (this extra weight would reduce your available cargo capacity). Traveling with full holding tank(s) could possibly cause you to exceed the individual tire ratings and/or the RV GAWR or RV GVWR. Potential damage to suspension components, such as springs, tires

CAUTION

Keep drain valve closed to minimize the presence of sewer gases. Sewer gases may be present when RV is connected to campground sewage hookup. May lead to illness or personal injury.

and axles, could result.

If you are dry camping and cannot immediately empty your holding tanks, reduce your vehicle speed until you reach a dumping station. When connected to the sewer drain line at a campground, keep the “black tank drain” valve closed until the holding tank is at least $\frac{3}{4}$ full. This will provide sufficient water to assist in complete draining of the black water holding tank. Repeat as needed.

WARNING

Never travel with full black or grey water holding tanks. This not only wastes your fuel but depending on the location of the tank(s), it can affect your tow vehicle handling characteristics.

CAUTION

- Never leave the black tank drain in the open position continuously when connected to the campground sewer system. Leaving the drain open will allow the liquid to drain out increasing the potential for a blockage in the tank. Keeping the drain in the closed position will prevent debris from accumulating in the tank.
- Do not add automotive antifreeze or caustic chemicals, such as laundry detergents, into the holding tanks. Although these products may have a deodorizing effect, they may damage the plastic and rubber parts of the plumbing system or the components

Before using the recreation vehicle, or after dumping the grey and black water holding tanks, always add the proper amount of deodorant to the black water tank to prevent odors and help break down holding tank contents (unless winterizing). Follow the deodorant bottle or package instructions. Driving to a disposal site will normally loosen any accumulated waste debris or solids from the sides of the holding tanks.

BLACK /GRAY TANK DRAINS AND MACERATOR SYSTEM

The gray tank drain and black tank drain (also referred to as dump valves) are typically located in the exterior utility center. Depending on your model the dump valves will be operated by either electric rocker switches or by a manual handle.

To make drainage easier, level the motorhome. Always drain the black water holding tank first so the following wastewater can help rinse any solids or debris from the dump outlet and sewer hose.

Macerator Pump System

Your motorhome is equipped with a macerator pump system used to discharge waste from the gray and black waste tank. The system has a 1-1/2-inch diameter flexible hose that runs from the pump (behind the removable utility center panel) and attaches to a separate compartment on the exterior of the motorhome (beside the utility center). Not all models are equipped with an external storage compartment. The system when powered on can discharge waste (uphill if necessary) up to a distance of 150 feet.

⚠ WARNING

Before operating the macerator pump, make sure the external dump hose is properly attached at the motorhome and at the dump station. The hose is under pressure and therefore waste is discharged under pressure. **Failure to follow instructions can lead to possible injury or property damage. The use of this system for anything other than intended will void the warranty.**

⚠ CAUTION

Water can accumulate in the flexible hose and dump connector of the macerator system. When winterizing the RV, antifreeze must be added to the macerator system. Refer to the *Winterizing section*.

Open the hose compartment and pull out the 1-1/2 inch flexible hose (which can extend to 30 feet) with the attached dump connector. The dump connector includes two connections: a small removable cap for attaching a 3/4 inch garden hose, or a larger 3-inch removable cap which allows it to be attached to the sewer outlet at the dump station.

Using the system

1. Attach the dump connector to the 3-inch sewer outlet at the dump station, or to a 3/4-inch garden hose and run the hose to a dumping location.
2. Open the black drain valve. Depending on your model, your motorhome will be equipped with either an electric or manual valve system. Both systems are operated from the utility center panel.
 - **Electric system:** To open the black or grey tank drain valve, press the corresponding tank drain switch. To close the valve, press the switch again.
 - **Manual system:** To open the black or grey tank drain valve, pull the corresponding T-handle out. Close the tank drain by pushing in the T-handle in.
3. Turn the Macerator power switch ON at the utility center panel and the macerator pump will begin sending waste through the dump hose.
4. When the tank is empty, turn the macerator power switch OFF. Close the black tank drain valve.
5. Select the grey drain valve.
6. Turn the Macerator Power Switch ON.
7. When tank is empty, turn the macerator power switch OFF. Close the grey tank drain valve.
8. Unhook the dump connector, rinse it out and replace the hose and connector back into the storage compartment.

The black tank flush inlet can also be used with this system (refer to the *Black Tank Flush section*).



Dump Connector



Garden hose connection



Electric Dump Valves



Macerator power switch

Macerator Bypass Valve

In the event of a malfunction with the macerator pump, a macerator bypass valve is located in the utility center. This bypass will dump the waste from the tanks to a 3-inch sewer hose connection under the motorhome.


To operate:

1. Attach a 3-inch sewer hose to the connection under the motorhome, and to a sewer outlet at a dump station.
2. Open the desired black/gray drain valves, one at a time.
3. Pull the manual macerator bypass valve to open and the tanks will empty by gravity.
4. When finished, close the macerator bypass valve, the black/gray dump valves, and disconnect the sewer hose from under the motorhome and at the dump station.

The black tank flush can also be used with this bypass valve.

Macerator Emergency Cutoff

The macerator system includes an emergency cutoff valve that stops the flow of waste through the flexible 1-1/2-inch macerator hose. The valve is at the back of the utility center (**Fig A**). The handle for the cutoff should be pulled UP for NORMAL operation. To engage the cutoff, push the valve handle DOWN

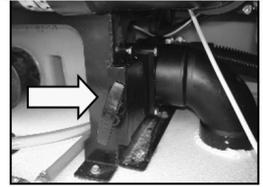**Macerator Bypass****Fig. A****Macerator Cutoff
Normal position****BLACK TANK FLUSH (IF SO EQUIPPED)**

The black tank flush (no fuss flush) inlet is typically located on the utility center panel. The location may vary depending on your model. The inlet color may be either white or black. Attach a garden hose (connected to a pressurized fresh water source) to the black tank flush inlet. The water goes directly into the black water holding tank sprayer connection, allowing you to remove debris and preventing accumulation. There is a check valve in the plumbing lines to prevent back flow. Flush the black water tank each time the grey and black water holding tanks are dumped or as needed.

1. Dump the black water tank (see Gray Tank Drain & Black Tank Drain) and leave the black tank drain valve open.
2. Connect a garden hose from the water supply source to the black tank flush.
3. With the water source turned ON, flush the black water holding tank until the water running out of the black tank drain valve is clear (not discolored or cloudy).
4. Disconnect the garden hose and close the black tank drain valve. Fasten the sewer hose housing dust cap back on the tank flush inlet.

**Tank Flush Inlet**

⚠ CAUTION

- The black tank drain valve must be OPEN any time there is a hose (water supply) connected to the black tank flush.
 - Do not leave any hose (water supply) connected to the black tank flush when it is not in use.

SECTION 8: PLUMBING SYSTEM

⚠ WARNING

Do not use the same hose to fill your fresh (potable) water tank that is used for the black tank flush.

TOILET

The toilet is efficient and easy to operate. To add water to the toilet before using, use the flush, or fill lever, until the desired toilet water level is raised. Generally, more water is required only when flushing solids. If there is not a sufficient amount of water used during flushing, waste materials may not evacuate properly from the toilet drain line to the sewage holding tank and a clogged sewage tank or sewage pipe(s) could eventually occur.

⚠ CAUTION

- ❑ It is important to prevent solid waste buildup. Follow the toilet manufacturer's recommended instructions each time after emptying the black water holding tank.
- ❑ To prevent help toilet blockage, always use RV grade single-ply toilet paper. Do not flush paper towels, diapers, sanitary napkins or other foreign objects down the toilet.
- ❑ Do not use chlorine (undiluted) or caustic chemicals, such as laundry bleach or drain opening types, in the toilet system. These products damage the seals in toilets and dump valves.

Seal cleaning. Hard water mineral deposits can build up under the edge of the rubber bowl seal, resulting in a slow leak of water from the bowl. To prevent this mineral, build up, periodically clean under the bowl seal with Brilliance™ cleanser:

1. Shut OFF the water supply.
2. Apply the cleanser onto a cleaning brush. Open the toilet flush ball by pressing on the flush level and scrub under the seal. Make sure to push brush bristles between bottom of seal and top of flush ball surface to scrub all parts of seal that come into contact with the flush ball.
3. Close flush ball and wait two to three minutes.
4. Open flush ball. Use the cleaning brush and water to rinse away cleanser and loosened deposits.

Deodorants: Your toilet requires the regular addition of a deodorant product to reduce odors and to help break down black water holding tank contents.

For additional information: Refer to the manufacturer's manual.

Silence Plus Toilet (if so equipped)


To avoid damage to Silence Plus, an electric macerating toilet, flush only organic material and toilet paper.

Water Saver Flush

Press and release left button. Recommended for flushing liquids and small amounts of toilet paper only.


Normal Flush

Press and release right button. Recommended for flushing solids and toilet paper.

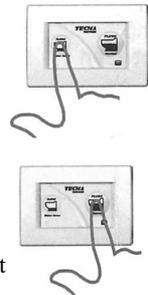

Empty Bowl

Press both buttons simultaneously and release. This empties the bowl and leaves it dry for travel. Press either button once to add water, run motor and return to normal use.

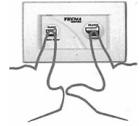


Programming Water Level

Press both buttons simultaneously and hold. LED's will flash indicating you are in program mode. As water enters the bowl, release fingers from buttons to set the level of standing water in the bowl. The level you set remains constant after each flush until you change it.

The minimum recommended refill level is 1/2" above the bowl outfall. After changing water source from municipal to demand pump, resetting the water level may be necessary.

Flush & Refill Water Setting: Water filled approximately 1/2 inch above outfall hole.

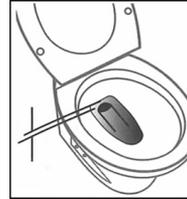


Holding Tank Level Sensors

This toilet system has Tank Level Sensors mounted on the outside of the black water tank.

FULL TANK LOCKOUT: For the safety of your system, the toilet will not flush when the Full Tank Sensor senses a full tank (LED is red).

EMERGENCY OVERRIDE: If the tank is full (LED is red) and an emergency flush is needed, press and hold either flush button for 6 seconds to flush toilet.

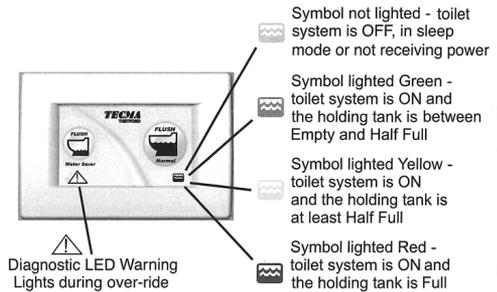

⚠ CAUTION

This may cause overfilling of a waste tank and system back up will flash.

LED SLEEP MODE: To save power consumption when not in use, an automatic LED sleep mode is programmed on this wall switch. If the toilet is not used for 8 hours, the keypad's LED lights will go out. The press of any button will start a flush and reactive back lighting.


Winterization

This toilet must be winterized to avoid freeze damage. Failure to do so will void warranty. Refer to *Winterizing the Plumbing System*. Flush toilet until antifreeze is seen in bowl. Flush an additional five times with antifreeze mixture to ensure discharge line is winterized. Only use RV antifreeze (propylene glycol). Never use automotive type antifreeze.

SECTION 8: PLUMBING SYSTEM

Aria Deluxe II TOILET (if so equipped)

The following is an overview. For detailed information, refer to the manufacturer's user guide supplied in your Owner's Portfolio. There are two flush mode available controlled by the Mode Selector Switch located at the back of the toilet. A is Residential Mode; B is User Control/Water Saver Mode.

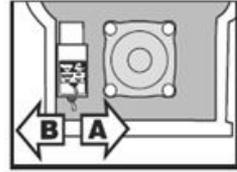

To flush:

Residential Mode – Touch large button once and Walk-Away™.

User Control Mode – Hold down large button for up to 10 seconds of flush time.

In either mode:

To add water – To raise bowl water level after flushing, press and hold small button until desired level is reached. Fill stops automatically at 10 seconds. Wait 3 seconds before pressing button again.

To open flush valve – To access holding tank or add deodorant, press both buttons at the same time, TWICE. To close valve, press large button ONCE.



⚠ CAUTION

Keep fingers away from motorized blade

Overfill Auto Shutoff

If the Add Water function runs long enough to overfill the bowl, it will automatically shut off. This will also occur if the toilet senses a malfunction. Once this happens, the toilet electronics must be reset. This is done by cutting off the power and then restoring it, preferably at the RV's electrical panel. Alternatively, you can pull apart and reconnect the yellow in-line Fuse Holder at the back of the toilet. (see troubleshooting in the manufacturers user guide).

Manual Override

In the event of a power outage, the contents of the bowl can be released into the holding tank by opening the valve manually using the override on the back of the toilet. Turn clockwise to open, counter clockwise to close.



Winterization

This toilet must be winterized to avoid freeze damage. Failure to do so will void the warranty. Flush all of the toilet's plumbing with RV-type anti-freeze. Never use automotive type antifreeze. See *Winterizing Your Plumbing System* in this manual for information on the winterization process.

CLIMATE CONTROL SYSTEM

All controls for the heating/cooling climate control system are incorporated into the Vegatouch System. For specific operating instructions for heating/cooling controls, refer to the *Vegatouch User's Guide* included in your warranty packet or online at <http://www.fireflyint.com>.

The air conditioner/heat pump heats and cools from a single unit. The heating unit will not replace a furnace for heating your motorhome in cold weather. It is designed to warm the coach during cool or mild temperatures. Both the heating and cooling unit are controlled by a single thermostat which is controlled through the Vegatouch screen.

Refer to the manufacturer's user guide included in your Owner's Portfolio for detailed operating instructions.

In the cooling mode, the temperature drop from inlet to supply will be 15 to 20 degrees. In the heating mode the temperature rise from inlet to supply will be 25 to 40 degrees unless the outdoor temperature has dropped sufficiently to cause the freeze switch to activate. In that case, the rise will be only 10 to 20 degrees. Any deviations from these norms are cause to examine the system for dirty air filters or outdoor coil.

Parking the vehicle in a shaded area, keeping windows and doors shut and avoiding the use of heat producing appliances in the vehicle will help to reduce the heat gain.

 CAUTION
Do not operate the heat pump for extended periods of time without the filter installed. Lint, grease, dirt, etc. that are normally stopped by the filter are now accumulating in the cooling coil. This leads to loss of air volume, icing up of the cooling coil, and could result in serious damage to the operating components of the heat pump.


Maintenance

The only required maintenance on the heat pump is cleaning and replacing the filters. The filters are made from long life non-allergenic natural fibers which can be cleaned and reused. It is recommended that filters be cleaned and changed at least every 2 weeks when the heat pump is in operation. Refer to the manufacturer's owner's manual for additional information on changing the filter.

Vega Touch screen
Class A motorhome



Vega Touch
screen
Luxury Class A
motorhome

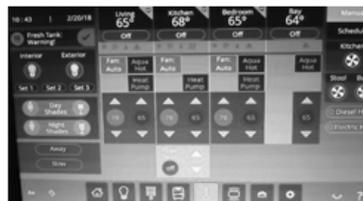

SECTION 9: HEATING & COOLING

Power Vent Fans

The power vent fans are also operated through the Vegatouch system. Fans are turned on and off from the touch screen. These fans can be located in the kitchen and bathrooms. For further information refer to the manufacturer's owner manuals for each of the power vents for specific features.

CEILING FAN (IF SO EQUIPPED)

⚠ WARNING

Be careful to avoid placing any object in the path of the ceiling fan blades!

Turn the ceiling fan ON/OFF using an interior wall switch. The 3-speed ceiling fan is controlled by the pull chain switch. The sequence of operation for the pull chain switch is: OFF, High, Medium, Low, OFF. The slide switch (located on the fan) controls the direction of operation (down for forward, up for reverse). **Stop the fan first before reversing the operation direction!**



NOTE: During cooler temperatures, set your fan settings to "low," and set the fan to turn clockwise to pull warm air from the ceiling back towards the floor. In the summer, the fan should turn counter-clockwise to keep air moving.

For additional information refer to the manufacturer's owner's manual.

HEATING SYSTEM(S)

Aqua-Hot Heating System - See Section 8; *Plumbing Systems*

In-dash Climate Control System - See Vehicle Operation - *Climate Control System*

FIREPLACE (IF SO EQUIPPED)

Your recreational vehicle may include an electric fireplace insert. For detailed operating and safety information, refer to the manufacturer's user guide.

MICROWAVE

 CAUTION
<ul style="list-style-type: none"><input type="checkbox"/> To prevent damage, remove the turntable from the microwave when traveling.<input type="checkbox"/> Make sure you are connected to a 120-volt power source.

 WARNING
Never use the microwave cavity for storage. The microwave cavity should always be empty when not in use.

For details on operation, cleaning and safety information, refer to the manufacturer’s user guide.

General Cleaning Microwave and Convection Microwave

IMPORTANT: Before cleaning, make sure all controls are off and the microwave oven is cool. Always follow label instructions on cleaning products.

To avoid damage to the microwave oven caused by arcing due to soil buildup keep cavity, microwave inlet cover, cooking rack supports, and area where the door touches the frame clean.

Clean with mild soap, water and a soft cloth or sponge, or as indicated below.

- Grease filters: mild soap and water or dishwasher.
- Door and exterior: mild soap and water, or glass cleaner applied to paper towel.
- Control panel: sponge or soft cloth and water.
- Stainless steel (on some models): mild soap and water, then rinse with clean water and dry with soft cloth, or use stainless steel cleaner.
- Turntable: mild soap and water or dishwasher.
- Rack(s): mild soap, water and washcloth. Dishwasher cleaning is not recommended.

Convection Microwave (if so equipped)

The convection microwave bridges the gap between microwaving your food and conventional cooking. Make sure there is sufficient 120-volt power before operating the convection microwave (see *Calculating Electrical Load*). or details on operation and safety information, refer to the manufacturer’s user guide.

COOKING SAFETY

In Case Of a Grease Fire

 WARNING
Do not attempt to use water to put out the fire. Water can spread some types of fire, and electrocution is possible with an electrical fire.

Grease is flammable. Never allow grease to collect around top burners or on the cook top surface. Wipe up spills immediately. Refer to Section 2 – Safety Precautions, for fire safety and fire extinguisher information.

SECTION 10: APPLIANCES

Cooking With Propane (if so equipped)

See the *Propane System Section* for important safety instructions. Refer to the manufacturer's owner's manual for detailed operating and safety instructions for all propane appliances.

INDUCTION COOKTOP (IF SO EQUIPPED)

Induction cooktops are more efficient than gas or electric cooktops. The cooking surface heats through magnetic induction. Cookware for induction cooking should be magnetic (steel or cast iron) and have a flat bottom. Cookware made from aluminum, corning ware, Pyrex, or glass will not work by just placing them on the surface, but can be used if they are placed on top of a magnetic interface disk which will function as a conventional hot plate. Stainless steel cookware may or may not work. If there is a doubt as to whether a certain pan or skillet will work, check it with a magnet. If the magnet clings to it, it will probably work with the induction cooktop; if it doesn't or clings weakly it probably won't work.



CAUTION

Aluminum foil should **NEVER** be used with an induction cooktop. It can permanently melt to the cooktop cracking the surface or causing permanent damage.



WARNING

Touching a hot pan or cooking vessel can still cause burns. Use pot holders or oven mitts to remove hot pans from the cooktop.

Induction cooktops are much safer to use than electric or gas.

- The stovetop stays cool, no burned fingers or hands if you touch the surface.
- Only the cooking vessel gets hot.
- The cooking surface only works when there is a magnetic pan (or interface disk) in place on it. Sensors detect the amount of ferrous material in the area of the magnetic field and if it is not the size of a small pan it won't turn on.
- Induction cooktops will not heat up the kitchen.
- Very rapid temperature increases can be achieved and very fine adjustments can be made.


Refer to manufacturer's manual for detailed operating and cleaning instructions.

RANGE HOOD (IF SO EQUIPPED)

If your recreational vehicle is equipped with a range hood, it will be connected to an exterior vent.

The vent has an inner flap with two snaps. This flap can be snapped shut when the vehicle is in motion, or during storage to keep insects, debris, snow, rain, etc. from entering the recreational vehicle.

Anytime the stove inside the recreational vehicle is being used, this flap **MUST** be unsnapped and the range hood turned ON to vent fumes outside the vehicle.

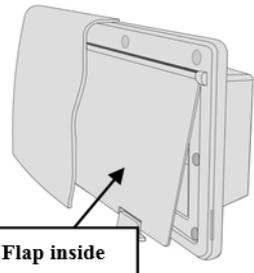

Range Hood Vent

⚠ WARNING

Whenever the stove in the RV is being used: The range hood **MUST** be turned on, and the inner flap **MUST** be unsnapped and free to move. Failure to do so can create an asphyxiation hazard by restricting air flow to this vent.

REFRIGERATOR



NOTE: Make sure you are connected to a 120-volt power source.

The refrigerator is not intended for quick freezing or cooling. We recommend stocking it with pre-frozen or pre-cooled food when possible. The shelves should not be covered with paper or plastic and the food items should be arranged so air can circulate freely.

⚠ CAUTION

The ice maker should be turned off and the ice tray emptied when power to your motorhome has been shut off. With no power, the ice will melt and water will “pool” in the refrigerator door. When power is restored, the vibration will cause this water to run out of the door and on to the motorhome floor.

Contact your dealer or Customer Service for details on winterizing your refrigerator. For detailed operating and safety information, refer to the manufacturer’s user guide.

Cleaning Your Refrigerator

The following are general cleaning guidelines. For detailed information on cleaning your specific refrigerator, refer to the manufacturer’s user’s guide.

Cleaning the Interior

1. Unplug refrigerator or disconnect power.
2. Hand wash, rinse, and dry removable parts and interior surfaces thoroughly. Use a clean sponge or soft cloth and a mild detergent in warm water.
3. Inside the refrigerator, use a warm water and baking soda solution consisting of approximately 1-tablespoon (15ml) baking soda to 1 quart (1 liter) of water. This solution cleans and neutralizes odors. Rinse and wipe dry.
4. Leave an open box of baking soda in the refrigerator and freezer compartments to help prevent odors.



NOTE: Do not use abrasive or harsh cleaners such as window sprays, scouring cleansers, flammable fluids, cleaning waxes, concentrated detergents, bleaches or cleansers containing petroleum products on plastic parts, interior and door liners or gaskets. Do not use paper towels, scouring pads, or other harsh cleaning tools.

SECTION 10: APPLIANCES

There is no need for routine condenser cleaning in normal operating environments. If the environment is particularly greasy or dusty, or if there is significant pet traffic, the condenser should be cleaned every 2 to 3 months to ensure maximum efficiency.

If you need to clean the condenser:

- Remove the base grille.
- Use a vacuum cleaner with a soft brush to clean the grille, the open areas behind the grille and the front surface area of the condenser.
- Replace the base grille when finished.

Cleaning the Exterior

Painted metal exteriors: wash with a clean sponge or soft cloth and a mild detergent in warm water.

Stainless steel exteriors: wash with a clean sponge or soft cloth and a mild detergent in warm water. Do not use appliance wax, polish, bleach, or other products containing chlorine on stainless steel. Stainless steel can be cleaned with a commercially available stainless steel cleaner. A spray-on stainless steel cleaner works best.

IMPORTANT: Do not allow the Stainless Steel Cleaner and Polish to come into contact with any plastic parts such as the trim pieces, dispenser covers or door gaskets. If unintentional contact does occur, clean plastic part with a sponge and mild detergent in warm water. Dry thoroughly with a soft cloth.

For silver-accented plastic parts, wash with soap or other mild detergents. Wipe clean with a sponge or damp cloth. Do not use scouring pads, powdered cleaners, bleach or cleaners containing bleach as these products can scratch and weaken the paint finish.

COOL FREEZE COOLER (IF SO EQUIPPED)

The following is an overview of the Cool Freeze cooler. For details on features, operation, other safety information, and troubleshooting, refer to the manufacturers user's guide.



NOTE: Before using your cooler for the first time, and occasionally after use, clean the inside and outside using a damp cloth.

⚠ WARNING

- Never clean the cooler under running water or in dish water.
- Do not use abrasive cleaning agents or hard objects during cleaning as these can damage the cooler.
- Never use brushes, scouring pads or hard or pointed tools to remove ice or to loosen objects which have frozen in place.
- Always pull out the main plug before you clean and service the cooler.**
- Manufacturer recommends against the use of an extension cord because of potential safety hazards. However if you must use one it **MUST** be UL or CSA listed with a 10Amp (minimum) 120VAC electrical rating.
- Refer to the table in the manufacturer's user guide (in your warranty packet) for a chart on selecting an extension cord.
- ALWAYS** uncoil and extension cord to avoid heat retention and possible melting.
- DO NOT** use power strips or 2 way splitters.
- Under NO CIRCUMSTANCES** should you attempt to splice extension cord wires.

The following guidelines should be followed to assure you are getting the maximum performance from your cooler:

- Do not allow frost to build up on the inside of the cooler. To defrost, remove the contents of the cooler, switch off the device and leave the cover open. Wipe off any water with a clean cloth.
- Allow hot food to cool down first before you place it into the cooler.
- Do not open the cooler more often than necessary.
- Defrost the cooler once a layer of ice forms.
- Avoid unnecessary low temperature.



Cooler has the following features:

- 3 Level battery monitor for protecting the vehicle battery.
- Programmable turbo mode for rapid cooling.
- Display with temperature gauge. (turns off automatically at low battery voltage)
- Temperature adjustment with 2 buttons in steps of 1°C or 2°F
- Detachable handles
- Lid hinges can be reversed to open from the opposite side
- Can be operated on 12VDC or 24VDC
- The cooler can refrigerate or freeze food products.
- The cooler is designed for mobile use and can be carried by two detachable handles.
- The cooler can withstand a short term inclination of 30°.

SECTION 10: APPLIANCES

DISHWASHER (IF SO EQUIPPED)

The following is an overview of the drawer dishwasher operation. For details on operation, cleaning and safety information, refer to the manufacturer's user guide.

1. **Load dishes** – Remove all food scraps and load the dishes.
2. **Add detergent. Check rinse aid.**
3. **Press the power button**
4. **Select a wash program** – The length of the wash program will appear on the electronic display (models with LCD only).
5. **Select ECO (optional)**
6. **Check** – Ensure there is nothing obstructing the spray arm. The drain filter must be level with the filter plate.
7. **Start** – Close the drawer and press the II button.
8. **Finish** – Six “beeps” indicates the end of the wash program. At the end of the wash program, the drying fan will continue to run for a set time or until the drawer is opened. It is normal for some water to remain in the drain filter area after the program is complete.

Contact your Dealer or Customer Service for details on sanitizing and winterizing.

WASHER/DRYER (IF SO EQUIPPED)

If your motorhome is equipped with a stackable washer/dryer set, make sure you have sufficient power available before operating the washer or dryer (refer to calculating electrical load). **Make sure you are connected to a 120-volt power source.**

Refer to the manufacturer owner's manual included in your Owner's Portfolio for detailed safety, operating and care instructions.

A dryer vent opening must be cut into the sidewall of the RV if installing a dryer. Look for the dryer vent label on the wall in the location where the dryer will be installed. Instructions on how to cut the dryer vent hole and install the vent in the wall of the RV are included in your documentation packet.

Contact your Dealer or Customer Service for details on sanitizing and winterizing.



Dryer Vent Label

⚠ WARNING

- Gas dryers should **NEVER** be installed in your recreation vehicle. Dryer prep has been designed for electric dryer operation **ONLY**.
- Never place items in the washer that are dampened with gasoline or other flammable fluids. No washer can completely remove oil.
- Do not dry anything that has ever had any type of oil on it (including cooking oils).
- Doing so can result in death, explosion, or fire**

⚠ CAUTION

Do not operate a dryer in the recreation vehicle unless the dryer is properly vented.

VACUUM SYSTEMS (IF SO EQUIPPED)

Depending on your model, one or both of the following vacuum systems may be in your recreation vehicle.

Central Vacuum System

The following is an overview of the central vacuum system operation. For detailed operating and safety instructions, refer to the manufacturer's user guide.

The central vacuum system installed cleans virtually any surface with no electric cords and has a variety of attachments for many cleaning needs. Make sure you have 120-volt AC power available before operating your central vacuum system (refer to *Electrical Systems*, calculating electrical load).

To operate the central vacuum system lift the vacuum cover, and attach your vacuum hose and cleaning attachment. The central vacuum will automatically activate. It has a large disposable bag that will need to be checked periodically and replaced after usage. The disposable bag is located inside the exterior cargo compartment.

 WARNING

- DO NOT PICK UP ANYTHING THAT IS BURNING OR SMOKING, SUCH AS CIGARETTES, MATCHES, OR HOT ASHES. RV damage, personal injury, or death may result from vacuuming up burning or smoking material.
- DO NOT PICK UP FLAMMABLE OR COMBUSTIBLE LIQUIDS SUCH AS GASOLINE, OR USE IN AREAS WHERE THEY MAY BE PRESENT. RV damage, personal injury, or death may result from vacuuming up flammable or combustible material

Rechargeable Vacuum

The portable vacuum is equipped with a rechargeable battery pack that can be plugged into a 120V AC wall outlet. Refer to manufacturer's user guide for important safeguards and operating instructions. Read all instructions before operating the vacuum cleaner.

SECTION 10: APPLIANCES

Notes:

ANTENNA/SATELLITE SYSTEM(S)

Your motorhome may be equipped with one or more of the following:

Satellite TV Antenna (if so equipped)

The stationary and/or in-motion satellite TV antenna enables you to toggle between satellites while stationary or in-motion using a remote control (if you subscribe to multi-satellite programming).



NOTE: All dome satellite systems are motorized single dish / single LNB mechanisms. They can only point toward and receive programming from one satellite at a time. The automatic satellite dish is compatible with DISH Network® and DIRECTV® standard definition programming and DISH Network HD programming.

The following is an overview of the satellite operation and functions. Refer to the manufacturer's user guide for detailed operating instructions.

Your unit is preset for DIRECTV receivers. To change this setting, refer to the manufacturer's operation manual.

Operating your in-motion antenna

1. Turn on receiver and television set. The antenna must be connected to a receiver that is plugged into 12 VAC.
2. Verify that you are getting the receiver's menu screens on the television. These screens are available with or without the dish finding the signal. Refer to the antenna manufacturer's operation manual for details of receiver set up.
3. Turn the power switch on for the antenna. The dish should start moving, making one or two revolutions before it stops to acquire GPS. This can take a few moments or up to 10-15 minutes. Normal operation will be less than a minute.
4. Once the unit has acquired GPS, the dish will begin its search. The dish will pause on the signal long enough to determine which satellite it has found. If it moves off the signal, it is in an effort to verify the signal and should return to the signal shortly.
5. After the unit has verified that it has the correct satellite, it will continue to track the signal.
6. If the vehicle does not move for six minutes, the unit will toggle to its alternate satellite, then toggle back to the primary satellite and "go to sleep". If the vehicle begins movement in a straight line at 10 mph, the unit will resume tracking mode.
7. If you do not have a signal, see "Troubleshooting" during power up in the manufacturer's operation manual.

Modes of Operation

Whether stationary or in-motion during satellite signal acquisition, the unit enters tracking mode. In this mode, the unit will actively follow the satellite as the vehicle travels, even if the vehicle is stationary for the first six minutes. Tracking mode ends when the antenna has finished its search and the vehicle has not moved for six (6) minutes. The antenna will resume tracking mode if it detects movement in a straight line at 10 mph or more.

In sleep mode, the unit is at rest. The antenna enters sleep mode six (6) minutes after a successful search if stationary, or six (6) minutes after the vehicle stops moving.

SECTION 11: ELECTRONICS

Recovery from Signal Interruption

While traveling, the signal will be interrupted when the line of sight to the satellite is blocked. Signal is acquired again after line of sight is restored. If signal is interrupted for more than 15 seconds, the system automatically enters the search routine. The length of time for the TV picture to recover depends on the receiver model you are using.



NOTE: You must drive in a straight line at 10 mph or more when starting to operate in motion.

Toggle In-Motion

The satellite antenna will automatically toggle between the primary and alternate satellites for your service provider. For toggling in-motion, you may notice a slight delay in satellite switching which could cause a loss in picture. This is normal.

Picture loss should be no longer than three seconds. If the alternate satellite the antenna is trying to toggle to is blocked for more than 25 seconds, the system automatically enters the search routine.



NOTE: Use your on-screen guide to locate your channel rather than “channel surfing”. This will result in smoother operation.

Operating your SD (stationary) antenna

1. Turn on receiver and television set. **The antenna must be connected to a receiver that is plugged into 120 VAC.**
2. **Verify that you are getting the receiver’s menu screens on the television.** These screens are available with or without the dish finding the signal.
3. **Turn the power switch on for the antenna.** The dish will detect if it is already on a satellite signal. If it detects a signal, the dish will move to check its alternate satellite and then move back to the original satellite signal that is on.
4. If no signal was detected, the dish will begin its search to locate the primary satellite. Once the dish locates a signal, it will pause long enough to identify which satellite it has located. This may or may not be visible on your receiver’s point dish screen.
5. After the unit has verified that it has the correct satellite, it will move to check the alternate satellite and move back to the primary satellite to complete the search routine.
6. **If you do not have signal, see *Troubleshooting* in the manufacturer’s owner’s manual. DIRECTV must be set to the “two” satellite, oval dish setting. Refer to your receiver manual. DISH Network receivers must have the check switch set to “SW64”.**



NOTE: Because the antenna uses information from the last location that it was on a signal, satellite acquisition may take longer if the dish is inactive over long distance traveling.

Satellite Dish (if so equipped)

The following is an overview of the automatic multi satellite TV antenna operation. For detailed operating instructions, including receiver set up, refer to the manufacturer's user guide.

When you press "POWER," the antenna will automatically begin searching for satellites. The instructions assume that the antenna is already in the stowed position.

1. Press and hold "POWER" for two seconds or until the TRAV'LER interface displays "POWER ON." Once the unit has been powered on, release "POWER."
2. The interface screen will display the type of satellite dish on the top line.
3. The antenna will enter the search mode as part of its normal operation and will display "Searching" on the bottom line.
4. The antenna will find its home position and begin to look for a satellite. Upon finding a satellite, the antenna will fine-tune or "peak" on the signal.
5. In automatic search mode, the antenna will lock onto three different satellites: 99°, 101°, and 103°. The antenna will display an asterisk for each satellite found.

If the receiver is already set up in the RV, you are now ready to watch TV.



NOTE: If you want to turn off the power to the antenna after it has locked onto satellites, press "POWER" and "SELECT" at the same time.

Before traveling, make sure to press "POWER" and wait for the antenna to start to power up; then press "POWER" again to initiate the stow sequence. See below for information on stowing before traveling.

User Menu for Manual Operation

The interface includes a user menu for some advanced features. The options most commonly used are the ability to change the dish type, check software/hardware versions, change desired satellite configuration, or manually move the dish.

WARNING

Improper use of the user menu could cause damage to the antenna and/or vehicle. Do not enter the user menu for regular operation.

The antenna is not meant for use while traveling. To stow the unit for travel, press "POWER" one time. The unit will stop what it is doing and return to the stowed position. The interface will not turn off unless the antenna is successfully stowed. Visually inspect that the antenna is in the stowed/travel position before traveling. Do not move the vehicle until the antenna is stowed.

Emergency Manual Stow

If unable to stow the antenna, it may be necessary to use emergency manual stow. Emergency manual stow is meant as a last resort and is not meant for common usage! To use emergency manual, stow, unplug the interface box. Then, remove the black plastic bolt from the back of the mount. Insert a 3/8 socket extension into this auxiliary drive. Turn the auxiliary drive clockwise to lower the unit. Do not use a drill!

SECTION 11: ELECTRONICS


Emergency Power Off

The antenna comes with an emergency power off feature. To activate it, press and hold “POWER” and then press “SELECT” while still holding “POWER”. The antenna will stop and turn off. If the emergency power off feature is used, the antenna may not be in a safe position for travel. Do not move the vehicle until the unit is stowed.

HDTV Antenna (if so equipped)

Your recreation vehicle is equipped with an exterior **fixed height** high definition TV antenna. This antenna manually rotates 360° and is capable of receiving any Over-The-Air (OTA) high definition television signals being broadcast in your receiving area.

The enclosure base for the antenna (inside the RV on the ceiling) will have a knob that can rotate a full 360° to adjust for the best signal coming to the antenna. Your RV may have one of two types of antenna bases mounted to the ceiling. The first type has a button on the large knob that must be pressed first to unlock it, so it can be turned. The button may have to be held while rotating, and then once released, locks the antenna in position. (Arrow on the knob indicates antenna direction). The second type of antenna base has a large knob that must be pushed upward to unlock the antenna. The knob can then be rotated 360° and when released locks the antenna in place. This antenna has a travel position when you are ready to move your RV. Rotate the handle clockwise (indicated by the arrow on the ceiling plate) until the antenna hits a hard stop and will not rotate further. Turn off the antenna power supply.

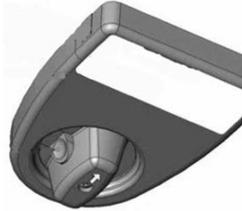

Base with Locking Button.



Push knob in to rotate antenna

NOTE: A channel scan must be run to search for and tune in local TV channels. This feature is built into each TV and is not the same as pressing the channel up/down button on the TV remote control. Your TV manual will explain how to perform a channel scan.

NOTE: The antenna is a fixed height (12" maximum) and cannot be lowered or raised. Trees and foliage will interfere with receiving a strong HDTV signal.

Refer to the HDTV manufacturer’s manual for detailed operating and safety information.

Antenna Power Supply (if so equipped)

For good station reception, the antenna power supply must be turned ON to view local television stations. Turning the antenna power supply ON sends 12-volt DC through the cable to the TV roof antenna turning the antenna amplifier ON. Over-the-air HDTV signals are then fed to the TV from the antenna.




Antenna Power Supply

Turn the antenna power supply OFF to view cable television or to use the DVD player. The ON/OFF switch is located on the wall plate for the antenna connection. An LED will light to indicate antenna power is ON.

Automatic HDTV Antenna

Quick start guide – typical use:

1. Power on the antenna by pressing the **ON/OFF** button. (B).
2. Press the **SEARCH** button to initiate a search. Within 2-3 minutes, the antenna will point where maximum reception is found (G).
3. Program the TV Channels:
 - Go to Channel Setup on your TV menu.
 - Select the Over-The-Air (OTA) antenna.
 - Do not select Cable.
 - Select Channel Search or **Channel Scan**. This will program the stations in your area into the TV. Do this whenever the antenna is re-positioned.

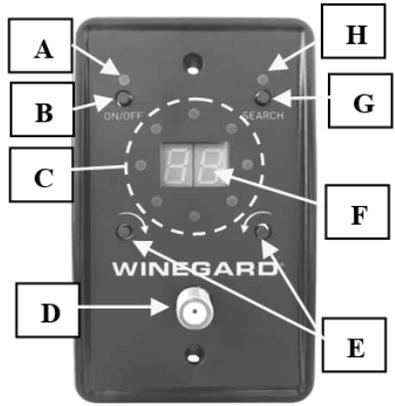

Antenna Control Panel

- A. **On/Off LED:** Green LED lights when antenna amplifier is turned on and system is in Antenna Mode.
- B. **On/Off Button:** Used to turn the antenna on and off. When turned ON it is in Antenna Mode and will receive Over-The-Air (OTA) signals. When turned OFF it is in Cable Mode and will receive campground (park) cable signals (provided you have the park cable attached to the cable input connector on the antenna control panel).
- C. **Positional LEDs (Green and Red):** 8 green/red LEDs in a circular pattern. Top of wall plate represents the front of RV, bottom is back of RV.
 - If (2) green LEDs are lit, the antenna is positioned between those positions.
 - If both the red and green LEDs are lit on the same spot, that indicates the current antenna position and optimal pointing location.
 - Refer to the **Search Button** for more information.
- D. **Front Coaxial TV Connection:** Connection for cable TV. There is an additional connection on the rear of the antenna control panel.
- E. **Rotate Buttons:** Fine tune a channel that may be pixelating or weak. Manually point towards a known antenna location.
- F. **Readout Display (2 Digit):** Will show the number of TV frequencies found at the current position. This is the number of RF Signals available and will differ from the amount of virtual channels scanned on a TV because of multi-casting. Typically, a TV scan will result in 2x to 3x more channels than RF Signals.
- G. **Search Button:**
 - Initiates a new search after powering antenna on.
 - Press and hold the search button for 2 seconds to clear the memory and start a new search.
 - The system will also clear all search results each time antenna is powered off.
 - Typical search will take 2 to 3 minutes. A red LED cycles through the 8 positional LEDs to indicate the antenna is moving and which direction it is moving. After the search is complete, the antenna automatically goes to the position that results in the most watchable TV channels.

SECTION 11: ELECTRONICS

- The display will show number of frequencies seen at that position. Both the green and the red LEDs will light to indicate successful search. Additional red LEDs will light to show channels found in alternate positions. Pressing search moves antenna to next best location. Continue pressing search to cycle through all other positions with additional channels until it returns to first search location. Pressing and holding the search button clears the memory and starts a new search.

Sleep Mode

When the system is powered on, and no buttons are pressed for 3 minutes the system enters Sleep Mode. The power LED will remain lit and the antenna amplifier will be on allowing you to watch TV. All other LEDs will be off. Press any button on the antenna control panel to exit Sleep Mode.

Troubleshooting

If the readout displays “HS” (in manual mode), the antenna has reached the operational limit and needs to rotate the other direction.

Pressing the Search and Counter Clockwise Rotate button at the same time will reset the system. Performing a reset can also clear error messages. The following is a list of possible Error Codes (and resolutions) that can appear on the 2-digit readout during use.

- E1** **Cause:** Short in coax between control panel and antenna
Action: Check all cables and connections then perform RESET function on control panel or disconnect 12 volts.
- E2** **Cause:** No antenna detected
Action: Check all cables and connections to antenna.
- E3** **Cause:** Motor movement error
Action: Antenna may still function. If problem persists, contact Winegard Technical Service.
- E4** **Cause:** Tuner error. Controls and antenna will still function.
Action: Perform RESET function on control panel. If problem persists, contact Winegard Technical Service.
- E5** **Cause:** Factory Mode
Action: Perform RESET to exit Factory Mode and return to normal operation.

If the above steps do not resolve the issue or another persists, please contact Winegard Technical Service at 1-800-788-4417 or email help@winegard.com.

SATELLITE DISH (IF SO EQUIPPED)

Your motorhome may be equipped with the automatic multi-satellite TV antenna.

The following is an overview of the antenna operation. For detailed operating instructions, including receiver set up, refer to the manufacturer’s user guide.

When you press “POWER,” the antenna will automatically begin searching for satellites. The instructions assume that the antenna is already in the stowed position.

1. Press and hold “POWER” for two seconds or until the TRAV’LER interface displays “POWER ON”. Once the unit has been powered on, release “POWER”.
2. The interface screen will display the type of satellite dish on the top line.
3. The antenna will enter the search mode as part of its normal operation and will display “Searching” on the bottom line.
4. The antenna will find its home position and begin to look for a satellite. Upon finding a satellite, the antenna will fine-tune or “peak” on the signal.

5. In automatic search mode, the antenna will lock onto three different satellites: 99°, 101°, and 103°. The antenna will display an asterisk for each satellite found.

If the receiver is already set up in the RV, you are now ready to watch TV.



NOTE: If you want to turn off the power to the antenna after it has locked onto satellites, press “POWER” and “SELECT” at the same time.

Before traveling, make sure to press “POWER” and wait for the antenna to start to power up; then press “POWER” again to initiate the stow sequence. See below for information on stowing before traveling.

User Menu for Manual Operation

The interface includes a user menu for some advanced features. The options most commonly used are the ability to change the dish type, check software/hardware versions, change desired satellite configuration, or manually move the dish.

The antenna is not meant for use while traveling. To stow the unit for travel, press “POWER” one time. The unit will stop what it is doing and return to the stowed position. The interface will not turn off unless the antenna is successfully stowed. Visually inspect that the antenna is in the stowed/travel position before traveling. Do not move the vehicle until the antenna is stowed.

Emergency Manual Stow

If unable to stow the antenna, it may be necessary to use emergency manual stow. Emergency manual stow is meant as a last resort and is not meant for common usage! To use emergency manual, stow, unplug the interface box. Then, remove the black plastic bolt from the back of the mount. Insert a 3/8 socket extension into this auxiliary drive. Turn the auxiliary drive clockwise to lower the unit. Do not use a drill!

Emergency Power Off

The antenna comes with an emergency power off feature. To activate it, press and hold “POWER” and then press “SELECT” while still holding “POWER”. The antenna will stop and turn off. If the emergency power off feature is used, the antenna may not be in a safe position for travel. Do not move the vehicle until the unit is stowed.

WARNING

Improper use of the user menu could cause damage to the antenna and/or vehicle. Do not enter the user menu for regular operation.

SECTION 11: ELECTRONICS

ENTERTAINMENT CENTER(S)

Home Theater System

The home theater system includes an FM tuner, DVD/CD, iPod dock, television, front and rear speakers.

The coach home theater system and the bedroom system operate separately.

Inserting a DVD into the player will activate the television. Likewise, removing the DVD from the player will automatically turn off the television.

Make sure there is sufficient 120-volt power available before operating the television entertainment system (refer to *Sec. 6 Electrical Systems*, Calculating electrical load).

NOTE: Any TV that may be visible to the driver whether it be a front TV or one mounted in the bunk area above the driver, will not operate with the ignition ON. The AC outlets for these TV locations are disabled as a safety feature. Normal operation resumes when the ignition is OFF and parking brake is engaged. The bedroom television will operate while the motorhome ignition is ON if the motorhome has a 120-volt AC power source available.

Refer to the home theater system individual component manufacturer's information for detailed operating instructions.

Exterior Entertainment Center (if so equipped)

The exterior entertainment center is located on the curbside of the unit. You can access the entertainment center by opening the exterior cargo door to the stationary open position.

Refer to the individual component manufacturer's information for detailed operating instructions.

WI-FI BOOSTER (IF SO EQUIPPED)

Your recreation vehicle may be equipped with an electronic Wi-Fi booster. This booster will repeat and boost any accessible Wi-Fi signal within range.

Winegard Connect 4G1

Typically used on motorhomes. The three long antennas are dedicated to long-range Wi-Fi signal reception. The two smaller antennas support the integrated 4G LTE modem that will link to a 4G LTE network if Wi-Fi is unavailable. Fixed antenna height is 12 inches. Antennas are rigid and not flexible. The small connection box mounts inside your RV and requires 120 VAC power from your RV. An Ethernet cable connects from the roof antenna unit to the connection box. Refer to the Wi-Fi Booster manufacturer's manual for detailed operating and safety information.



Winegard 4G1

CLEANING THE INTERIOR

To keep the value of your recreation vehicle, perform regular maintenance using the proper materials and procedures. Using the wrong cleaner may result in damage to the surfaces in your vehicle. Check with the manufacturer's information for the recommended cleaning agent. If in doubt, check to see if the cleaner will cause damage by testing a small area out of sight or contact your dealer for assistance. Do not use flammable liquids or sprays to clean the recreation vehicle.

Décor Glass (if so equipped)

Use a glass cleaner to remove smudges, smears and spots. If there is decorative etching on the décor glass, use care when cleaning around that area.

Furniture Upholstery

To retain the value of your recreation vehicle, maintain the furniture upholstery carefully and keep the interior clean. Vacuum the furniture regularly using a soft brush attachment to remove any loose dirt or debris.

Fabric (if so equipped)

It is recommended the fabric be professionally cleaned if it becomes stained or soiled. The professional cleaner should be made aware the fabrics that may have been treated to be fire resistant. For more information, refer to the specific furniture manufacturer's care instructions.

Ultraleather™ (if so equipped): It is recommended the Ultraleather™ be professionally cleaned if it becomes stained or soiled. For more information, refer to the specific furniture manufacturer's care instructions.

Leather (if so equipped): Periodic vacuuming, using a dry cloth to wipe up spills immediately, and using a damp cloth on problem areas, will help to keep your leather furniture in good condition. Leather surfaces can vary, as do the cleaning methods. Refer to the furniture manufacturer's recommendation, or consult a cleaning professional.

It is recommended you do not use any cleaners containing oils, waxes or silicones. Cleaners containing silicone can eventually destroy the finish on the leather. Cleaners containing oils or waxes should not be used as they leave residues on the surface of the leather which can attract more dirt which can eventually lead to cracking.

Window Treatments

Fabric – Drapes and valances: Dust occasionally with a vacuum and soft brush attachment. It is recommended the fabric be professionally cleaned if it becomes stained or soiled. The professional cleaner should be made aware the fabrics that may have been treated to be fire resistant.

Window Shades

Shades should be vacuumed periodically to remove dust. It doesn't matter what type of shade or fabric you have, using your vacuum cleaners upholstery brush on low suction will remove most dust and dirt from the shade. Refer to the shade manufacturer's owner's manual for additional and detailed information.

To remove stuck on dust or stains refer to the following guide.

Solar shields: Use a sponge or soft brush and water to remove stains. A mild cleaning solution can be used to remove tougher stains. Rinse after cleaning by wetting a clean cloth in fresh water, wringing out any excess and wiping the areas where the cleaner was used.

Day/Night Shades: Clean with a mild cleaning solution using a sponge or paper towel. Wipe down with water after cleaning and dry thoroughly before raising the shade. Do not

SECTION 12: INTERIOR

use spot remover, household cleaners or detergents to remove soiled spots, as these may cause damage to fabric or loss of color from fading.

Mini Blinds: A simple dry rag may do the trick. If they are especially dirty, you can use cold or warm water to clean them; **never use hot water.**

Fill a spray bottle with water and a tiny amount of soap. Then spray a lint-free towel with the mixture and use the towel to wipe down each slat. While cleaning, try not to bend the slats. They can also be soaked in a bathtub to loosen up any debris so the slats can be wiped down easily.

Roller Shades: Can be easily cared for by simply using soapy water or a mild cleaning solution on spots. However, try a small area first. Harsh household cleaners or detergents may cause damage to fabric or loss of color. It is our recommendation to dust the rails and fabrics of the shades on a regular basis. Shades should be kept in the closed or up position when not in use, to maintain pleat retention and minimize dirt and soil build-up. Do not store shades in the down position. This may cause some loss of pleat retention if the shades are not operated on a consistent basis.



NOTE: If your recreation vehicle must be stored for an extended period of time, store shades in the up position and cover your windows with additional protection (I.E. Cut out cardboard).

Cabinetry and Tables

To keep hardwood doors, cabinet fronts and hardwood tables looking like new regularly dust with a soft cloth dampened with a cleaning polish or mild detergent solution. Avoid using ammonia based products or silicone oils as they may cause damage if used over a long period of time.

The finish is durable and resistant to most household spills. However, spills should be wiped up promptly to avoid potential problems. Excessive prolonged exposure to direct sunlight, high temperatures and high humidity can cause damage to both the finish and the wood itself. These should be avoided.

Interior Wall Panel

Please contact your dealership service department for assistance in repairing décor paneling. If deep scratches occur on the wall panel, putty sticks can be used to cover scratches on wood surfaces. These can be obtained from local hardwood stores and lumberyards.

To clean, use a mild solution of soap and lukewarm water with a soft sponge or cloth. Wipe dry with a soft, clean cloth.



CAUTION

Do not use abrasive cleaners as they may cause the vinyl to scratch and become dull. Do not use cleaners that contain bleach

Quik Panel Wall Panels (if so equipped)

Quik Panels are used on certain Entegra motorhome models and may be treated and cleaned as a high quality painted surface. All Quik Panels are sealed or glazed and can be cleaned with a soft cloth and mild soap and water (such as dish soap).

ABS Plastics

Dust and wipe clean with soft, damp cloth or chamois, wiping gently. Do not use gritty or abrasive particle soaps or scouring compound to clean ABS plastic. Avoid using “citrus” or biodegradable cleaners that contain “D-Limonene” as they may damage plastic materials.



NOTE: Oil based soaps and cleaners are **not** recommended. No abrasive cleaners or alcohol cleansers should be used. If other cleaner solutions are used, we recommend trying a spot in an inconspicuous area.

SOFA AND DINETTE

⚠ WARNING

Always use seatbelts if sitting in the sofa or dinette while the motorhome is in transit

Your motorhome may be equipped with one of the following sofa styles.

Easy Bed Sofa

The easy bed sofa should comfortably seat two to three adults. It converts to a bed by lifting at the front of the sofa seat section and pulling it towards you. The sofa back will follow and pivot down into a horizontal position. To revert back to an upright sofa, reverse the process (make sure to pull the seat belts out into their usable positions). Refer to the furniture manufacturer’s care instructions for this product.

Hide-A-Bed Sofa

The hide-a-bed sofa functions much the same as a regular residential hide-a-bed sofa. To make the hide-a-bed sofa into a bed, remove the seat cushions and pull the strap located at the front of the sofa seat bottom out towards you firmly and gently.

To convert the hide-a-bed back into the upright sofa position, reverse the process (make sure to pull the seat belts out into their usable positions). Be sure to hold the sofa strap firmly to ensure the hide-a-bed sofa does not suddenly drop shut. Refer to the furniture manufacturer’s care instructions for this product.

Love Seat

The love seat adds to your motorhome seating capacity. It should seat up to two adults comfortably. Refer to the specific furniture manufacturer’s care instructions for this product.

Dinette Table

The dinette table can be extended by standing at the end of the table, firmly holding both sides of the table, and pulling the table towards you. To return the table to the stowed position, reverse this process pushing it in until the table locks in place.

Free Standing Dinette Chairs (if so equipped)

Two free standing chairs and two folding chairs are included in the Free Standing Table/Chair Package (if so equipped). When traveling in the motorhome, it is recommended the free standing dinette chairs be fastened securely at the dinette table, and the folding chairs be secured in a closet or storage area.

WARNING

Do not allow occupants to occupy the free standing dinette chairs while the motorhome is in transit.

PANTRY OR HUTCH (IF SO EQUIPPED)

Your recreation vehicle may have a pantry or hutch that you can use for storage. Make sure all items stored in the pantry or hutch are secured to prevent shifting during travel. This cabinetry has been designed to accommodate the normal camping items which may be bulky but not necessarily heavy. **Remember your recreation vehicle's load capacity is designed by weight, not volume, so you cannot necessarily use all available space.**

If your pantry or hutch has sliding pantry shelves, they have been equipped with a locking mechanism to keep them in place during transit. To secure the shelf in place, push it all of the way in until the latch tab clicks into place. Always pull out slightly on the shelf to make sure that it is stationary and secure in the transit position. To release the shelf, push in on the tab and pull the shelf slowly towards you.

WARNING

Your RV's load capacity is designated by weight, not by volume, so you cannot necessarily use all available space when loading the vehicle. Do not exceed your GVWR and ensure you are loading the vehicle as evenly as you can for the best possible handling. Ensure heavy items are secured so they do not shift during travel.

COUNTERTOPS

To prevent permanent damage to your countertop:

- Use a cutting board to prevent unnecessary damage to the countertops. Do not cut directly on the countertop.
- Always use a hot pad or trivets under hot pans or dishes or heat producing appliances such as frying pans and the like.
 - Quartz** will absorb heat from the pan. Resin in the countertop can withstand temperatures of 150°. Do not place a hot pan (from stove or oven) on a quartz countertop as it will burn or cause permanent damage.
 - Quartz** is highly scratch resistant and stain resistant but prolonged exposure to sunlight can eventually damage a **Quartz** countertop.
 - Heat will damage the **solid surface** countertops.
- Avoid harsh chemicals such as drain cleaners, oven cleaners, etc.
- Use coasters under all glasses, bottles and cans.
- Do not store toiletry products directly on your countertop surface. Hair products, perfumes, colognes, nail products, creams, lotions and potions have a tendency to spill or leak and go overlooked. Even though the counter top is sealed, a substance that remains on the surface for an extended period may stain Quartz.
- Run cold water when pouring hot/boiling water into the sink.

Your motorhome may be equipped with one or both of the following countertops.

Quartz Countertops (if so equipped)



NOTE: Only have a professional fabricator repair any countertop damage.

Cleaning your countertop

To keep quartz countertops clean, wipe up spills immediately before they have a chance to dry. Use mild dishwashing soap and a soft cloth. For dried spills a non-abrasive sponge (designed for nonstick pans) works well along with a little elbow grease. Keep a *plastic* putty knife handy for scraping off gum, nail polish, paint or other messes.

Remove cooking grease using a degreasing product that will loosen then remove the grease. Follow cleanser manufacturer instructions. For stains like permanent markers moisten a cloth with Goo Gone (or similar) and rub into the stain. Rinse with warm water. A general deep cleaning is recommended at regular intervals using a nonabrasive surface cleaner on the countertop. Let it sit for 10 minutes and wipe with a non-abrasive sponge.

- **Never use abrasive cleansers and avoid scouring pads.** If you need a gentle cleanser to remove stains make sure it is specifically designed for Quartz.
- Do not use nail polish remover, turpentine, drain cleaner and dishwashing rinsing agents. You may use *diluted* bleach or a mild bleach cleanser, but oven cleaners or concentrated bleach should never be used. If they come in contact with the counter top, rinse immediately with water.

Solid Surface Countertops (if so equipped)

Soapy water, ammonia based cleaners (not window cleaners as they can leave a waxy build up that may dull the surface) or commercially available solid surface cleaners will remove most dirt and residue from all types of finishes. A damp cloth followed by a dry towel will remove watermarks.

Difficult stains can be removed from the matte finish with a green Scotch Brite® pad and a mild abrasive cleaner.

Disinfect the surface periodically with diluted household bleach (one part water to one part bleach).

For cuts and scratches, sand the matte finish lightly with (220) fine grit sandpaper until the cut or scratch is gone. Restore finish with a green Scotch Brite® pad and mild abrasive cleaner.

Solid surface sink maintenance

Occasionally, clean the solid surface sink by filling one-quarter full with a 50/50 water/bleach solution. Let soak for 15 minutes, and then wash sides and bottom of sink as solution drains.

FLOORING

Carpet

Vacuum your carpet regularly. It is important to remove loose soil and debris while it is on the surface. Heavily traveled areas (i.e., walkways, areas in front of the furniture) may be protected with small throw rugs to prolong the life of the carpet.

SECTION 12: INTERIOR

Prompt attention to spots and spills is essential. Remove as much of the spill as possible. Absorb wet spills as quickly as possible by blotting repeatedly with white paper or cloth towels.

Refer to the manufacturer's guide for detailed cleaning information, or contact a cleaning professional.

Ceramic tile

Vacuum the ceramic floor tiles regularly to remove dirt and other gritty particles, then damp mop or sponge with an all-purpose, non-oil based cleaner. Refer to the manufacturers guide or contact a cleaning professional for detailed cleaning information.

Grout, the material used between the tiles is porous, and sealing it will simplify maintenance in the future. The ceramic tile manufacturer recommends applying a sealer at least twice a year for maximum stain protection. Sealers may be purchased at most local home centers or floor-covering stores. Neglected or heavily trafficked tile may require more intensive cleaning.

DO NOT:

- Use cleansers containing acid or bleach for routine maintenance.
- Use wax cleaners, oil-based detergents or sealants to maintain your tile (sealants may be used on grout joints and natural stone).
- Use ammonia (it will discolor grout).
- Use harsh cleaning aids like steel wool pads or scouring pads containing metal.
- Use a cleaning agent that contains color on unglazed ceramic tile or natural stone.

DO:

- Test scouring powders on a small area first (not recommended for natural stone).
- Use a sealer on grout joints.
- Have any damaged or broken tiles replaced only by a qualified contractor.

CEILING FABRIC

The ceiling fabric is made from padded vinyl fabric. Wash with mild detergent and water. Use a soft bristle brush for stubborn soil. Rinse and dry. Some household cleaners and solvents remove plasticizers from vinyl, making them brittle. Abrasive cleaners may mar or scratch the surface. Always test a small hidden area before applying cleaners to the vinyl surface.

POWER WINDOW SHADES (IF SO EQUIPPED)

Power day shades have been installed for the windshield area of your motorhome.

To extend the shades, locate the appropriate switch and momentarily press the down arrow on the switch. To retract the shade, momentarily press the up arrow of the switch. Pressing the down or up arrow on the switch a second time will stop shade operation.



NOTE: Operation of front windshield power shades is limited or disabled when the chassis ignition key is turned to the "on" position. This feature prevents unintended shade extension while driving.

SLEEP NUMBER® MATTRESS (IF SO EQUIPPED)

For detailed instructions on finding your sleep number, and care information, refer to the manufacturer's user guide included in the Owner's Portfolio.

BED STORAGE

Additional storage has been provided under the bed. The bed platform is equipped with gas struts to assist with easy access. To access the storage area, grasp the end ledge at the foot of the bed and lift carefully. The gas struts will hold the platform open. To close, carefully push down on the bed slowly easing it to the closed position.

 CAUTION
Before lifting, be sure there is nothing on the bed that will restrict its movement or add extra weight. Use caution when opening or closing the bed to keep hands and fingers at the end ledge provided (not on the side or further back than necessary) to avoid pinch points.

The bedroom electric slide room system may be located under the bed. Use care not to obstruct the slide room system when using the under bed storage area.

POWER BUNK BED (IF SO EQUIPPED)

Your motor home may be equipped with a power bunk bed. It may include a wood ladder that hooks on to the side of the bed in order to access the upper bunk. The upper bunk has preset limits as to how far it can be raised and lowered. The lower bunk is fixed in position and does not move. To operate the bed insert the key, and turn it to the ON position. Press the UP or DOWN arrow button. When upper bunk is positioned where you want it, turn the key to the OFF position. Remove the key to prevent accidental movement of the bed.



SECTION 12: INTERIOR

WARNING

- There should be no people, pets or objects on or below the bunk while raising or lowering it
- Never ride on the bunk while the vehicle is in motion.
- Weight limit of the upper bunk bed and bunk ladder is 300 lbs. maximum. Do not exceed the weight limit** of the bunk ladder or the bunk bed itself.
- Failure to comply with these guidelines may result in serious injury or property damage**

SAFE (IF SO EQUIPPED)


Your recreational vehicle may be equipped with a safe. The safe is intended to help to safeguard valuable items. You are solely responsible for any liability from loss of personal property that is placed within the safe. Refer to the manufacturer's user guide in your Warranty Packet for information on the use and care of your safe.

Typical safe locations are:

- In the bedroom overhead cabinet behind the television
- Mounted to the floor of the closet
- Under the bed

ENTRY DOOR OVERHEAD CONTROL PANEL

Not Used

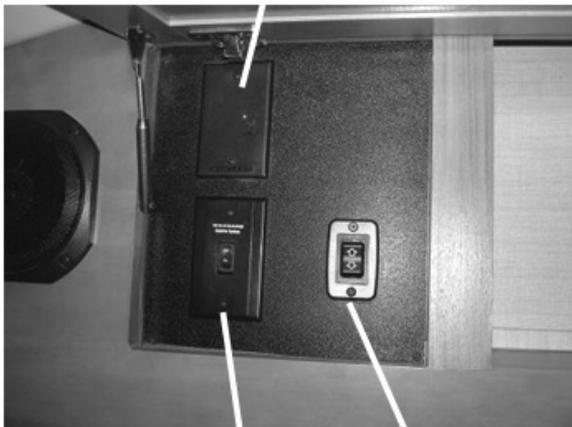

Satellite
On/Off
Switch

Awning
Switch

BATHROOM WATER HEATER SWITCHES



SECTION 12: INTERIOR

Notes:

CLEANING THE EXTERIOR

To protect your motorhome's exterior finish, wash it often and thoroughly. If desired, you may wash and wax your new motorhome 60 days after purchase. The exterior paint does need time to cure before any wax is applied to the exterior surface. Careful maintenance for the first 60 days will assure a long lasting durable finish.

Your RV is exposed to many environmental conditions that have an adverse affect on the paint finish:

- Road Salt and Sodium Chloride
- Road Tar / Bugs
- Bird Droppings / Tree Sap
- Industrial Fallout / Acid Rain /Pollution
- UV Exposure and Moisture

The most common problems resulting from these conditions are corrosion, staining, and chemical spotting. Generally, the longer the foreign material remains in contact with the exterior finish, the more extensive the damage. These problems can be minimized by regularly scheduled washing and polishing. Wash your motorhome as soon as possible if it becomes contaminated with foreign material.

Avoid parking under trees or near ocean sea salt. Ice or snow should not be scraped from the painted surface: Brush off!

Gravel roads should be avoided.

Anti-freeze, gasoline or washer solvents if spilled on the painted surface should be rinsed off with water immediately. Bugs and bird droppings should be rinsed off daily.

The use of a protective covering (bra) is not recommended and will void the limited life-time warranty of the diamond shield protective surface (see *Cleaning the Diamond Shield Surface*).

Washing

Commercial washing should be avoided. Wash with cold water using a mild liquid soap. Dry wiping with a dry cloth is not recommended.

Make sure the RV's surface temperature is cool, under 90 F, and out of direct sunlight. A shaded area is ideal for washing your vehicle as direct sunlight causes water spotting. Use a mild soap, detergent or car wash shampoo. Try to avoid combination wash-n-wax products as these waxes can cause build up and are designed for smaller surfaces. Have two dedicated sponges or wash mitts: one for the paint finish and one for the wheels and under carriage. Brushes or wash mitts made of plastic bristles are acceptable for use on tires and wheel wells, but are not intended for use on the paint finish. Avoid using such items on painted surfaces as they will damage the RV finish. Wash the wheels and wheel wells first as this removes heavy dirt and debris and prevents it from splattering on panels. Wet the entire area down to remove loose dirt and grime, then hand wash one area at a time using your dedicated paint finish sponge or wash mitt. Wash from the top and work your way down, rinsing frequently to minimize grit abrasion. Follow with a final rinse of water. This process will remove most contamination from the RV's surface.

For stubborn stains such as road tar or bug stains, use an ammonia based glass cleaner or a small amount of rubbing alcohol on a damp cloth followed immediately by warm soapy water, and rinsing with clean water. This may not dissolve the road tar, but it will loosen tar and bug stains and remove them from the surface.

Do not use solvent based cleaners on bird droppings or tree sap as these are water based stains. They can be dissolved using ammonia based glass cleaner, warm soapy water and

SECTION 13: EXTERIOR

a little “elbow grease”. Once again, after removing stubborn stains immediately rinse with clean water.

Drying the RV is just as important as washing your vehicle. Tap water and well water contain many chemicals that could water stain your RV’s finish.

We suggest using a damp natural or synthetic chamois. There are other drying products such as lint-free micro-fiber towels that work just as well.

During cold weather

Salt and other chemicals that are spread on winter roads in some geographical areas can have a detrimental effect on the motorhome’s underbody. **If your motorhome is exposed to these conditions, spray the underbody with a high-pressure hose every time you wash the exterior of your motorhome.**

Take special care to remove mud or other debris that could trap and hold salt or moisture. After washing your motorhome, wipe off all water drops from the rubber parts around the slideout and doors.



NOTE: When the slideout or door is frozen, opening it by force may tear off or crack the rubber gasket that is installed around the slideout or door. Therefore, pour warm water on the gasket to melt the ice (wipe off the water thoroughly after opening the slideout or door). To prevent the weather stripping from freezing, treat it with a silicone spray.

Waxing

Wax your motorhome once or twice a year, or when painted surfaces do not shed water well. Use a soft cloth to apply a small amount of wax to the painted surfaces. After the wax has dried, polish the motorhome with a dry, soft cloth.

Do not wax your motorhome in direct sunlight. Wax it after the surfaces have cooled.

Do not apply wax to any area having a flat black finish as it can cause discoloration. If the finish has been stained with wax, wipe off the area with a soft cloth and warm water. When waxing the area around the various openings, do not apply any wax on the weather strip. If it is stained with wax, the weather strip cannot maintain a weatherproof seal around the opening.



CAUTION

- Do not use waxes containing high-abrasive compounds. Such waxes remove rust and stains effectively from the paint work, but they are also harmful to the luster of the painted surface since they scrape off the coating. Further, they are detrimental to glossy surfaces, such as the grille, garnish, moldings, etc. Do not use gasoline or paint thinners to remove road tar or other contamination to the painted surface.
- Do not use a buffer and a buffing compound as it may damage the exterior surface. Please contact a professional paint body shop for assistance.

Polishing your motorhome

If painted surfaces have been severely damaged and have lost their original luster and color tone, polish the surface lightly with a fine polishing compound. Avoid limiting your polishing to the damaged surface only; polish a somewhat wider area, moving the polishing cloth in one direction. After polishing, flush the compound from the surface and apply a coat of wax to regain a beautiful luster.

Damaged paint

To prevent corrosion, touch up small cracks and scratches in the paint coat as soon as possible with touch-up film or paint. Carefully check the body areas facing the road and the tires for damage to the paint coat caused by flying stones, etc.

Cleaning the Diamond Shield surface

Your motorhome is equipped with a protective Diamond Shield surface located on the front lower cap area, hood edges, generator door, under the entry door grab handle and door lock. When cleaning the surface, do not use harsh or abrasive cleaners or detergents. The manufacturer of the Diamond Shield surface **does not** recommend the use of **any** of the dry wash types of cleaners as they are intended for non-porous surfaces, paint protection films are a porous material. Car wash type soap is recommended.

Bugs should be washed off as soon as possible. One bug cleaner recommended by Diamond Shield is **Bug Magic**, but any similar product should work just as well.

Use EXTREME care if using a pressure washer, too high of a pressure or misuse of pressure washer may cut or tear the film. Pressure washer damage **IS NOT** covered under Diamond Shield's warranty. **The application of ANY products over Diamond Shield such as vinyl bras, banners, etc. will void the Diamond Shield warranty.**

Diamond Shield recommends the use of 303 Aerospace Protectant™, **especially** before any trips or Protect All www.protectall.com. Both of these products replenish and provide UV screening protection, repel dust, soiling and staining, and should be applied every time you clean the front of your motorhome. For minor scuffs Diamond Shield recommends the **NOVUS** line of products. Waxing of your motorhome is recommended at least 3-4 times per year. Prior to putting your motorhome in storage, the Diamond Shield surface should be cleaned and waxed. Diamond Shield recommends Mothers or Maguire's Liquid wax. **DO NOT USE** wax designed for specific colors.

Cleaning plastic parts

Use a sponge or chamois to clean plastic parts. Use warm water and a soft cloth or chamois to remove any white residue from dark colored plastic surfaces. Do not use a scrubbing brush, other hard tools, or wax containing abrasives as they may damage the plastic surface.

CAUTION

Do not allow plastic to come into contact with brake fluid, engine oil, grease, paint thinner, or battery acid. These will damage plastic. Use a soft cloth and a mild detergent solution to wipe away any such contact.

Chrome parts

To prevent chrome parts from spotting or corroding, wash with water, dry thoroughly, and apply a non-abrasive automotive wax. If the chrome is severely damaged or pitted, use a commercially available chrome polish product.

SECTION 13: EXTERIOR

FRAME

Frames will show signs of rust much sooner when exposed to salty air than in dry air. Also, frames receive heavy abuse from road conditions such as sand, pebbles, objects in the highway, and/or ice inhibiting chemicals, all of which will cause chipping and a blasting effect on the painted surface. Periodically rinse off the frame (or as use requires) removing road grime, tar, oil, mud or salt.

Refer to your Chassis Guide for the chassis manufacturer's maintenance instructions.

FRONT AXLE TIRE ALIGNMENT

The term alignment refers to both the adjustment angles on the steering axle and suspension and tracking of the rear axle. Many factors are considered when establishing proper alignment. Steering components, suspension, wheel bearings and even proper loading will affect your motorhome alignment. Your motorhome chassis was aligned by the manufacturer, and weighed at our facility before shipment to your dealer. It is your responsibility to have the alignment inspected periodically to maintain vehicle steering performance and prevent uneven tire wear as part of your normal maintenance.



NOTE: Always have the alignment checked and adjusted by a qualified shop with the proper equipment to handle heavy vehicles.



NOTE: A road test by the dealer should be included as part of the pre-delivery inspection. The dealer can check for and correct any steering problems before you take delivery of the motorhome.

MUD FLAP (IF SO EQUIPPED)

If your motorhome is equipped with rear wheel mud flaps and/or a deluxe full-width mud flap, periodically check and remove dirt or debris buildup from the mud flaps.



CAUTION

The mud flap(s) should never be tilted towards the exhaust pipe when the motorhome is not in motion or when the motorhome is moving in reverse. Caution should be used when parking the motorhome to assure the mud flap does not become caught or hung up on stationary items on the ground. This could result in damage to the mud flap(s).

ENGINE AND GENERATOR COMPARTMENT ACCESS

 WARNING

- Do not operate the motorhome unless the engine hood, engine access cover, and generator compartment hood are securely closed and locked.
- Keep people and pets clear of the rear of the coach while operating the engine compartment door. Keep hands and other body parts clear of the door, hinges and mechanism. Failure to act in accordance to these warnings may result in serious personal injury.

Engine compartment

The exterior engine compartment access door is operated manually. Lift the door open by grasping the ventilation fins on the engine compartment and pulling toward you and while lifting up. The engine compartment door will swing up.

To close, pull down on the engine compartment door until it swings into place and closes.

Generator compartment hood and tray

To access the components located in the generator compartment refer to *Electrical Systems; Generator and Generator Slide Tray*.

HINGES, LOCKS AND LATCHES (INTERIOR AND EXTERIOR)

Lubricate with a high quality silicone lubricant every three months or sooner if necessary. Salty air or dusty environments will require more frequent maintenance.

EXTERIOR ROOF AND SIDEWALL VENTS

Inspect the roof vents (including sealants) for cracks and keep them clean. Inspect the refrigerator and holding tank vents for blockages from bird nests, spider webs, leaves, etc. All exterior access doors and vents need to be kept clean and free of obstructions (i.e., insect nests, mud daubers, etc.) while the appliances are in use.

WINDOWS

 WARNING

To avoid exhaust gas entry into the motorhome, keep windows closed when the chassis or generator engines are running.

Any ventilating window may permit water inside, especially during heavy rainstorms or while driving. This is normal and water should only be seen in the lower track portion of the window frame. Condensation will also cause water to accumulate on windows and in the tracks. Ensure that the escape window latches are properly adjusted (the window will pop open if not adjusted tight enough).

Window glass

The window glass can normally be cleaned with a sponge and water. Use glass cleaner to remove wax, oil, grease, dead insects, etc. After washing the glass, wipe it dry with a clean, soft cloth.

SECTION 13: EXTERIOR

SEALANTS

Sealants perform a very important function and should be inspected closely and regularly maintained. We incorporate many different types of sealants, including butyl/putty, black Butyl-encapsulated foam, silicone (clear and colored), roof sealant and foam. In general, sealants do not have “set” lifetimes.

You or your dealer must:

- Inspect all sealants, a minimum of every six months. A quick walk around the motorhome before leaving may help prevent potential problems during trips and vacations.
- Have the sealant replaced if you notice any cracks, voids, gaps, breaks, looseness or any sign of physical deterioration.
- Always use the same type of sealant that was removed. Your dealer service or parts manager can help you obtain the correct sealant(s).

The sealants may become damaged due to ultraviolet exposure, air pollution, freezing temperatures and exposure to other elements. If deteriorated, repair immediately to prevent damage. Cap seal all trim and openings at least once after the first year and thereafter as cracks, peeling, lifting and shrinkage occur. Conditions such as rain, salt, dust and pollution may increase your vehicle maintenance needs.



CAUTION

To check the exterior sidewall sealants, use a stepladder placed safely alongside the vehicle. Do not prop a ladder against the body of the motorhome as it may damage the exterior finish

TRAVEL CHECKLIST

Following is a preliminary list of items that need to be checked before leaving your home or campsite. This is a general list, which you may want to customize as you determine your own needs. Refer to your Chassis Guide for information on chassis pre-trip inspections and maintenance.

Safety

- Make sure you follow all safety precautions noted in this owner's manual and in any manufacturer's operators manual when preparing to travel.

Before leaving home (or campsite):

- Make sure all fluids are at proper levels (engine oil, transmission fluid, engine coolant, power steering fluid and windshield washer fluid).
- Check the fuel gauge and lights on the motorhome. **Have someone observe the operation of all exterior lights while you activate the controls. Check the turn signal and high beam indicators on the instrument panel.**
- Examine the tires for excessive tread wear or uneven wear patterns. Check for stones, nails, glass or other objects lodged in the tread. Inspect for tread cuts or sidewall cracks.
- Check tire pressure and correct according to manufacturer specifications.**
- Check wheel nuts for tightness.**
- Inspect and work all interior and exterior latches and locks (lube if necessary).
- Make sure the batteries are fully charged and installed correctly.
- Turn ON the motorhome 12-volt battery disconnect switch.
- Inspect the power cord and carefully clean the contacts if necessary. Plug in the power cord to an appropriate power source.
- Turn on the interior lights and check outlets for polarity. If needed, replace any blown fuses. Check the circuit breakers and test the GFCI circuits.
- Inspect and turn on the propane gas system** (if so equipped). If you have any questions, contact your independent dealer or a qualified propane gas service representative for assistance. If the propane system is functioning properly, test any pilot lights or direct spark ignition features.
- Inspect and test all safety detectors.** If needed, replace any drained or discharged batteries. If you have a defective or damaged safety detector, replace it immediately.
- Inspect the leveling jacks for operation. If needed, perform maintenance as per the manufacturer's information.
- Test all exterior and interior lights. Replace any bulbs that are burnt out.
- Prepare the chassis portion of the motorhome for the camping season in accordance with the Chassis Guide.**
- Wash the exterior of the motorhome. Do a sealant inspection and repair as necessary.
- De-winterize and **sanitize system.**
- If you are towing a vehicle, connect it to the motorhome and test all connections and lights. Test brakes for proper operation.**
- Fill the fresh water tank. Disconnect, drain and store the garden hose on the bracket.*
- Check the seat belt buckles and release mechanisms for positive action and secure connections.

SECTION 14: TRAVEL/CAMPING/STORAGE CHECKLISTS

Before leaving the campsite:

- Check the area* under the motorhome after overnight parking and look for fuel, water, oil or other fluid leaks. If leaks are detected, find the cause and correct it immediately.
- Turn off propane *tanks (if so equipped)*.
- Empty black and gray holding tank, rinse as needed.
- Retract any awnings and secure them for transport.
- Close all the roof vents.
- Close windows & latch blinds.
- Disconnect the cable TV and phone hookups and lower the TV antenna.
- Turn off the interior lights, water heater, furnace and water pump.
- Secure any loose, heavy or sharp objects in the motorhome or exterior compartments.
- Disconnect the power cord and ensure it is stored correctly.
- Disconnect any water connections.
- Water pump and water heater (if applicable) turned off.
- Fasten all interior and exterior doors securely. Lock them (if applicable). Latch drawers, cabinets & doors.
- Move slideout(s) in and lock it in place (if applicable).
- Walk around your motorhome one last time to make sure everything is stored away and the baggage compartments are closed and locked.
- Refrigerator door locked.
- Furnace turned off.
- Make sure the leveling jacks are retracted to the travel position.
- Retract step.
- Secure and lock the entrance door.

MOTORHOME STORAGE

Properly preparing your motorhome for storage during periods of non-usage will prevent problems from arising. It will also make it easier to get started again for the following camping trip or season. To prevent costly freeze-ups, winterize the plumbing system when it will not be in use for an extended period of time, especially if it is stored in colder climates.

Prior to storage:

- Prepare the chassis for storage in accordance to the Chassis Guide. Remember to use fuel additives and supplements if recommended.
- Wash and wax the exterior of the vehicle. Do a sealant inspection and repair as necessary.
- Inspect and clean tires. Check for wear, cracks and inflation pressure.
- Inspect and seal off any area that offers an entry point for rodents, birds or insects. Cover all external outlets (i.e. furnace, vents etc.). Damage from birds, rodents, insect, etc., is not covered under the “Motorized Transferable Limited Warranty” applicable to your motorhome.
- Close all windows, roof vents and range hood vent.
- Turn the furnace thermostat(s) to the OFF position.
- If your motorhome is equipped with a gas/electric DSI range, light a range gas burner to consume any gas remaining in the lines. Once the flame extinguishes itself, turn the burner valve OFF.
- Drain all water lines. Make sure the motorhome is winterized.
- Winterize the toilet and appliances (dishwasher, refrigerator, clothes washer).

SECTION 14: TRAVEL/CAMPING/STORAGE CHECKLISTS

- Drain and flush all holding tanks (fresh water, gray water, black water and/or hot water tanks).
- Adding fuel stabilizer to the generator will aid in preventing condensation and fuel varnishing.
- Turn OFF the motorhome 12-volt battery disconnect switch.
- Turn OFF the inverter mode at remote.
- Disconnect the batteries to prevent battery discharge.
- Remove all perishables from the refrigerator/freezer. Defrost, wash and dry the interior of the refrigerator/freezer and prop (or block) the doors open so air can circulate and prevent mildew.
- Remove all perishables from the cabinets. Leave the cabinets and doors ajar to allow air circulation and prevent mildew and musty odors.
- Lubricate locks and hinges on exterior doors.

While the motorhome is being stored

If the vehicle is stored outside in areas of heavy snow, you should periodically brush the snow off to prevent excessive accumulation and prevent possible roof damage.

QUICK START GUIDE

Camp Setup / Tear Down

When setting up camp, please follow these steps:

- Before plugging into shore power, turn off the breaker at the campsite post.
- Extend the slide out rooms (always check for proper clearance first).
- Make sure tires are straight. Extend jacks after slide out rooms are extended.

When packing and leaving camp, please follow these steps:

- Start engine to build air pressure. (Use high idle-cruise on and hold resume).
- Retract jacks to inflate air bags. Check for tire clearance.
- Retract slide outs after unit has reached standard ride height.
- Lock all appliance doors.
- Turn off breaker at campsite post before unplugging unit.

While traveling, please keep these in mind:

- Make sure the main power switch is turned on.
- If traveling with food, turn the inverter on to use the refrigerator. Remember to turn the inverter off before storing unit or when not in use.
- You should only have to use the generator if you want to use roof A/C units.
- The engine alternator will maintain the house batteries during travel.

Entegra Coach Emergency Contact Information

Monday – Friday: (800) 517-9137 (8 AM – 5 PM)

After Hours Emergency: (574) 361-0034

Comfort Control Settings

Zone Classification

- Zone 1
 - Front A/C on “cool”
 - Front heat pump on heat “electric”
 - Heat exchangers – at dash, kitchen base, and hutch/entertainment center base on heat “gas”

SECTION 14: TRAVEL/CAMPING/STORAGE CHECKLISTS

- Zone 2
 - Middle A/C on “cool”
 - Middle heat pump on heat “electric”
 - In-floor heat, on heat “gas”
- Zone 3
 - Rear A/C on “cool”
 - Rear heat pump on heat “electric”
 - Heat exchangers – at rear wall and under lavatory sink on heat “gas”
- Basement – one heat exchanger on rear basement wall, thermostat located on top passenger side of rear basement wall

Entertainment Center Set-Up

Entegra satellite wiring is set up for two options:

1. Install receiver at main TV utilizing the HDMI output on the wall plate. This signal will then be distributed to all four TVs on HDMI 2. You may also place a second receiver in the bedroom connected directly to that TV.
2. Install receiver at main TV and utilize coax output to the selector box. This will also provide satellite to all TVs through the selector box.

All TVs will have off-air antenna and park-cable capabilities.

FEATURED COMPONENTS QUICK REFERENCE CHART

Your recreation vehicle may be equipped with some of the items listed below. This is a partial listing and it is not intended to cover all components. All information is the latest available at the time of publication. Jayco reserves the right to change any of the following information without notice.

Component	Manufacturer	Website
Air Conditioner	Coleman-Mach	www.airxcel.com/coleman-mach
Antenna, TV	Winegard	www.winegard.com
Awning	Lippert Components Carefree of Colorado Dometic	www.lci1.com www.carefreeofcolorado.com www.dometic.com
Camera, Back up/side view	ASA Electronics Rear View Safety	www.asaelectronics.com www.rearviewsafety.com
Electronic components/systems	See manufacturers' user guide	
Entrance Step	Lippert Components	www.lci1.com
Fan, Exhaust 12V	Atwood Maxx Fan	www.atwoodmobile.com www.airxcel.com/maxxair/products/fans
Fireplace	Twinstar Furrion	www.twinstarhome.com www.furrion.com
Furnace	Atwood	www.atwoodmobile.com
Generator	Onan	www.power.cummins.com/rv
Inverter	Magnum Energy	www.magnumenergy.com
Leveling Jack System	Equalizer Systems Lippert Components	www.equalizersystems.com www.lci1.com
Microwave	See manufacturers' user guide	
Outside Shower / Utility Center	B & B Molders	www.bandbmolders.com
Propane Tank	Manchester Tank	www.mantank.com
Propane/Carbon Monoxide Alarm	See manufacturers' user guide	
Propane Regulator	Manchester Tank	www.mantank.com
Range/stove/cooktop	Atwood Suburban	www.atwoodmobile.com www.airxcel.com/suburban/products/cooking
Range hood	Ventline Inc.	www.ventline.com
Refrigerator	Norcold	www.norcold.com
Safety Alarms	See manufacturers' user guide	
Satellite System	Winegard	www.winegard.com
Tank Sprayer/BLK	B & B Molders	www.bandbmolders.com

SECTION 15: ADDITIONAL INFORMATION

Thermostat	Coleman-Mach	www.airxcel.com/coleman-mach
Toilet	Thetford Corp.	www.thetford.com
Water Heater, Tank DSI Water Heater, Tankless	Atwood Greenbrier Girard Systems	www.atwoodmobile.com www.greenrvproducts.com
Water Pump, 12V	Shurflo East	www.shurflo.com

SECTION 15: ADDITIONAL INFORMATION

Notes:

SECTION 15: ADDITIONAL INFORMATION

Jayco
Ownership Notification
Fax Form To: (800) 825-7876

ATTENTION!

Federal record keeping laws require that we maintain a file of owners of our product. Your cooperation in filling out this form will be appreciated.

Change of Owner

Transfer of Limited Warranty
(see limited warranty for details)

Model Information:

Serial#: _____

Chassis #: _____ Odometer Reading _____
(Motorized only)

New Owner Information:

Purchased Date: _____

Name: _____

Address: _____

City: _____ State/Province: _____ Zip Code _____

Phone # _____ E-Mail Address _____

Previous Owner Information:

Purchased Date: _____

Name: _____

Address: _____

City: _____ State/Province: _____ Zip Code _____

Phone # _____ E-Mail Address _____